
## ASSEMBLY INSTRUCTIONS


## Style #C1287 Console Table

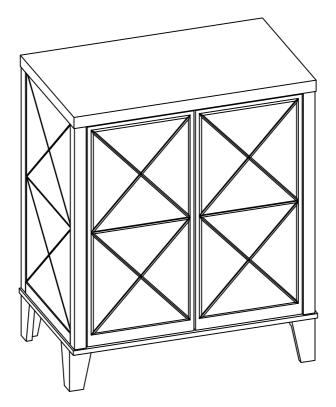



## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## To insert a cam lock: (Please read below instructions before assembling)

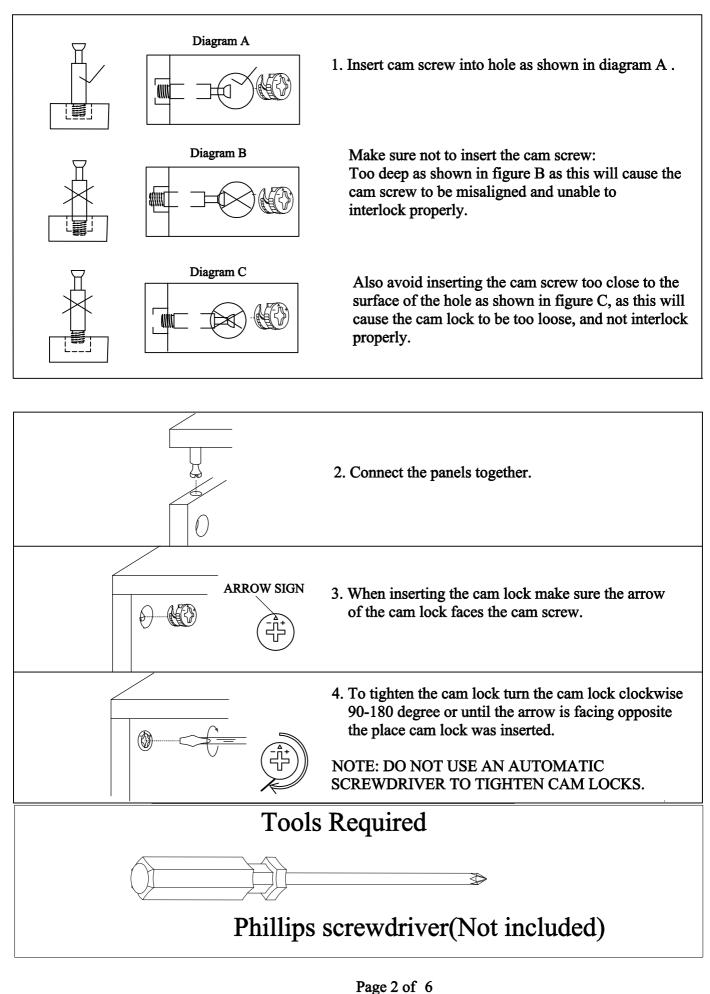


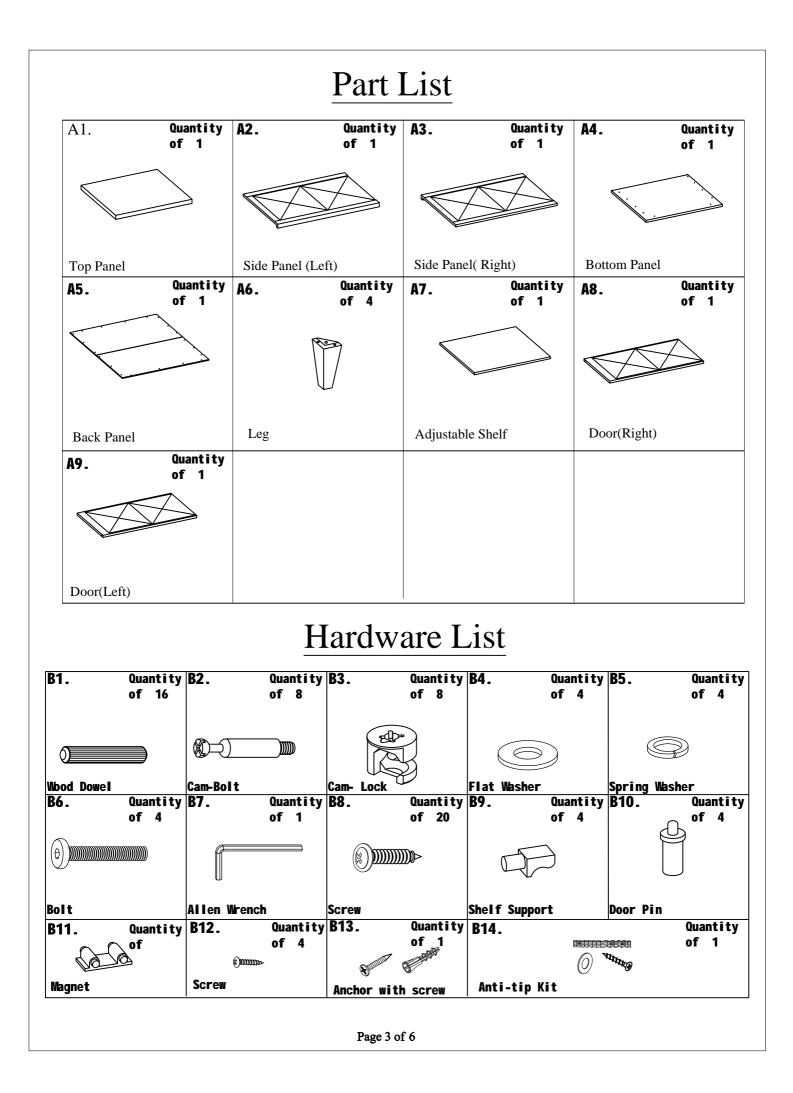

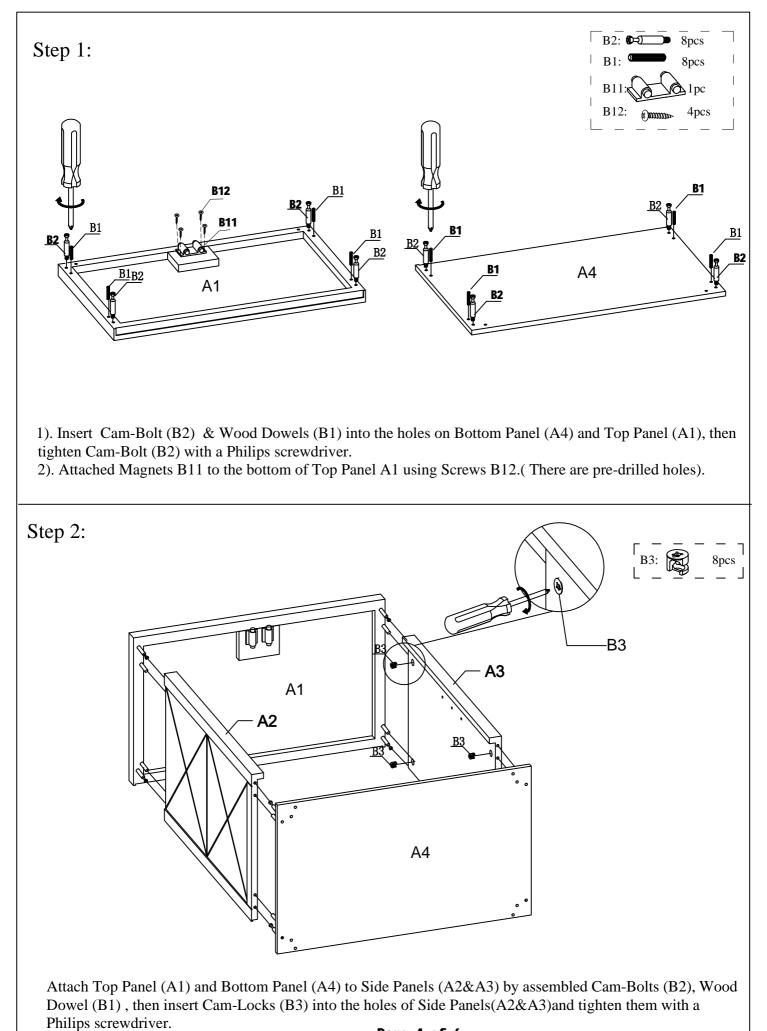


Page 4 of 6

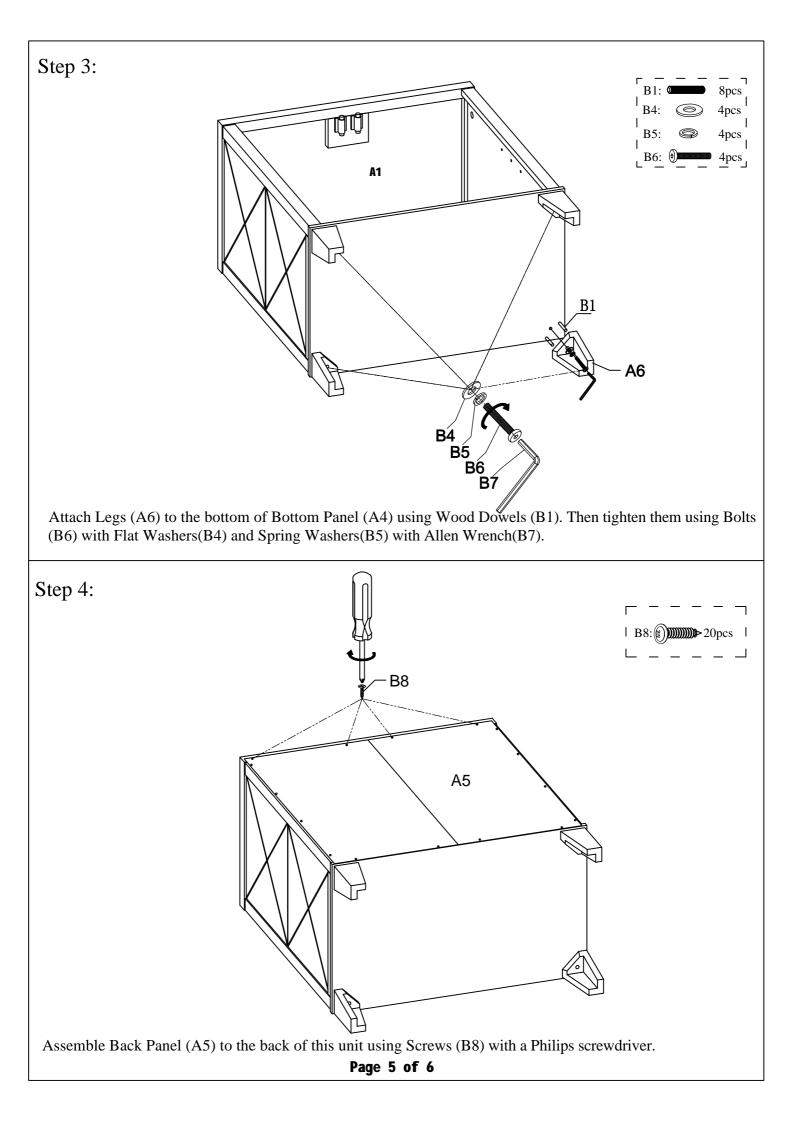

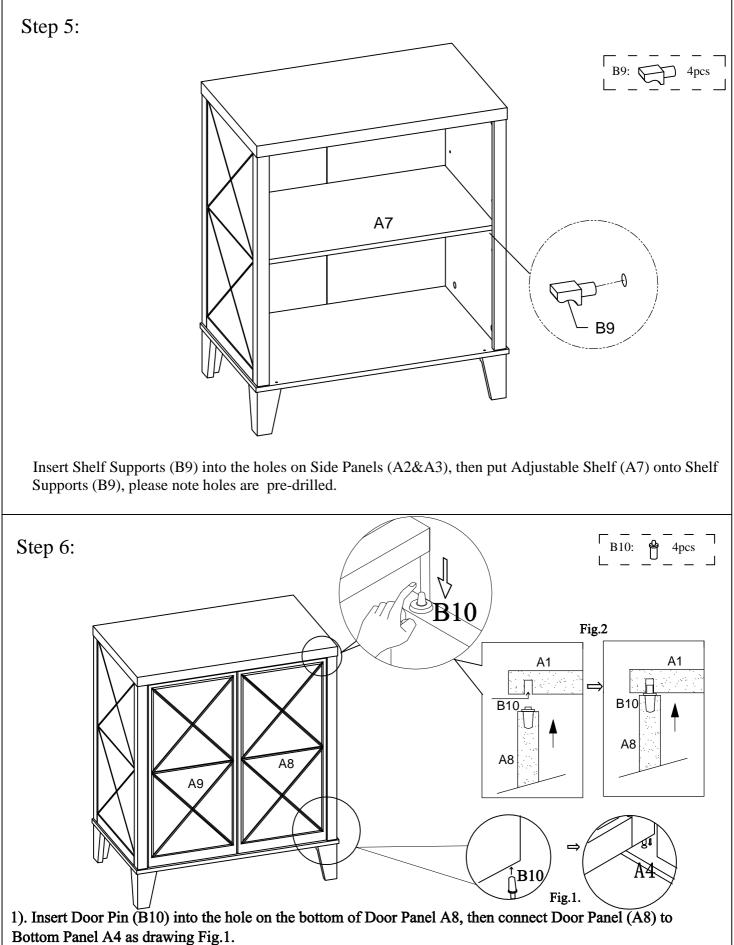

2). Insert Door Pin B10 into the hole on the top of Door Panel (A8), then press down Door Pin B10 ( see Fig.2.) and hold the door panel carefully into the cabinet with the door pin poping up into the hole of Top Panel (A1).

3). Repeat the above steps to assemble the other door panel (A9).

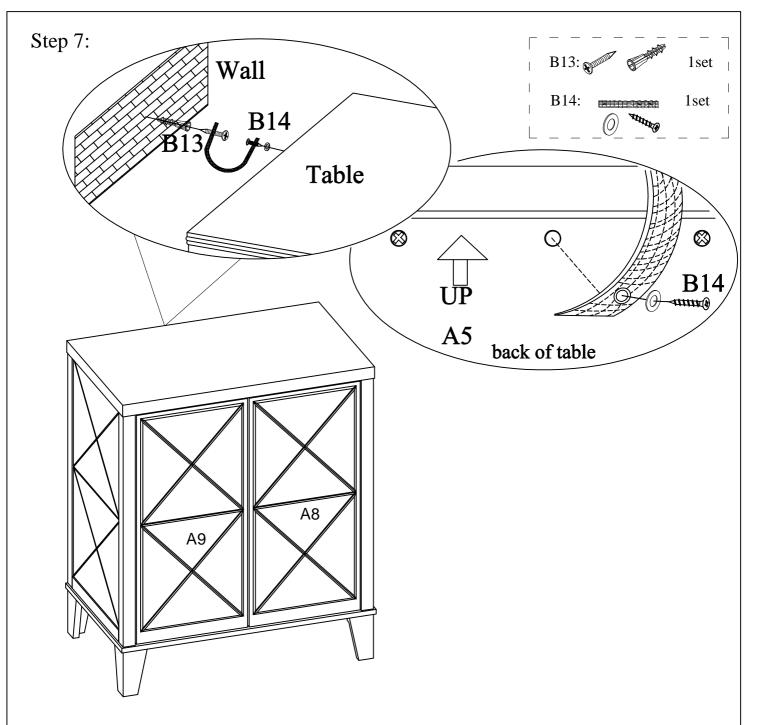

For your safey, please attach this unit to the wall by Anti-tip Kit B14 and Anchor with screw B13.

