ASSEMBLY INSTRUCTIONS MODEL #D45 4 PC PUB SET





NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

TABLE SET PARTS IDENTIFICATION				
A-	Table Top		1 pc	
В-	Table Leg (L)		2 pcs	
C -	Table Leg (R)		2 pcs	
D -	Stretcher (Long)		1pc	
E -	Stretcher (Short)		2pcs	
2 STOOL PARTS IDENTIFICATION				
F-	Stool Top	FARTS IDENTIFICATION	2 pcs	
G-	Stool Leg		4 pcs	
Н -	Stretcher (Short)		2 pcs	
BENCH PARTS IDENTIFICATION				
I-	Bench Top		1 pc	
G-	Stool Leg		2 pcs	
J -	Stretcher (Long)		2 pcs	

HARDWARE IDENTIFICATION

1- JCBC M6 x 60mm 8 pcs

2- Spring Washer M8 32 pcs

5- JCBC/W (Short) M7 x 50mm 12 pcs

6- Wood Screw M4 x 38mm 6 pcs

7- Allen Key M4

NOTE: Quantities shown are for one table. WARNING: Do Not over Tighten the bolts and screw.

















