
ASSEMBLY INSTRUCTIONS

Style # C1165 Console

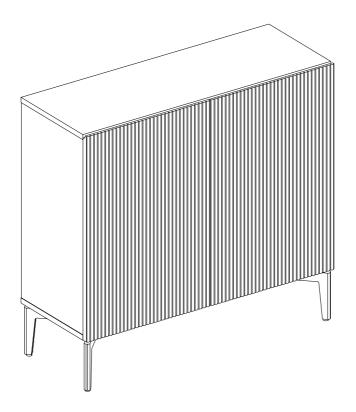

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- It is recommended that this item should be assembled by two adults.


Parts List

A Top panel B Side Panel C Side Panel D Back Panel	1pc 1pc 1pc 1pc	E Bottom F Shelf G Leg H Door i Door	Panel 1pc 1pc 4pcs 1pc 1pc
D	A		C
B	F		
	G	G	


Page 2 of 7

Hardware List


1	Quantity of 4	2	Quantity of 8	3	Quantity of 8	4	Quantity of 8	
Dia M5 x 40mm		Dia M6 x 15mm						
Screw		Bolt		Spring Washers		Flat Washers		
5	Quantity of 4	6	Quantity of 4	7	Quantity of 2	8	Quantity of 4	
						S HITTHAN		
	Cam-bolt	Cam-lock		Door Magnet		Screws		
9	Quantity of 10	10	Quantity of 10	11	Quantity of 4	12	Quantity of 24	
Back Panel Clip		Screws		Hinge		Screws		
13	Quantity of 4	14	Quantity of 1					
Shelf Clip		Anti-tipping Hardware						

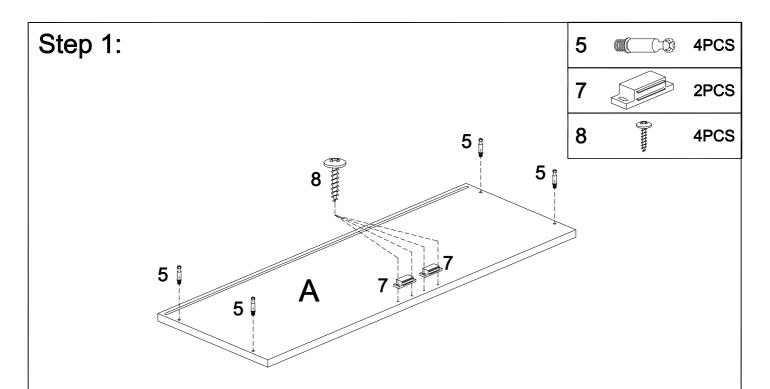


Assemble Magnets(7) to Top Panel(A) using screws(8), then tighten Cam-bolts(5) to the top panel as shown above.

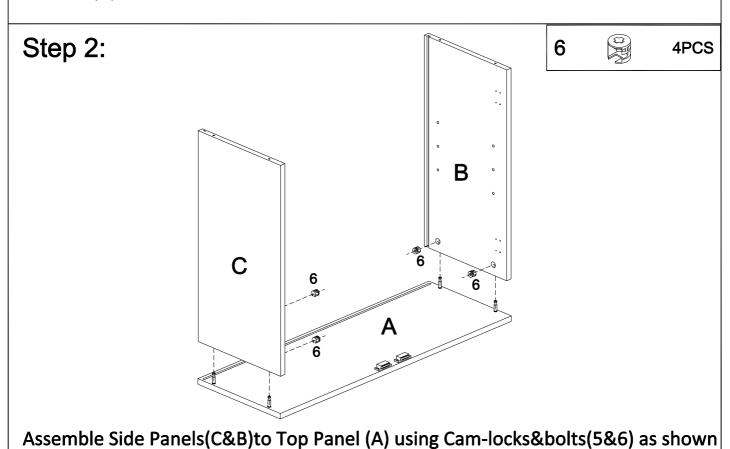


above.

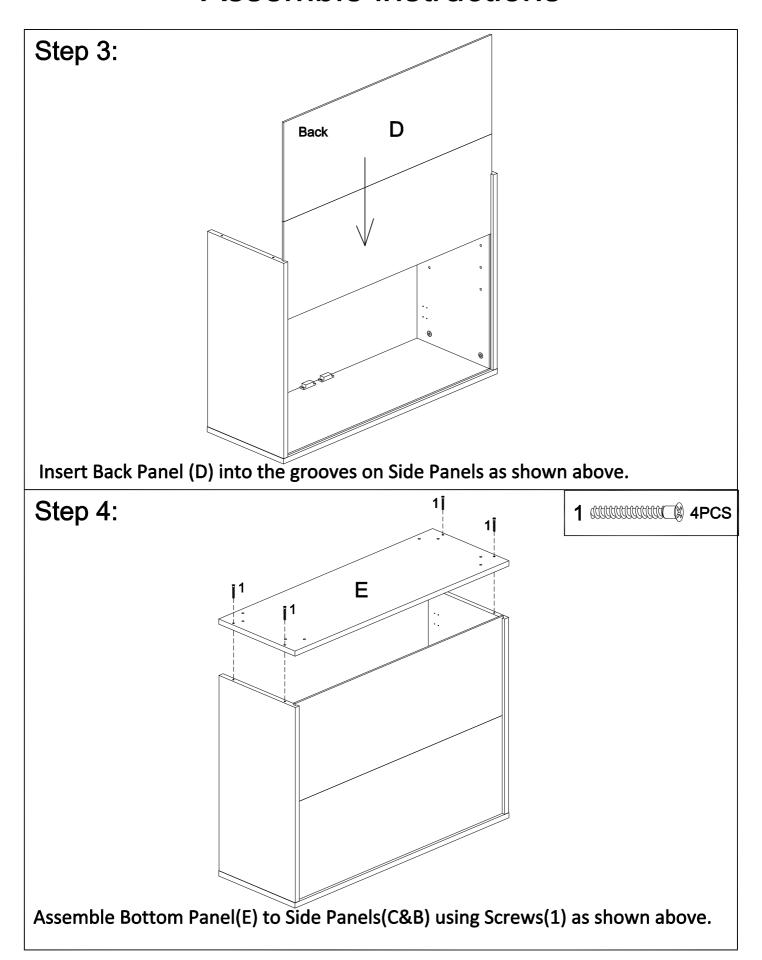

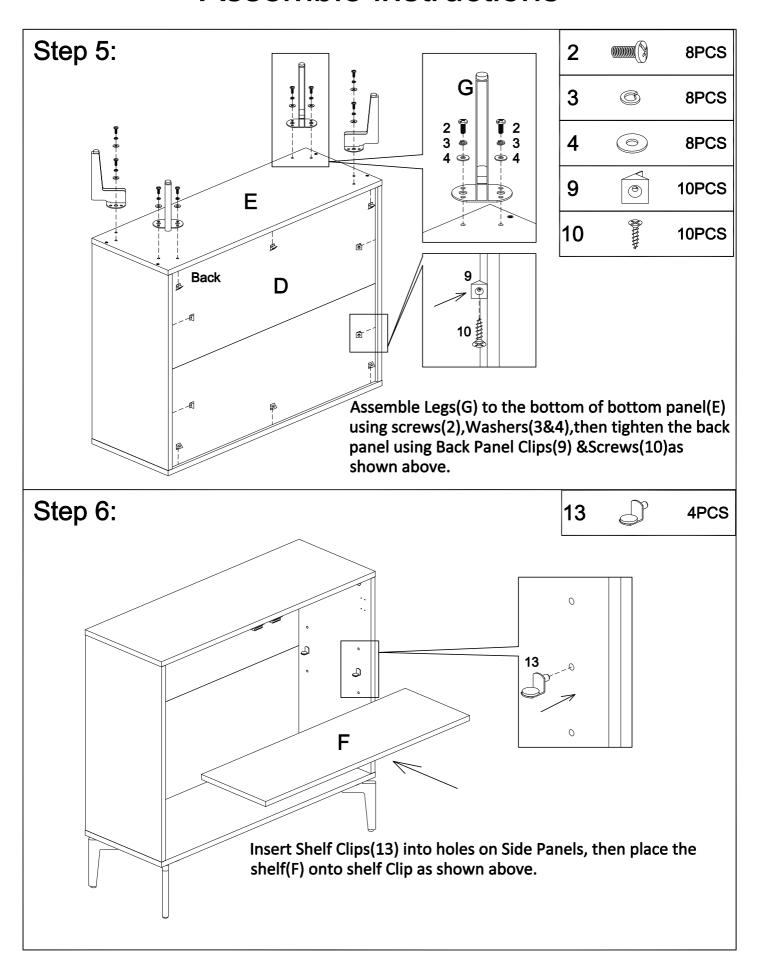

Page 5 of 7

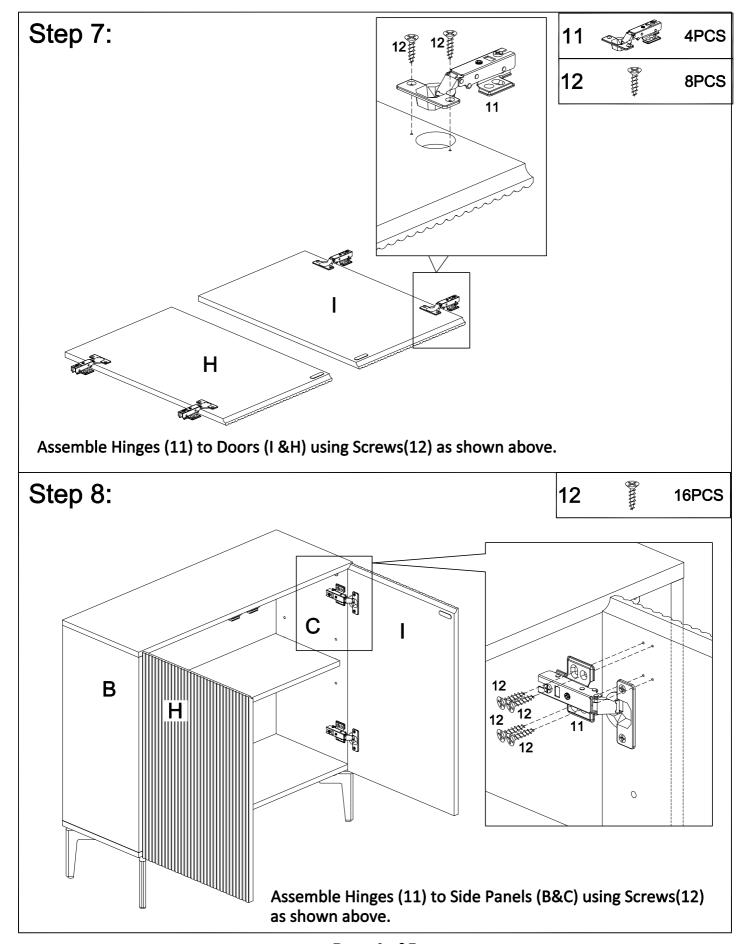

Page 6 of 7

