

ASSEMBLY INSTRUCTIONS MODEL #BK 1214: BOOKCASE

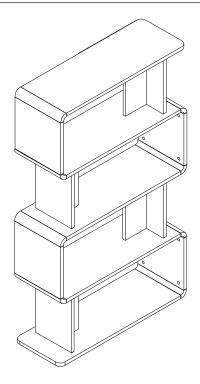


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

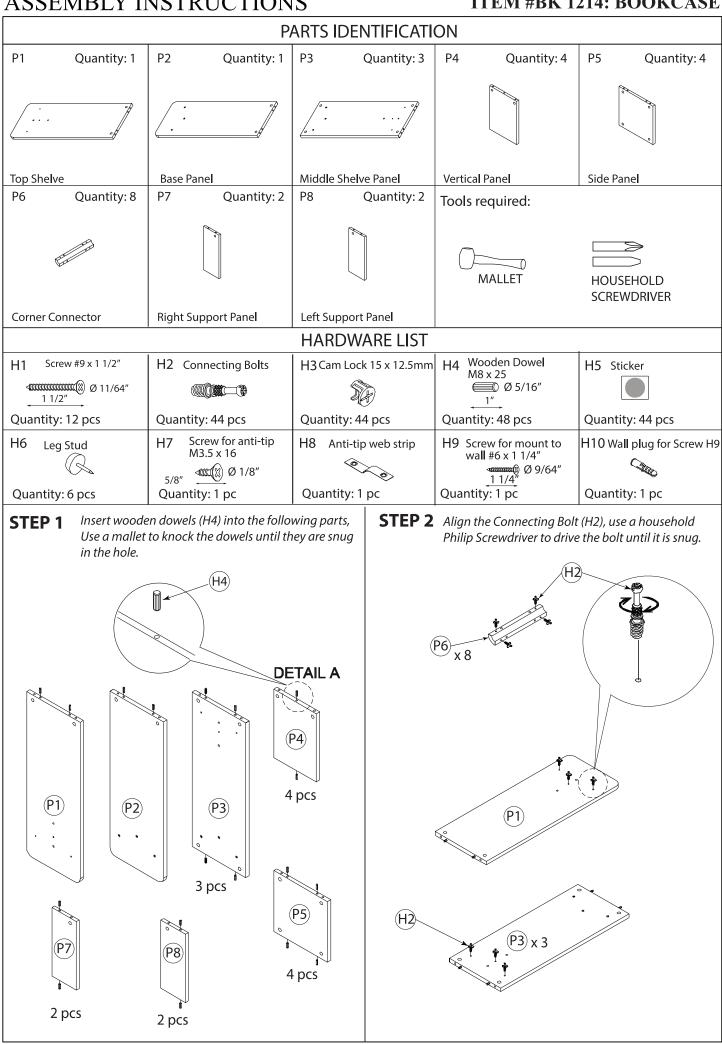


STEP 3 Attach the Corner Connector (P6) to both ends of the Panel (P5). <u>Repeat the assembly for another three similar parts.</u>

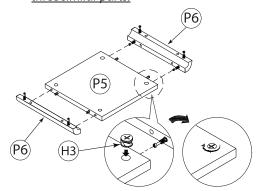


Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.

Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.


STEP 5

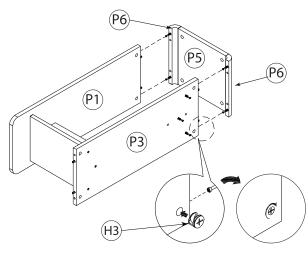


Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.

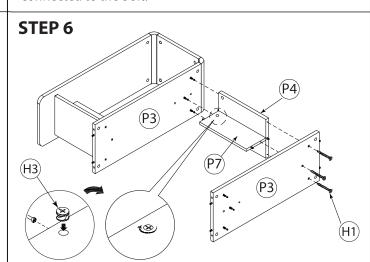

Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.

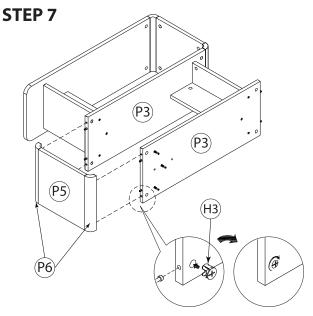

Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.

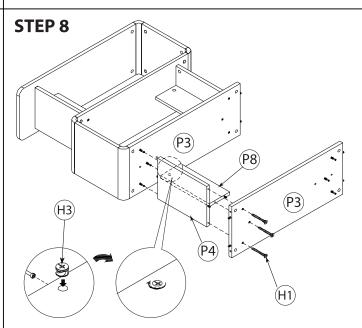

Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.

