
ASSEMBLY INSTRUCTIONS


Style # C1167 Console

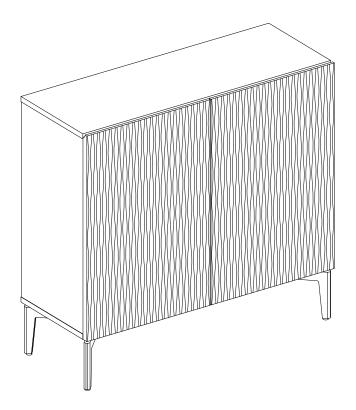

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- It is recommended that this item should be assembled by two adults.


Parts List

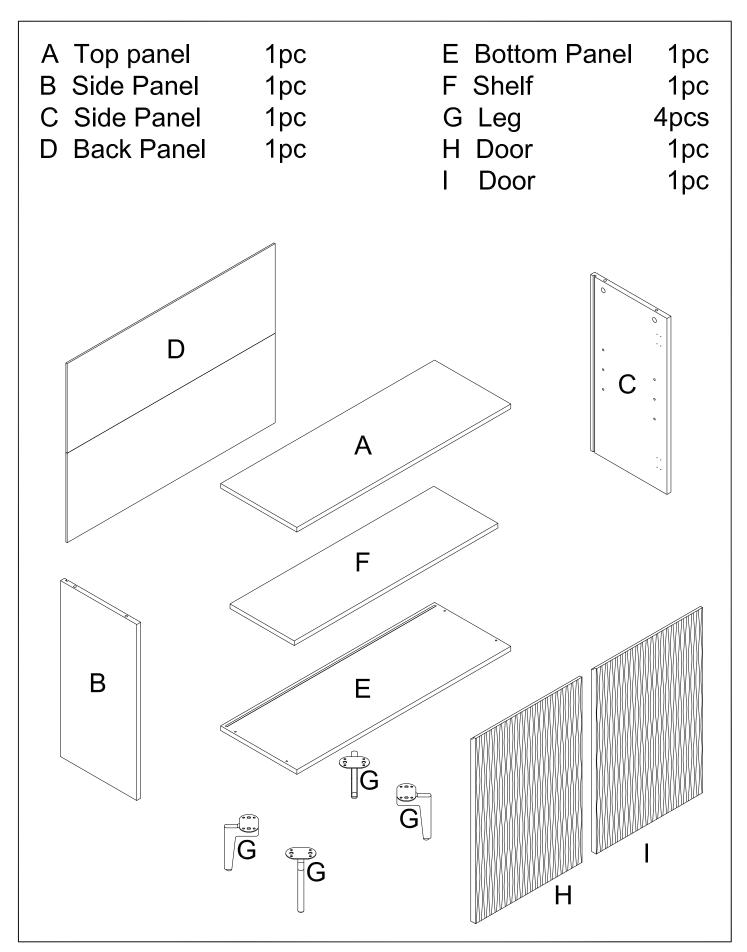


Page 2 of 8

Hardware List


1	Quantity of 4	2 Qual	ntity 3	Quantity of 8	4	Quantity of 8	
	Dia M5 x 40mm	Dia M6 x 15mm					
Screws		Bolt		Lock Washers		Flat Washers	
5	Quantity of 4	6 Qual of 4	ntity 7	Quantity of 2	8	Quantity of 4	
(***************************************	
Cam-bolt		Locking Wheel		Door Magnet		Screws	
9	Quantity of 10	10 Qual of 10	ntity 11	Quantity of 4	12	Quantity of 40	
		W HILLS					
	Back Panel Clip	Screws		Hinge		Screws	
13	Quantity of 4	14 Qua	ntity				
			O nnum				
Shelf Clip		Anti-tipping Hardward	е	Allen Wrench			

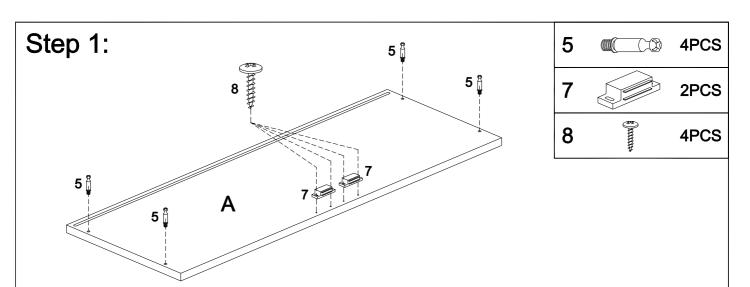


Assemble Magnets(7) to Top Panel(A) using screws(8), then tighten Cam-bolts(5) to the top panel as shown above.

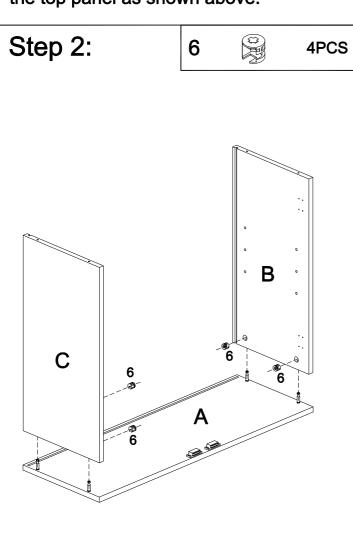


Assemble Side Panels(C&B)to Top Panel (A) using Cam-locks&bolts(5&6) as shown above.

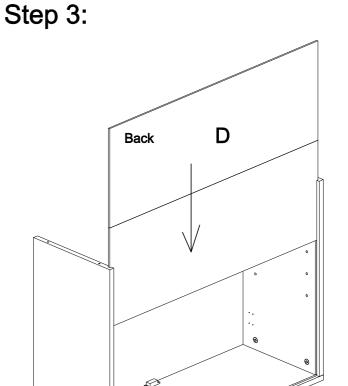


Insert Back Panel (D) into the grooves on Side Panels as shown above.

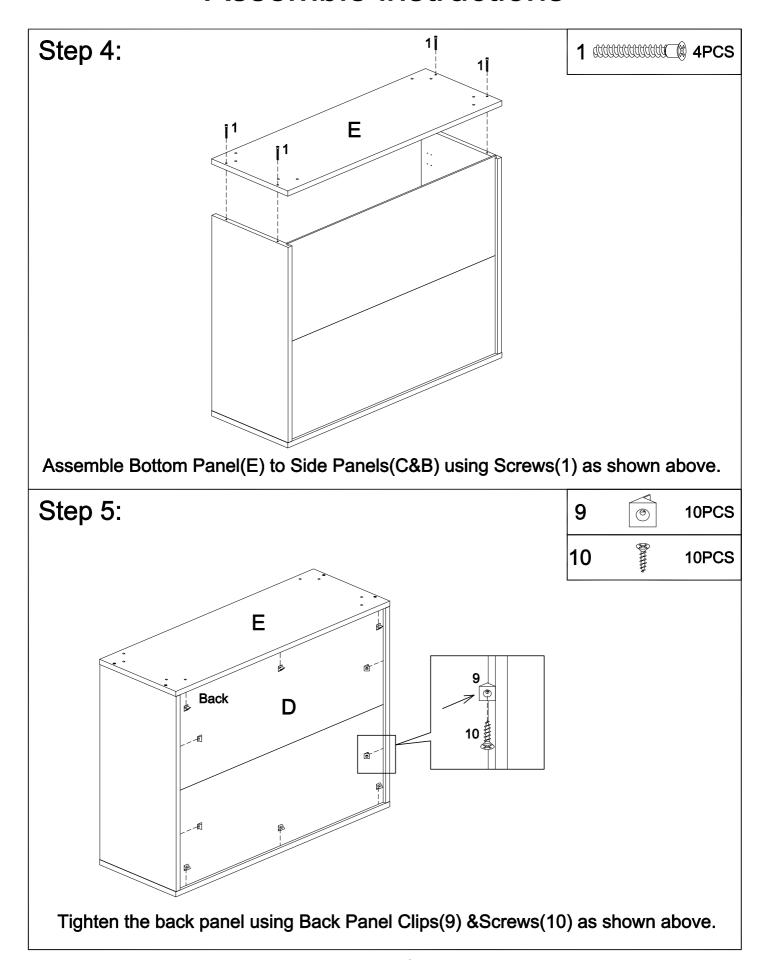

Page 5 of 8

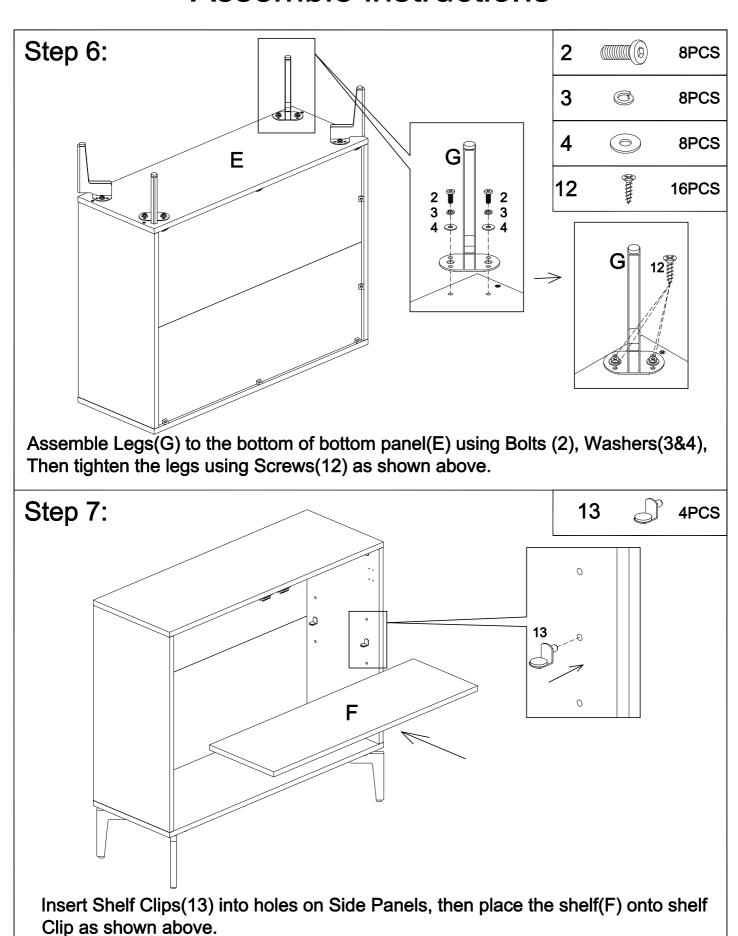

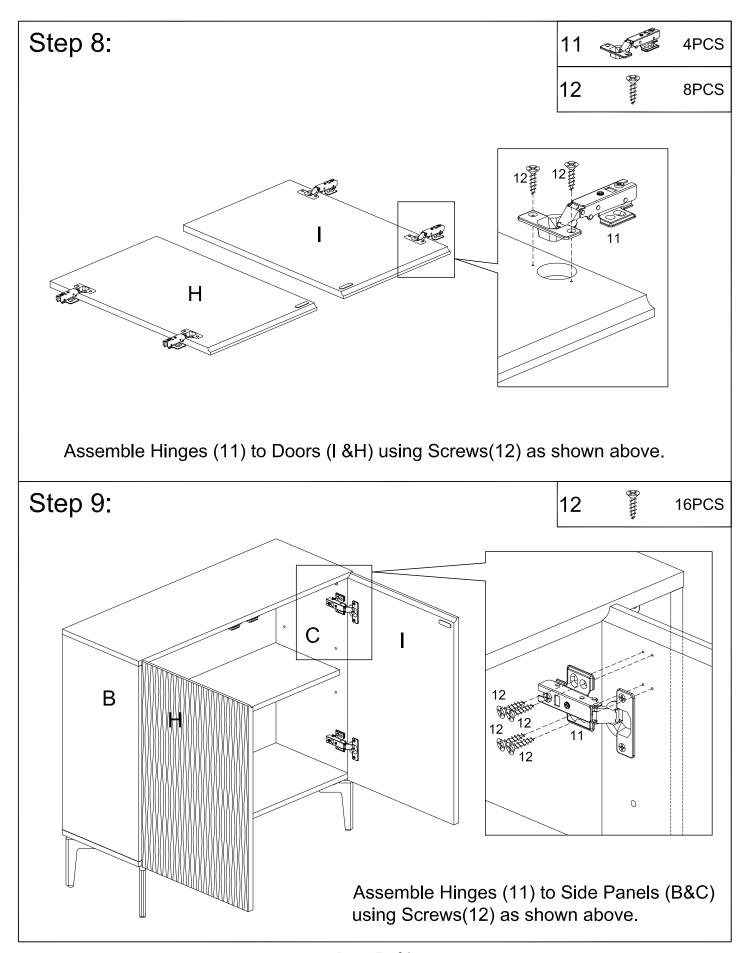

Page 7 of 8

