


ASSEMBLY INSTRUCTIONS



MODEL #BK 1560 STORAGE UNIT

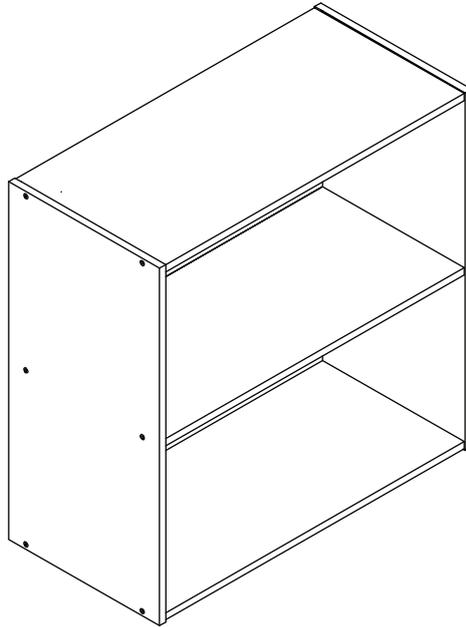

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


PARTS IDENTIFICATION
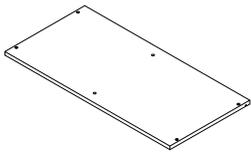
<p>P1 Quantity: 2</p>  <p>Side Panel</p>	<p>P2 Quantity: 2</p>  <p>Top/Bottom Panel</p>	<p>P3 Quantity: 1</p>  <p>Shelve Panel</p>	<p>P4 Quantity: 2</p>  <p>Back Panel</p>
--	---	---	---


HARDWARE LIST

<p>H1 Screw m3 x 20</p>  <p>Quantity: 4 pcs</p>	<p>H2 Corner Fitting</p>  <p>Quantity: 4 pcs</p>	<p>H3 Screw m9 x 1 1/2"</p>  <p>Quantity: 16 pcs</p>	<p>H4 Wooden Dowel m6 x 25</p>  <p>Quantity: 16 pcs</p>	<p>H5 Wooden Dowel m6 x 50</p>  <p>Quantity: 2 pcs</p>
<p>H6 Sticker</p>  <p>Quantity: 16 pcs</p>				

STEP 1 insert wooden dowels (H4) & (H5) into the following parts respectively.

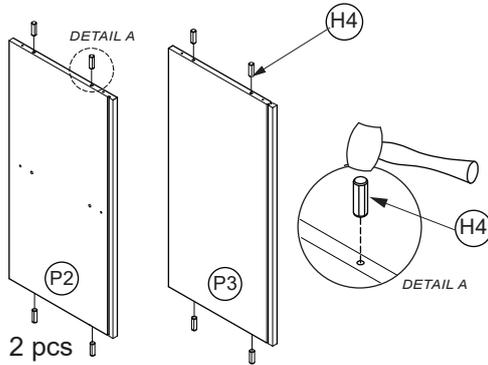

STEP 2

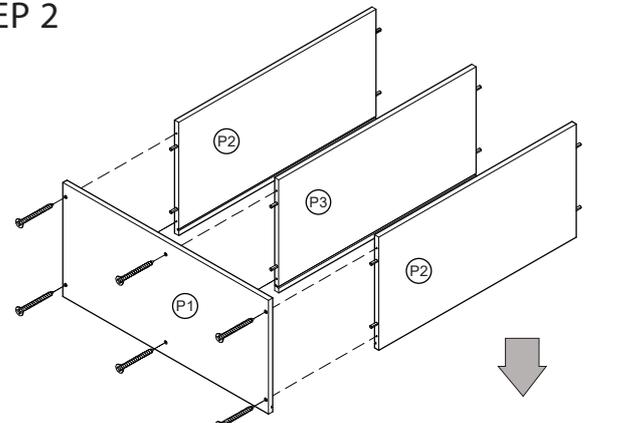

STEP 3

