


ASSEMBLY INSTRUCTIONS






MODEL #BK 1561 STORAGE UNIT

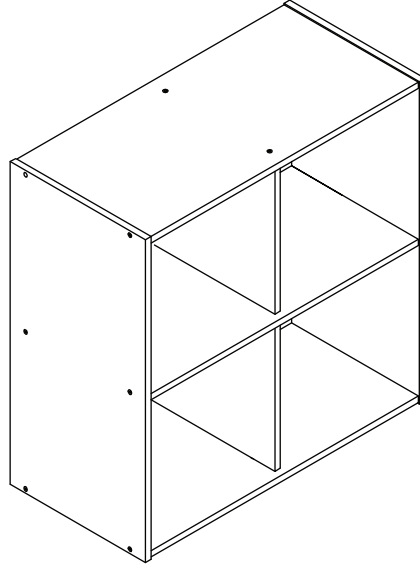







NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

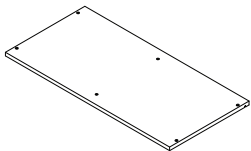
PARTS IDENTIFICATION

P1 Quantity: 2 	P2 Quantity: 2 	P3 Quantity: 1 	P4 Quantity: 2 	P5 Quantity: 2 
Top/Bottom Panel	Side Panel	Middle Panel	Back Panel	Shelve Panel


HARDWARE LIST

H1 Screw m3 x 20  3/4" Quantity: 4 pcs	H2 Corner Fitting  Quantity: 4 pcs	H3 Screw m9 x 1 1/2"  1 1/2" Ø 3/8" Quantity: 16 pcs	H4 Wooden Dowel m6 x 25  Quantity: 16 pcs	H5 Wooden Dowel m6 x 50  Quantity: 2 pcs
H6 Sticker  Quantity: 16 pcs				

STEP 1 *insert wooden dowels (H4) & (H5) into the following parts respectively.*

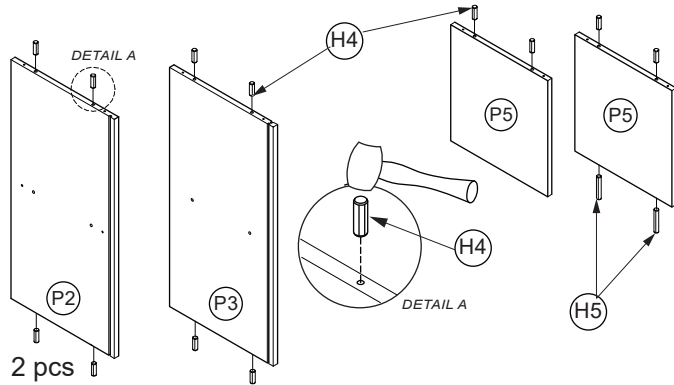

STEP 2

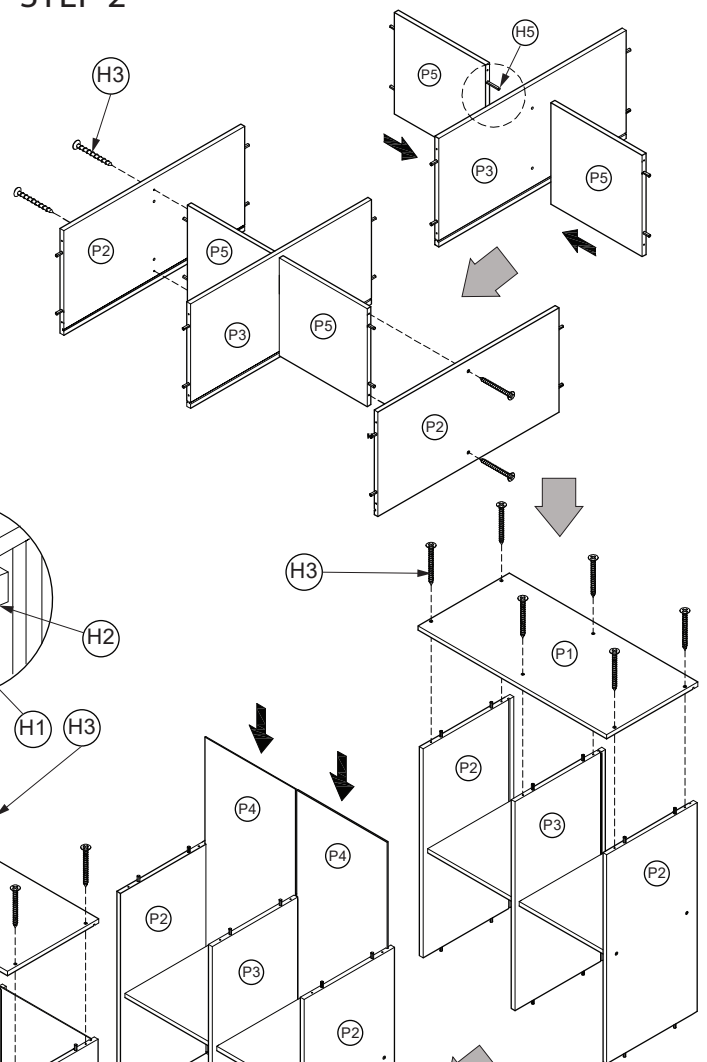

STEP 3

