


# Assembly instructions


## Style # BK19 Corner Bookcase

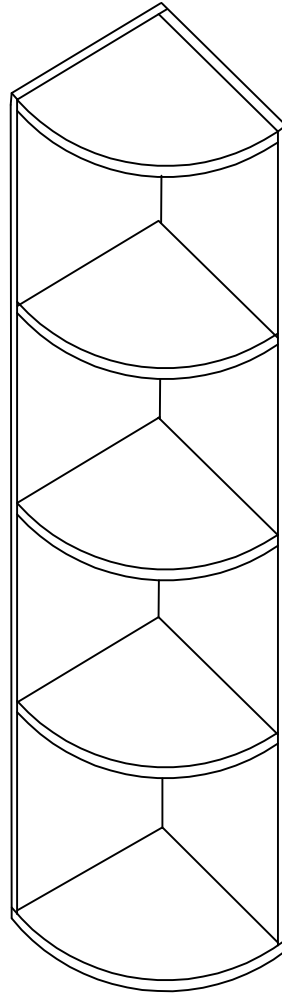


### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

# Part List

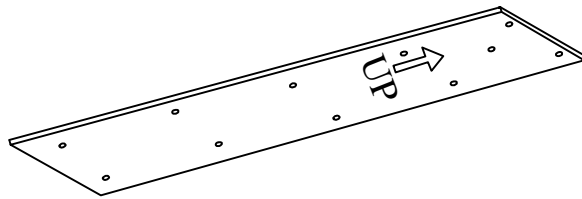

A1 Left side panel 1PC

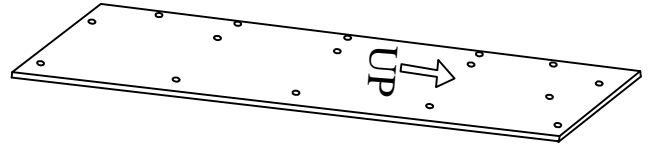

A2 Right side panel 1PC




A3 Top and Bottom panel 2PCS



A4 Middle Shelf 3PCS


# Hardware List




B1 Camlocks 12SETS



B2 Wood Dowel 13PCS



B3 Screw and Anchor 2SETS



Glue

## Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


## To use Dowels:

- Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
- Insert the Dowel(s) and join boards.
- Wipe excess glue with a damp paper towel.

## To use Cam Locks:


<p>1. Insert Cam Pin until snug</p> <p>Do not over-tighten</p>	<p>2. Set boards together</p>	<p>3. Insert Cam Lock</p> <p>Note arrow direction</p>	<p>4. Turn Cam Lock clockwise (half a turn)</p> <p>if it won't turn halfway, back out the Cam Pin <math>\frac{1}{4}</math> turn and try Cam Lock again.</p>
----------------------------------------------------------------	-------------------------------	-------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Step 1: Attach top and bottom panels (A3) , middle shelves (A4) to left side panel (A1) using camlock (B1) and wood dowel (B2).

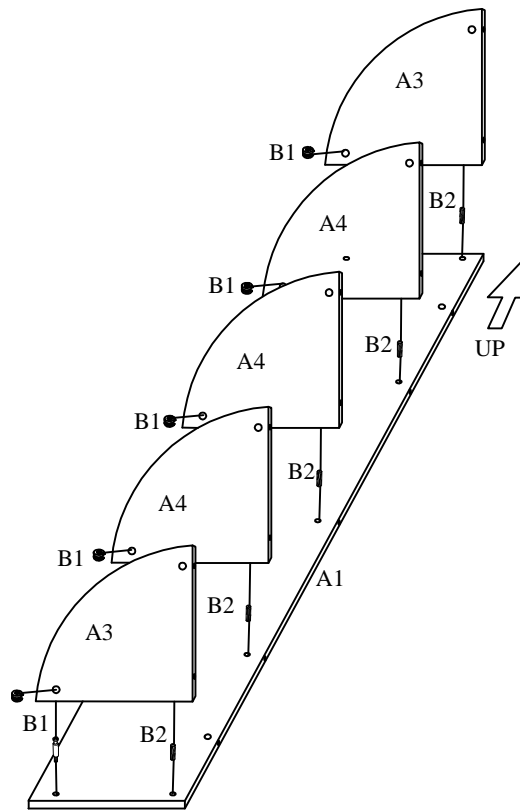

B1		5SETS
B2		5PCS

Step 2: Assemble right side panel (A2) to left side panel (A1), top and bottom panels (A3) , middle shelves (A4) using camlock (B1) and wood dowel (B2).

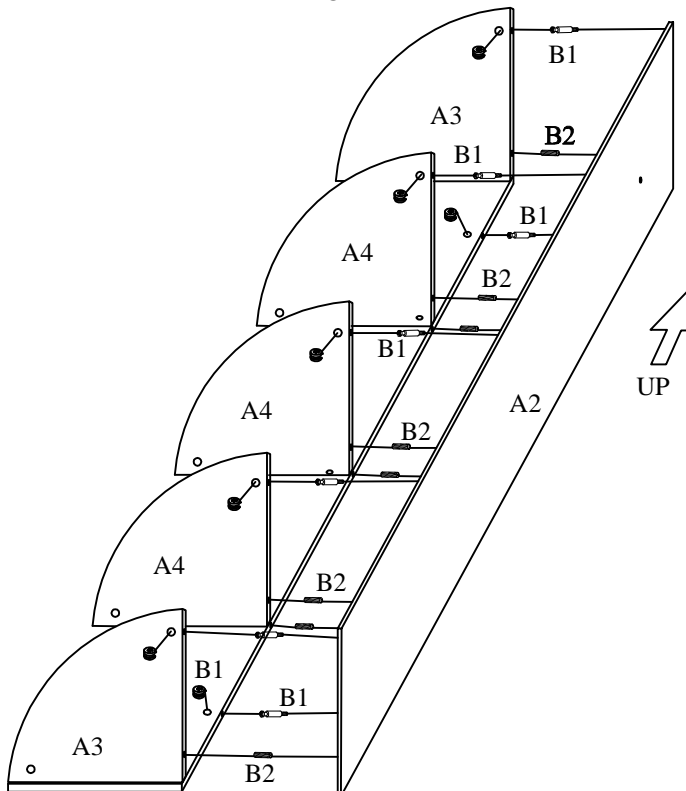

B1		7SETS
B2		8PCS

Step 3: For your safety , please attach the corner bookcase to the wall with screws and anchors (B3).

Note: Maximum load capacity of each middle shelf is: 15LBS

B3  2SETS

