


ASSEMBLY INSTRUCTIONS



Style # C1240 Console Table

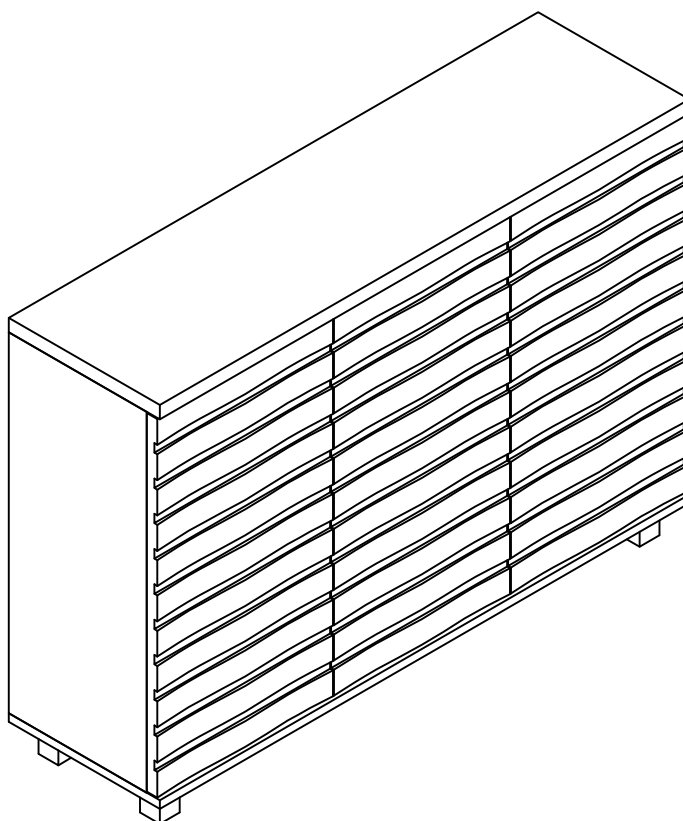

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To use a cam lock: (Please read below instructions before assembling)

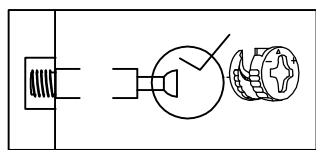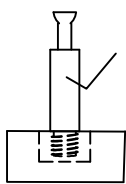

1. Insert cam screw into hole as shown in diagram A .

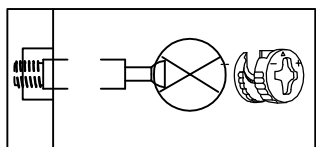
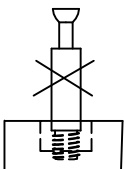


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.




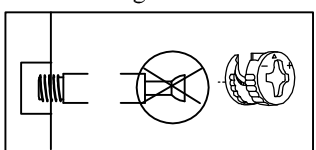


Diagram C

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

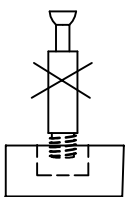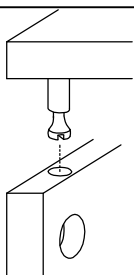


2. Connect the panels together.

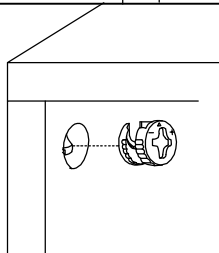

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.


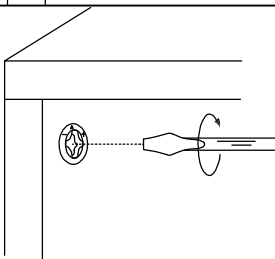


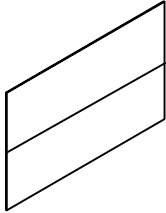








4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.









NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.

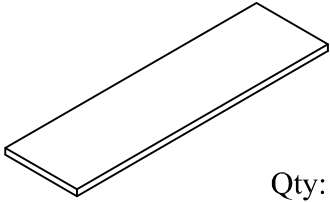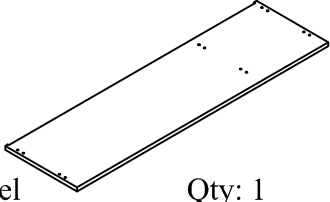Note:

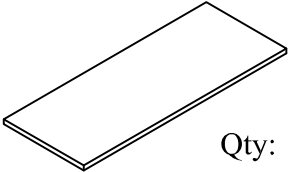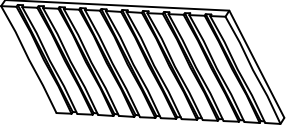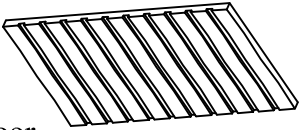

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


Part list :	
A1. Top Panel  Qty: 1	A2. Bottom Panel  Qty: 1
A3. Side Panel(L&R)  Qty: 2	A4. Divider  Qty: 1
A5. Back Panel  Qty: 1	A6. Leg  Qty: 4
A7. Center Leg  Qty: 1	A8. Large Shelf  Qty: 1
A9. Small Shelf  Qty: 1	A10. Left Door  Qty: 1
A11. Right Door  Qty: 2	

Hardware list :

 B1. Camlock Qty: 12	 B2. Wood Dowel Qty: 12	 B3. Screw Qty: 36	 B4. Hinge Qty: 6	 B5. Magnet with screw Qty: 1
 B6. Magnet with screw Qty: 1	 B7. Shelf Support Qty: 8	 B8. Screw Qty: 22		



Step 1

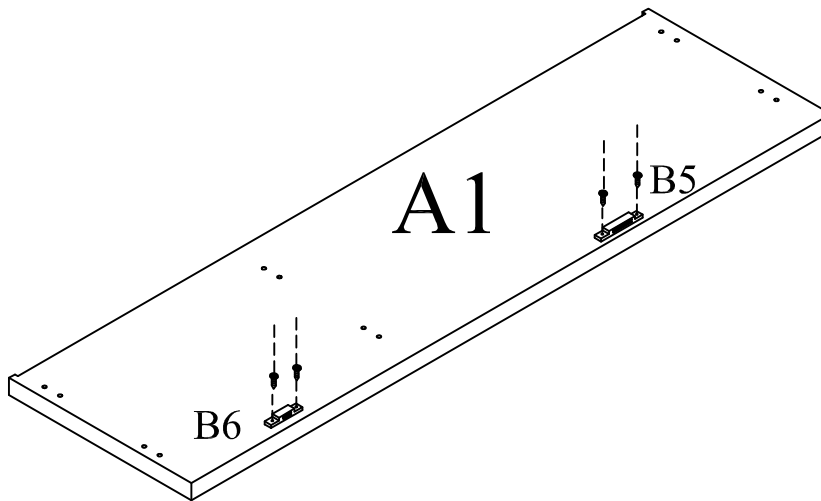
B5:		1SET
B6:		1SET



Attach Magnets B5 & B6 to the bottom of Top Panel A1 with included screws. Please note the holes are pre-drilled.

Step 2

B1:		12SETS
B2:		12PCS

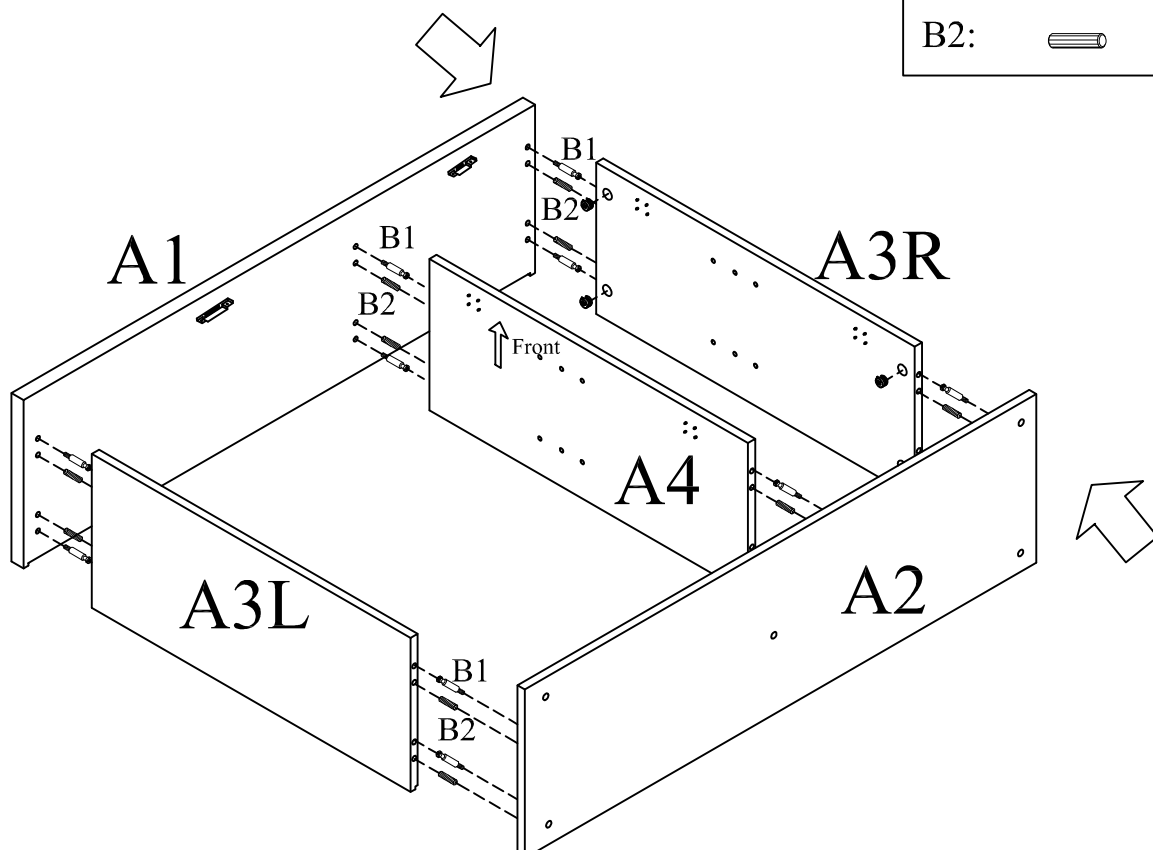


- 1). Assemble Top Panel A1 to Side Panels A3(L&R) and divider A4 using Camlocks B1 and Wood Dowels B2.
- 2). Assemble Bottom Panel A2 to Side Panels A3(L&R) and divider A4 using Camlocks B1 and Wood Dowels B2.

Step 3

B8:




22PCS

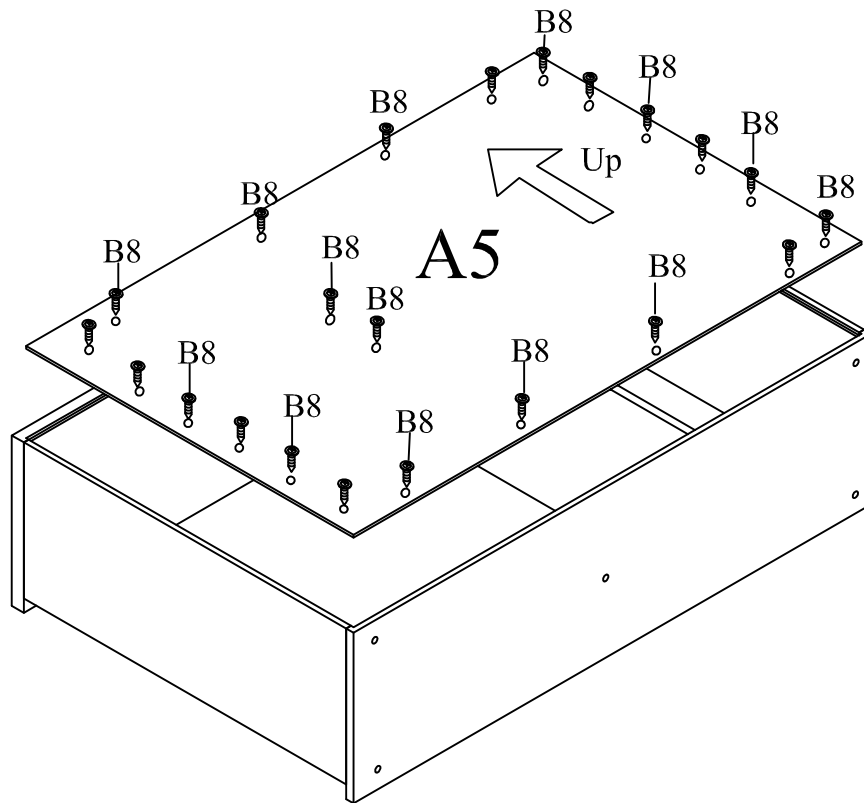



Attach Back Panel A5 to this unit using Screws B8.

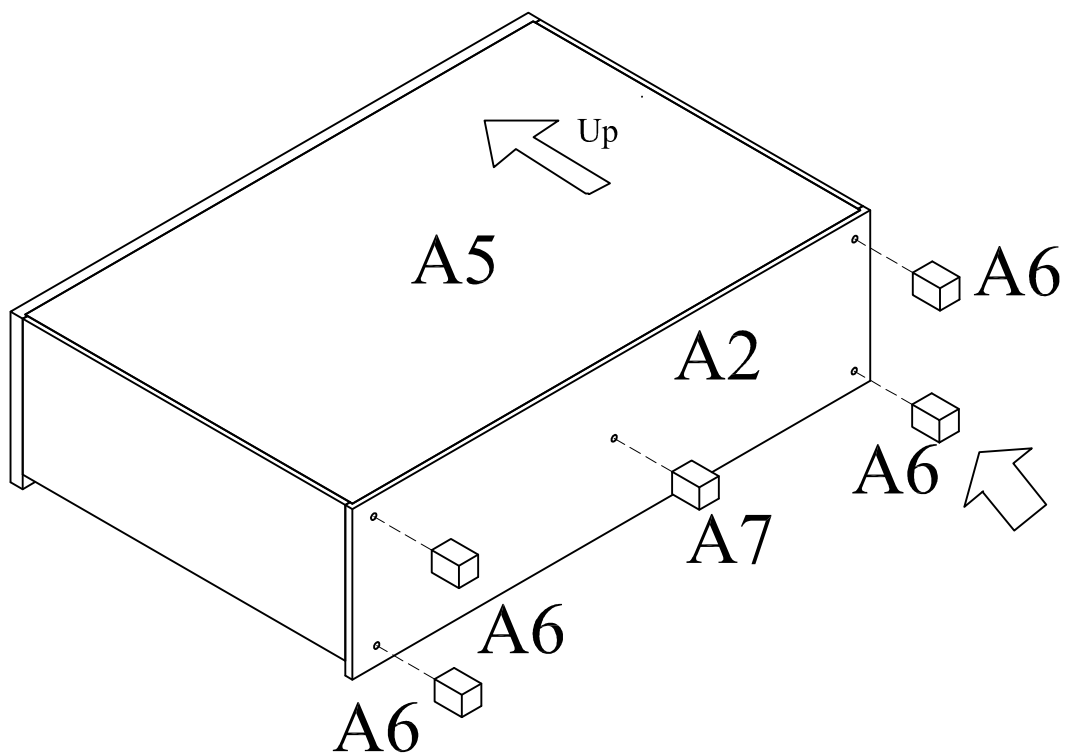
Step 4



Tighten Legs A6 and Center Leg A7 to the bottom of Bottom Panel A2.


Step 5

B3:		12PCS
B4:		6PCS

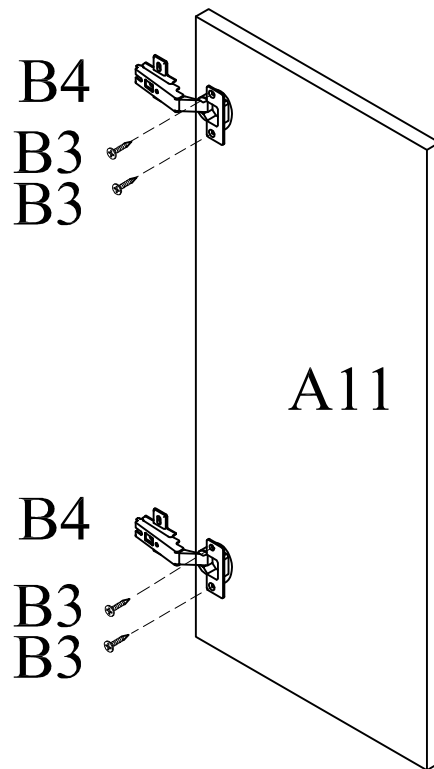

Attach Hinges B4 to Doors A10 & A11 using Screws B3. Please note the holes are pre-drilled.

Step 6

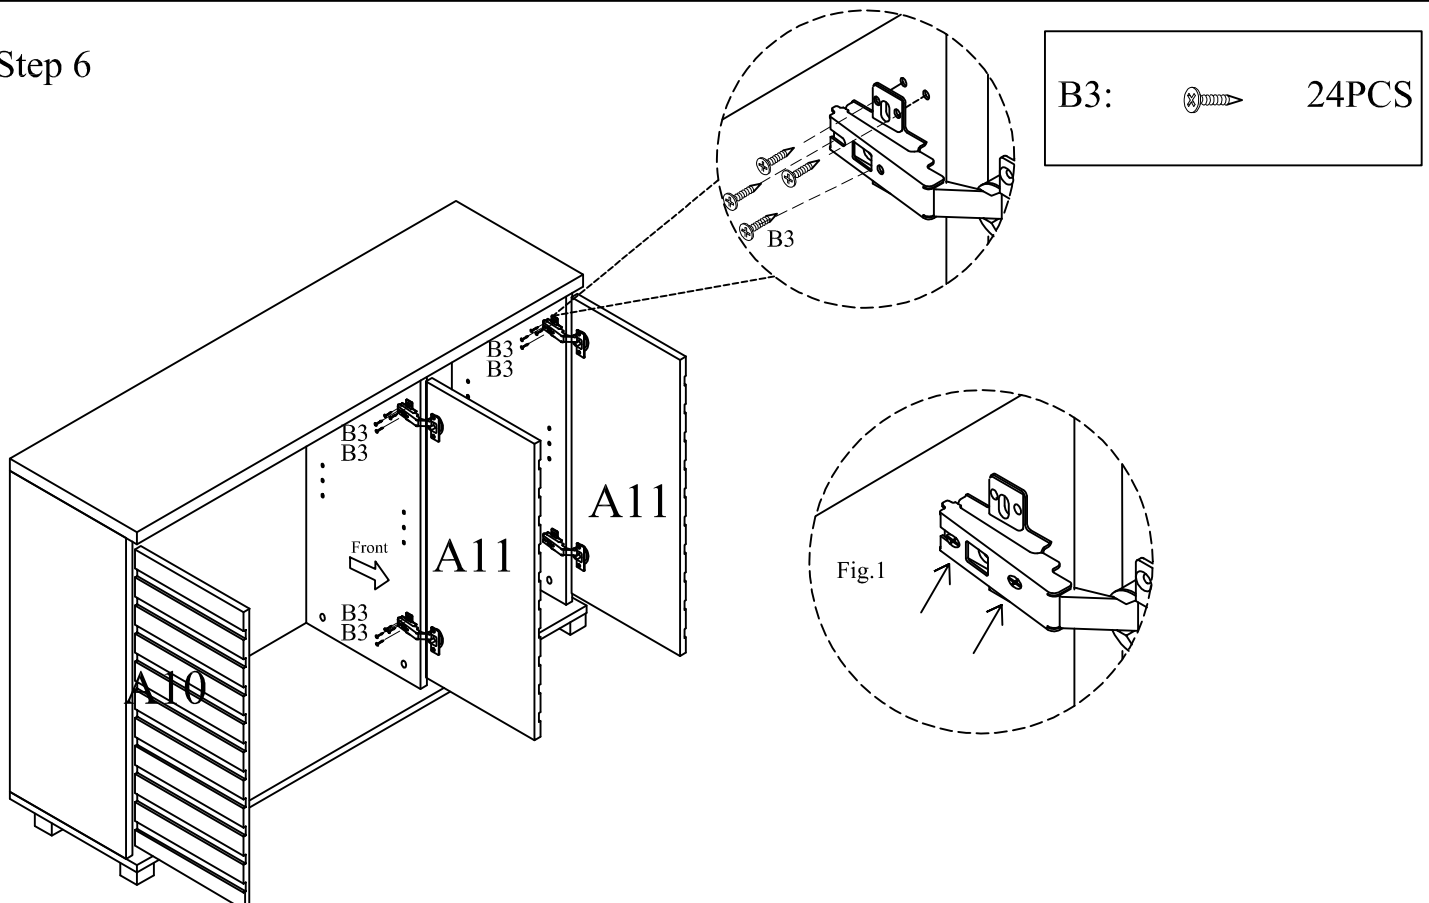


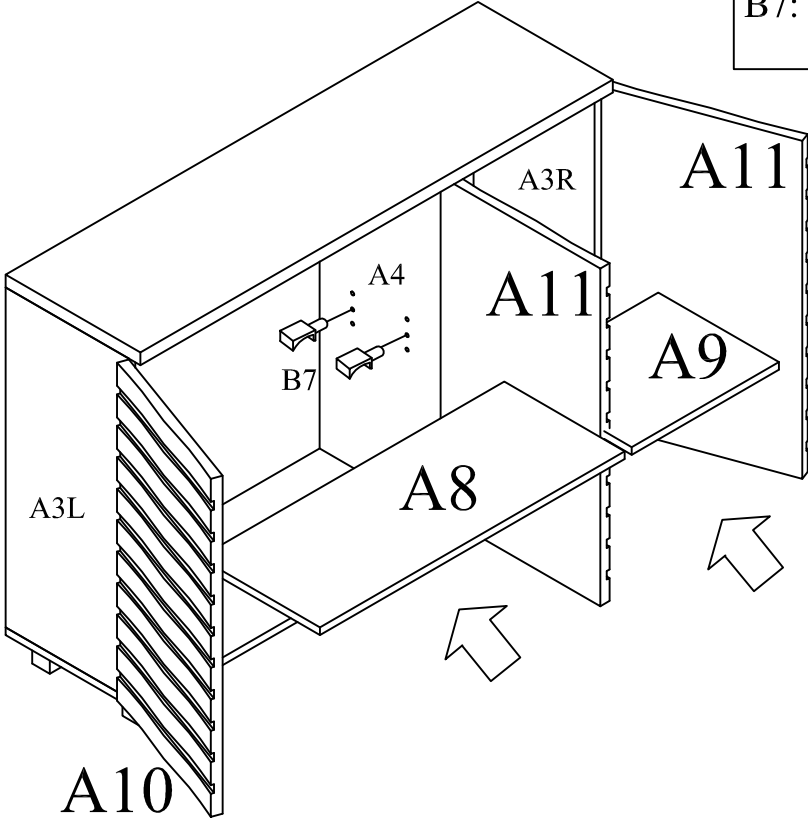
1). Attach Doors A10 & A11 to Side Panels A3(L&R) and Divider A4 using Screws B3.

Please note the holes are pre-drilled.

2). Note : Please loosen Screws B3 to adjust gaps between doors and side panel & divider. Refer to Fig.1.




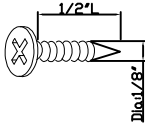

Step 7

B7:  8PCS



Insert the Shelf Supports B7 into holes on Side panels A3(L&R) and Divider A4 , then put Shelves A8 & A9 on Shelf Supports B7.

APPENDIX:Dimension of Hardwares in this AI.

<div>B1. </div> <div>Cam-Bolt</div>	<div></div> <div>Cam-Lock</div>	<div>B2. </div> <div>Wood Dowel</div>	<div>B3. </div> <div>Screw</div>	<div>B5&B6&B8. </div> <div>Screw</div>
--	--	--	--	---