


ASSEMBLY INSTRUCTIONS


Style # C1243 Console

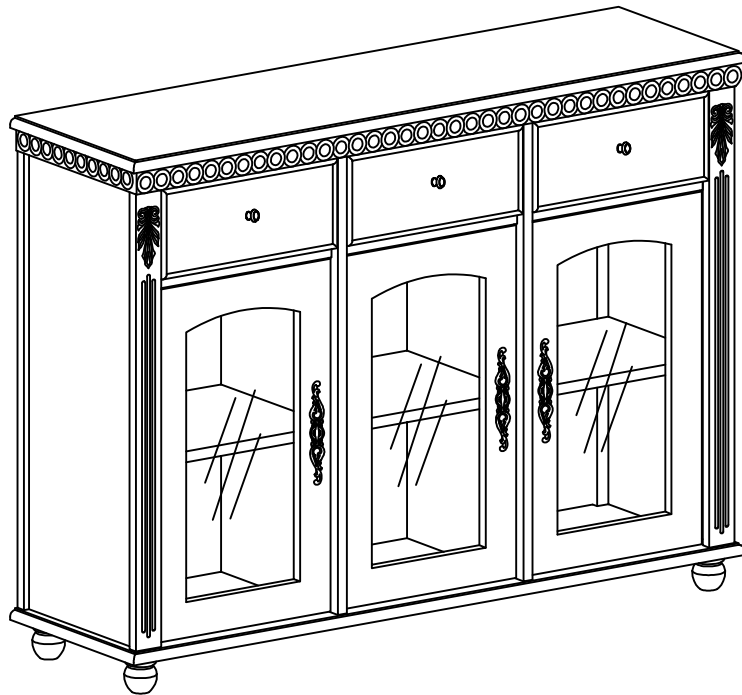

NOTE TO CUSTOMERS:


- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)

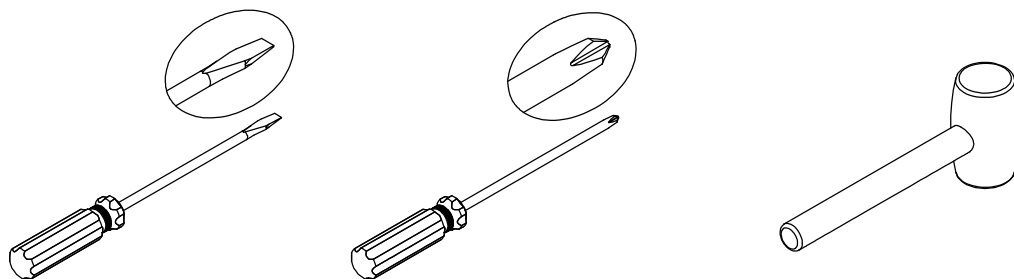


WOOD DOWEL INSTALLATION PROCEDURE


- 1).FILL HOLE 1/4 FULL GLUE.
- 2).GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET.
- DO NOT USE HAMMER.
- 3).WIPE AWAY EXCESS GLUE.

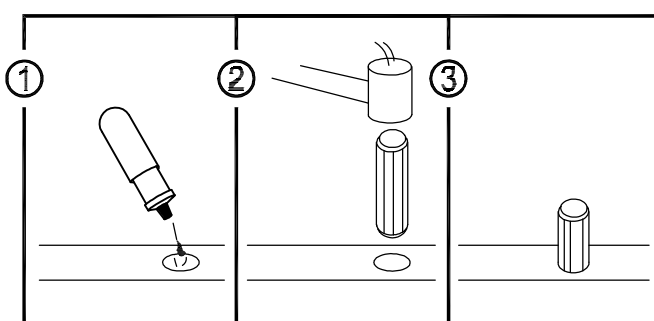


HIDDEN CONNECTOR----ASSEMBLY TECHNIQUES

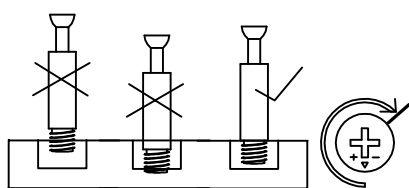


Note: Please don't over tighten the cam screws. Assure the cam screws fits into the plastic threaded insert. Otherwise the cam nut might not be able to catch the cam screws.

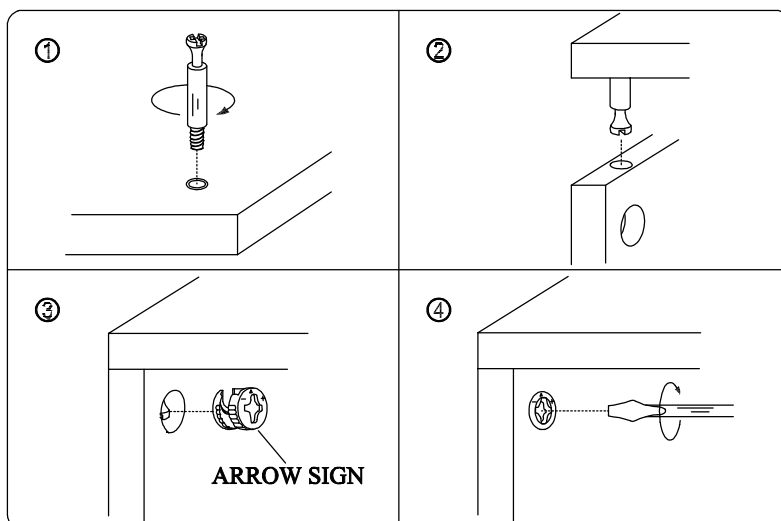


Part List:



**A1 1PC
Left Divider**



**A2 1PC
Right Divider**




**A3 1PC
Middle Shelf**




**A4 1PC
Left Side Panel**




**A5 1PC
Right Side Panel**




**A6 1PC
Top Panel**




**A7 1PC
Bottom Panel**

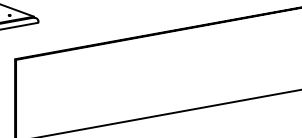


**A8 2PCS
Back Panel**

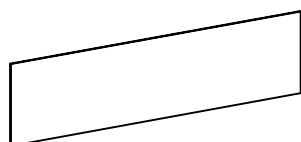


**A9 1PC
Back Panel**



**A10 2PCS
Left Door**



**A11 1PC
Right Door**

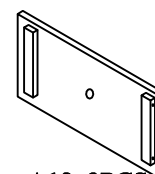

**A12 3PCS
Drawer Front Panel**



**A13 6PCS
Drawer Side Panel**




**A14 3PCS
Drawer Back Panel**



**A15 3PCS
Drawer Bottom Panel**



**A16 2PCS
Adjustable Shelf**



**A17 1PC
Middle Adjustable Shelf**



**A18 4PCS
Leg**



**A19 1PC
Middle Leg**




Glue

Hardware :



**B1 20SETS
Camlock**



**B2 10PCS
Wood Dowel**



**B3 22PCS
Screw**



**B4 24PCS
Screw**




**B5 12PCS
Screw**



**B6 3SETS
Drawer Knob**



**B7 12PCS
Supporter**



**B8 3SETS
Magent**




**B9 3SETS
Door Knob**



**B10 3SETS
Stopper**


Step 1

B10:  3SETS

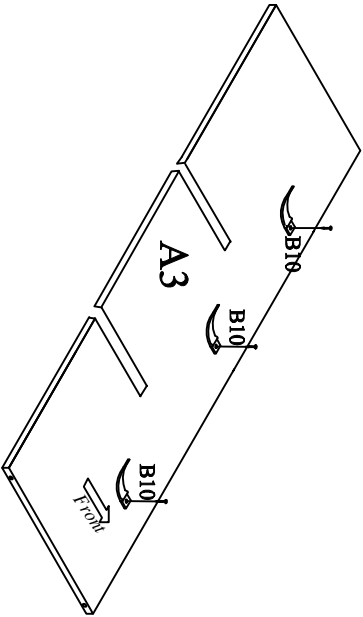




Step 2

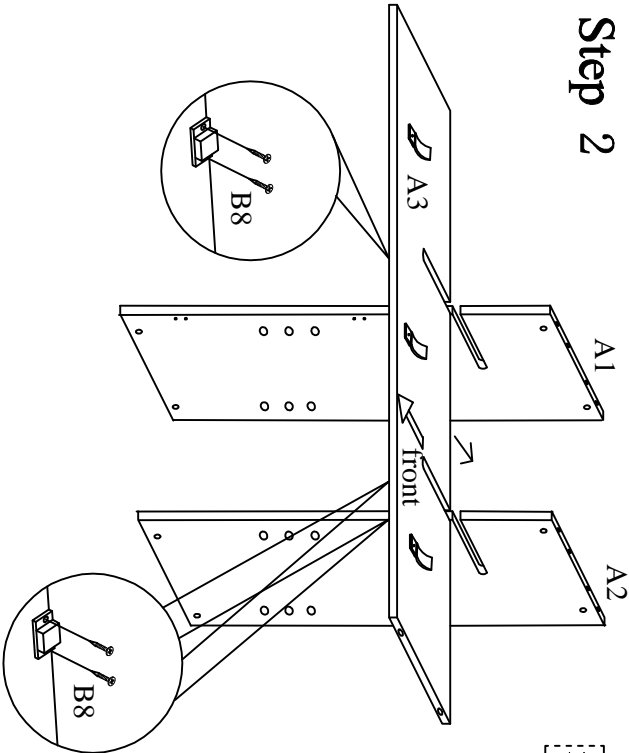B8:  3SETS




Step 3

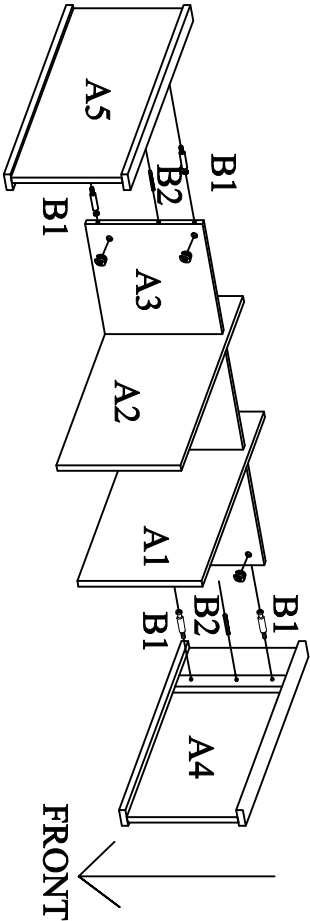

B1:  4SETS
B2:  2PCS

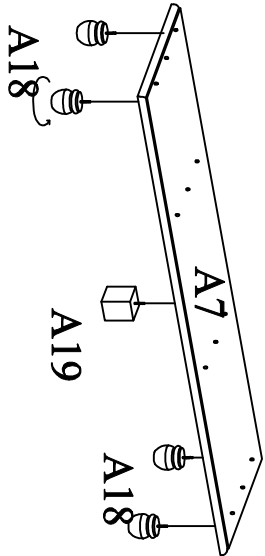


Step 4






Step 5

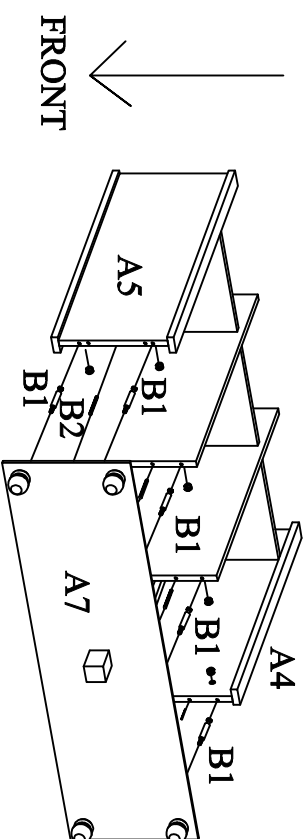B1:  8SETS
B2:  4PCS




Step 6

B1:  8SETS
B2:  4PCS

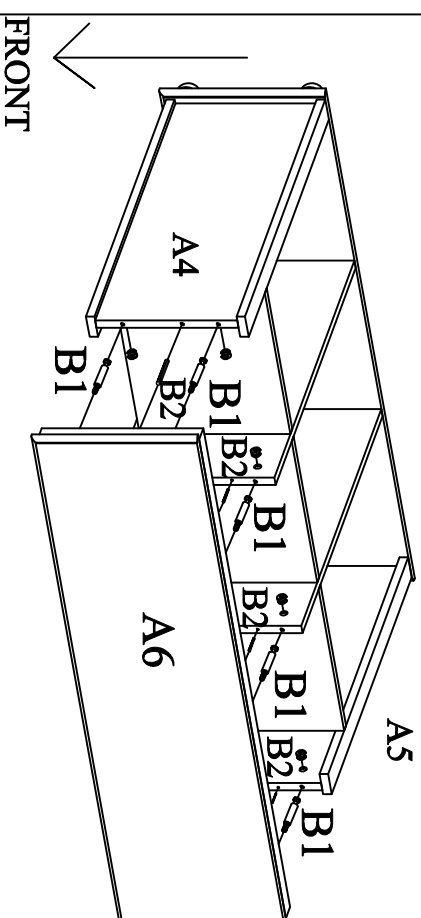


Step 7

B3:  22PCS

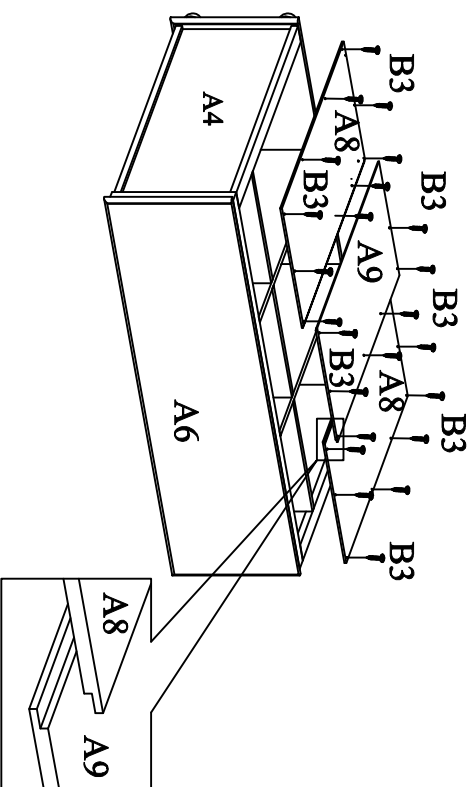


Step 8


B7:  12PCS

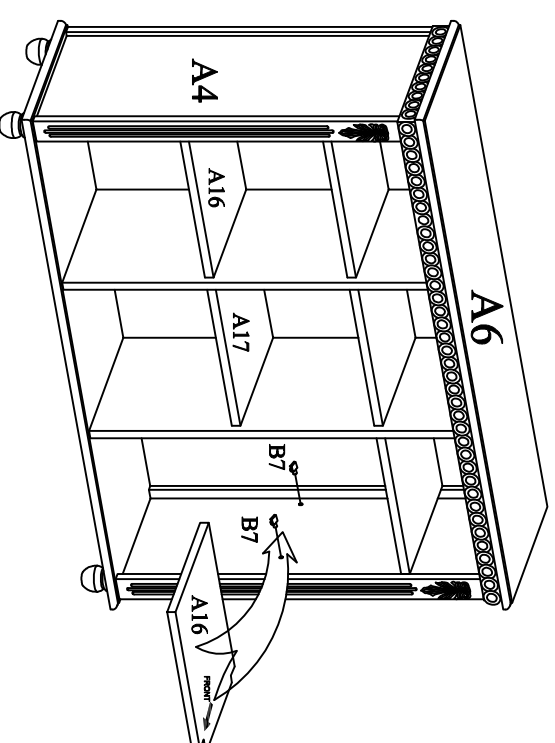


Step 9

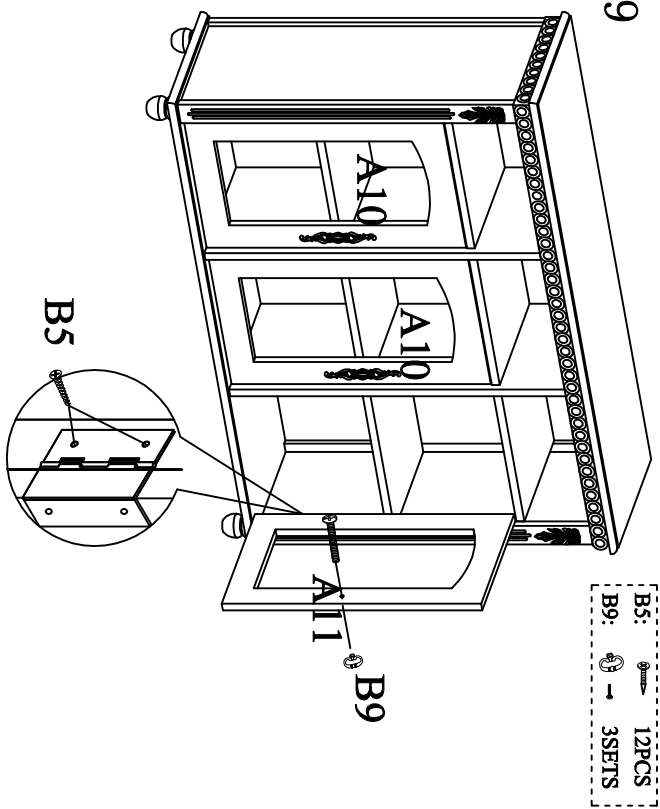

Step 11

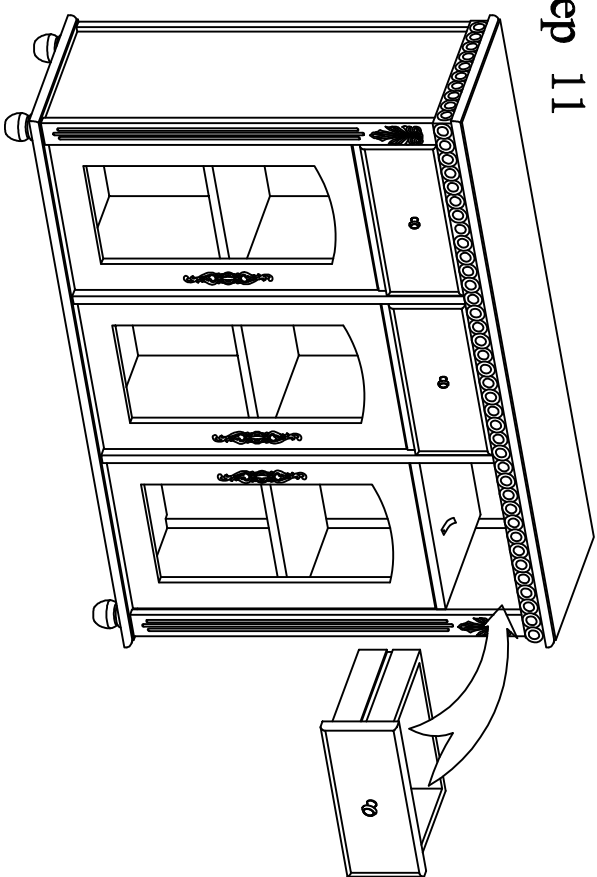

Step 10

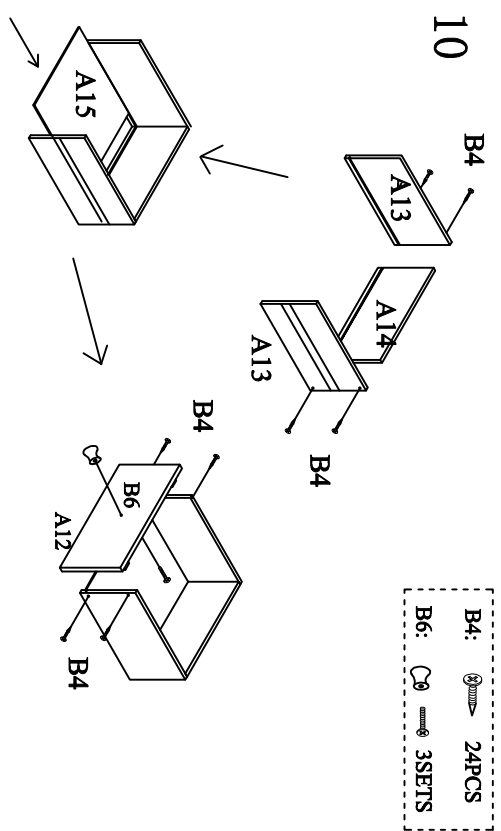

Step 12

