


ASSEMBLY INSTRUCTIONS



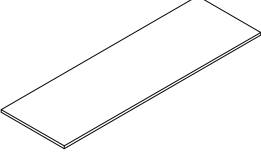




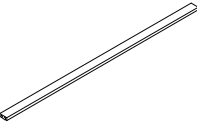












MODEL #C 6381 CONSOLE TABLE

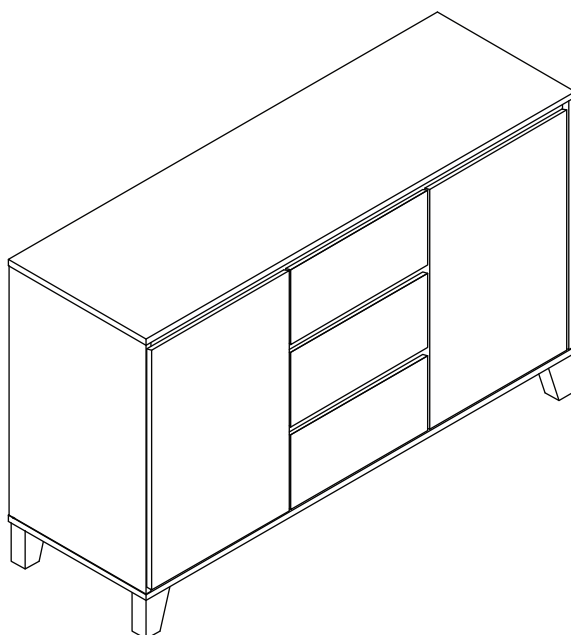















NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS IDENTIFICATION




P1 Quantity: 1  Side Panel-Left	P2 Quantity: 1  Side Panel-Right	P3 Quantity: 1  Top Panel	P4 Quantity: 1  Bottom Panel	P5 Quantity: 1  Middle Panel- Left
P6 Quantity: 1  Middle Panel-Right	P7 Quantity: 2  Adjustable Shelf	P8 Quantity: 1  Front Rail	P9 Quantity: 2  Carcass Rail	P10 Quantity: 2  Back Panel
P11 Quantity: 1  Back Panel	P12 Quantity: 3  Drawer front Panel	P13 Quantity: 3  Drawer - Left Side Panel	P14 Quantity: 3  Drawer - Right Side Panel	P15 Quantity: 3  Drawer - Back Panel
P16 Quantity: 3  Drawer - Base Panel	P17 Quantity: 1  Door Panel-Left	P18 Quantity: 1  Door Panel-Right	P19 Quantity: 4  Legs	P20 Quantity: 2  Center Legs

HARDWARE LIST


H1 Screw #9 x 1 1/2"  Quantity: 34 pcs	H2 Wooden Dowel m8 x 25mm  Quantity: 22 pcs	H3 Wooden Dowel m6x 25mm  Quantity: 10 pcs	H4 Connecting Bolts  Quantity: 22 pcs	H5 Cam Lock 15/12.5mm  Quantity: 10 pcs
H6 Cam Lock 12/9.5mm  Quantity: 12 pcs	H7 Shelf Support  Quantity: 8 pcs	H8 Corner Wedges  Quantity: 6 pcs	H9 Screw m3 x 20mm  Quantity: 6 pcs	H10 Adhesed shelf stopper  Quantity: 4 pcs
H11 Door Hinges  Quantity: 4 sets	H12 Screw m3.5 x 14mm  Quantity: 16 pcs	H13 Screw m4 x 12mm  Quantity: 36 pcs	H14 Drawer Slider  Quantity: 3 sets	

STEP 1


insert wooden dowels (H2) & (H3) into the following parts respectively.

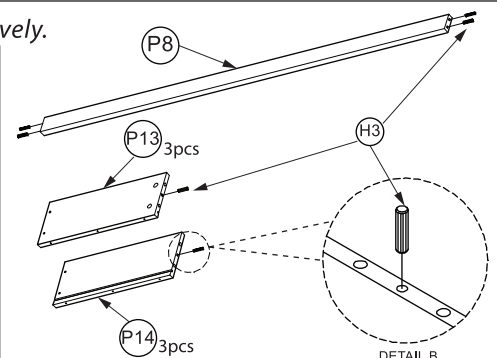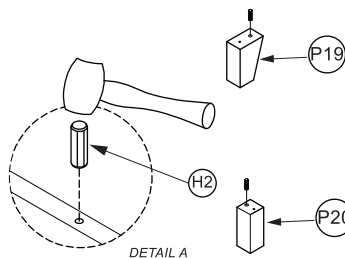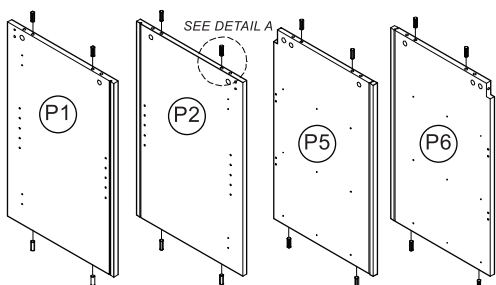

STEP 2 Align the connecting bolts (H4) into the following parts by using a house hold screw driver.

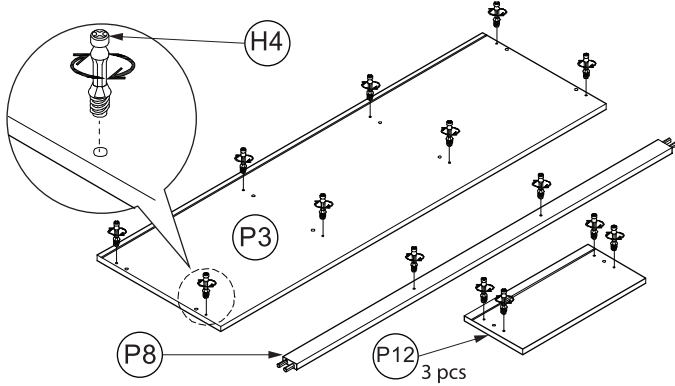


STEP 3 Install one part of the Drawer Slides (H14) to (P5) & (P6).

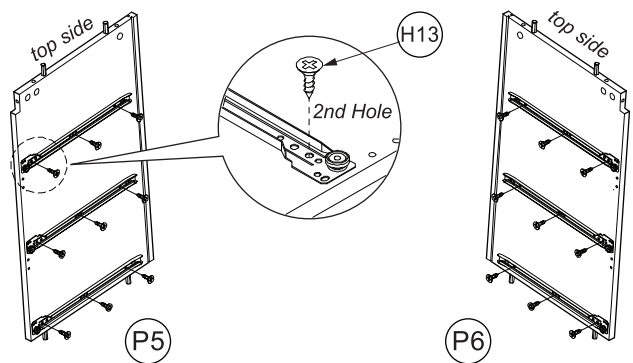


STEP 4

Align the Camlock & turn it to locked position when it is connected to the bolts.

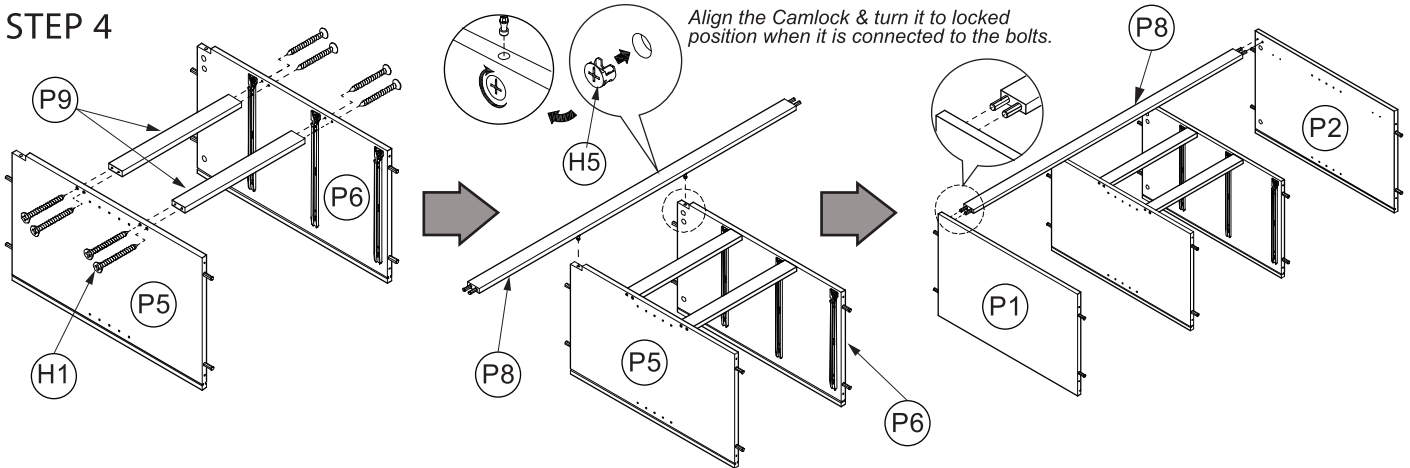


STEP 5

Align the Camlock & turn it to locked position when it is connected to the bolts.

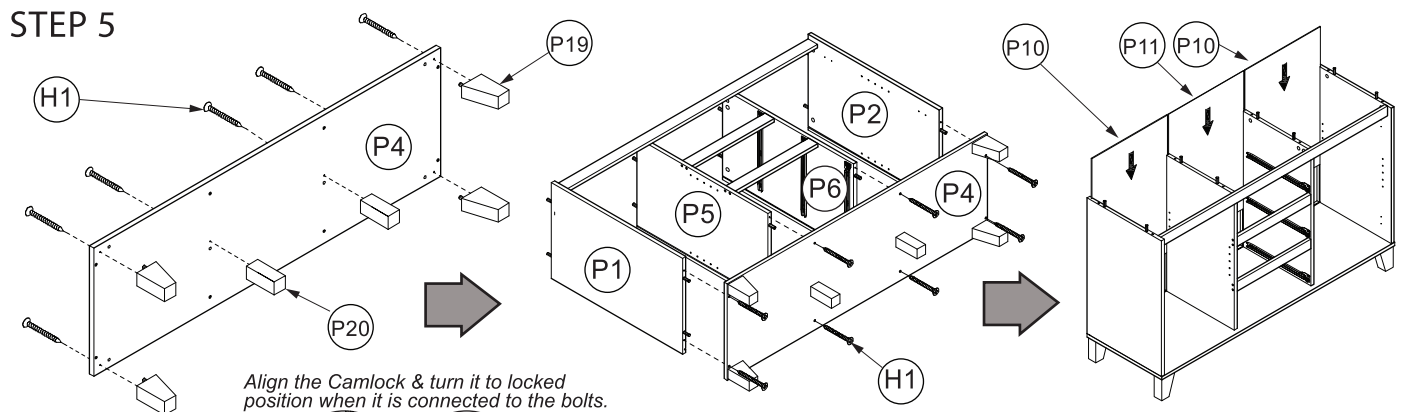

STEP 6

STEP 7 Drawer assembly.
three sets of drawers

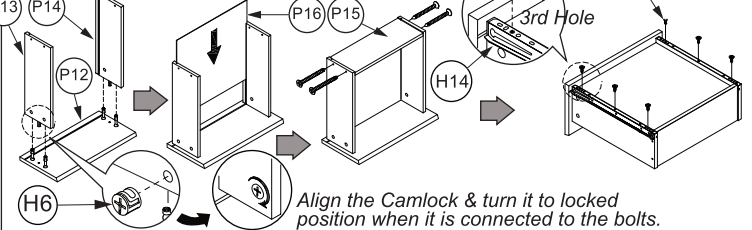

STEP 8 Door assembly.

