


ASSEMBLY INSTRUCTIONS


Style # CR1482/83/84 Coat Rack

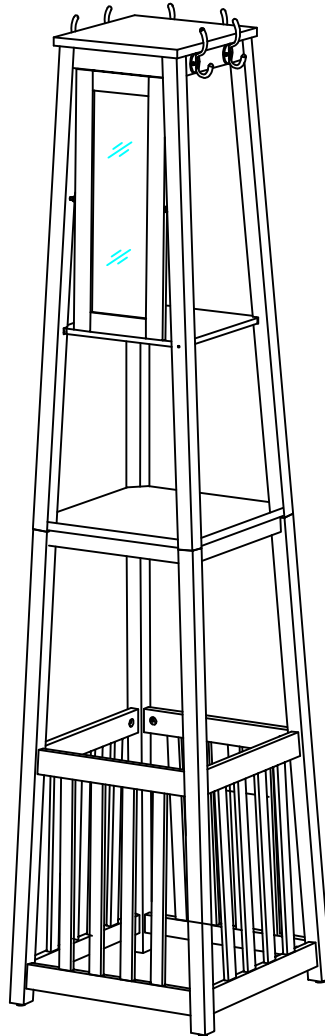


NOTE TO CUSTOMERS:

- For ease and speed of assemble we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


To insert a cam lock: (Please read below instructions before assembling)

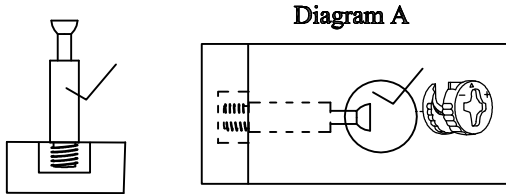


1. Insert cam screw into hole as shown in diagram A .

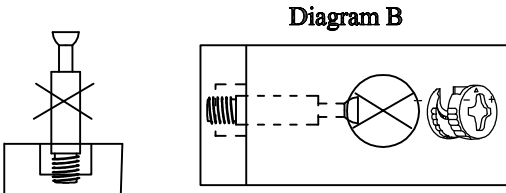


Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.

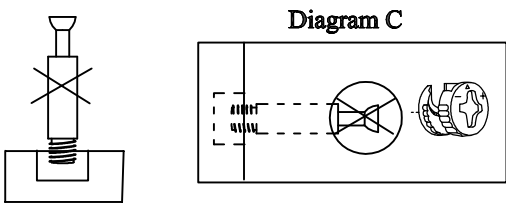


Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

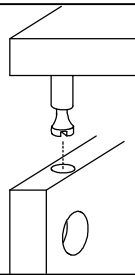

2. Connect the panels together.

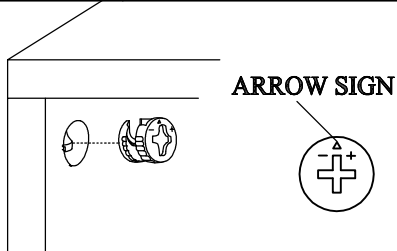

3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

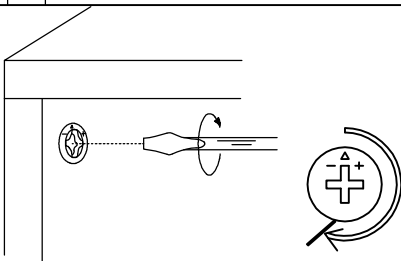










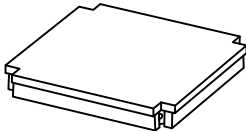
4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**







Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

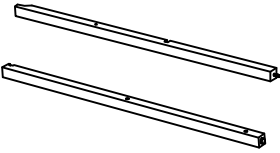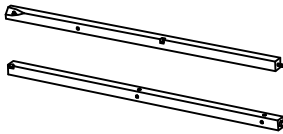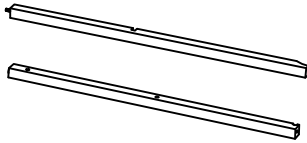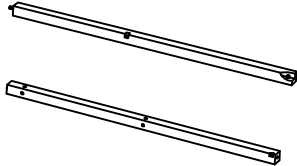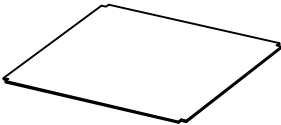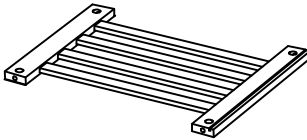Part List


<p>A1. Quantity of 1</p>  <p>Right Front Leg</p>	<p>A2. Quantity of 1</p>  <p>Left Front Leg</p>	<p>A3. Quantity of 1</p>  <p>Rear Leg</p>	<p>A4. Quantity of 1</p>  <p>Rear Leg</p>
<p>A5. Quantity of 1</p>  <p>Top Panel</p>	<p>A6. Quantity of 1</p>  <p>Bottom Panel</p>	<p>A7. Quantity of 4</p>  <p>Side Frame</p>	<p>A8. Quantity of 1</p>  <p>Mirror</p>
<p>A9. Quantity of 1</p>  <p>Shelf Panel</p>	<p>A10. Quantity of 1</p>  <p>Shelf Panel</p>		

Hardware List
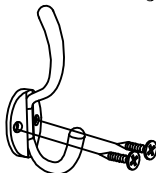
<p>B1. Quantity of 16</p>  <p>Camlock&Cambolt</p>	<p>B2. Quantity of 8</p>  <p>Bolt with washers</p>	<p>B3. Quantity of 4</p>  <p>Screw</p>	<p>B4. Quantity of 6</p>  <p>Hook with screws</p>
<p>B5. Quantity of 2</p>  <p>Connect Pin</p>	<p>Allen Wrench</p> 		



Step 1

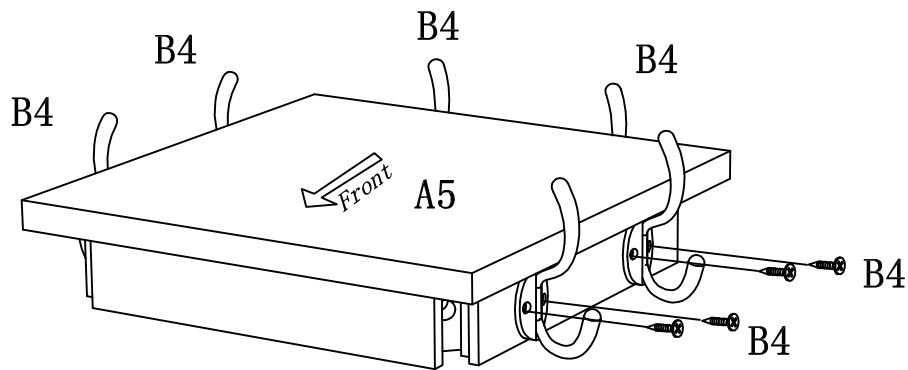
B4:  6SETS



Attach Hooks B4 to Top Panel A5 using included screws.



Step 2


B1:   4SETS

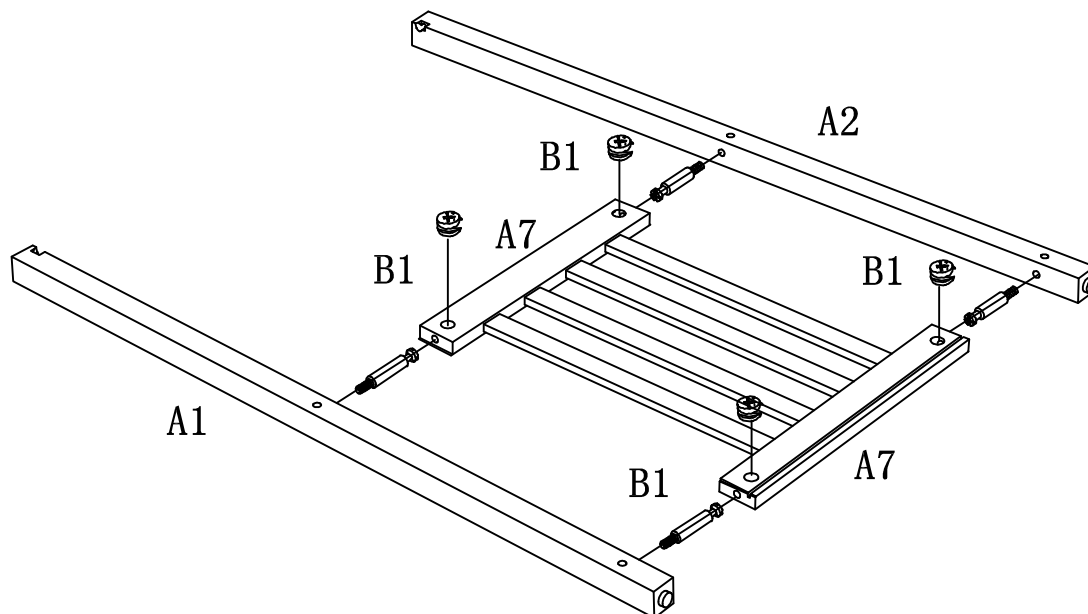

Attach Side Frame A7 to Front Legs A1&A2 (L&R) using Cambolts and Camlocks B1.



Step 3


B1:   2SETS

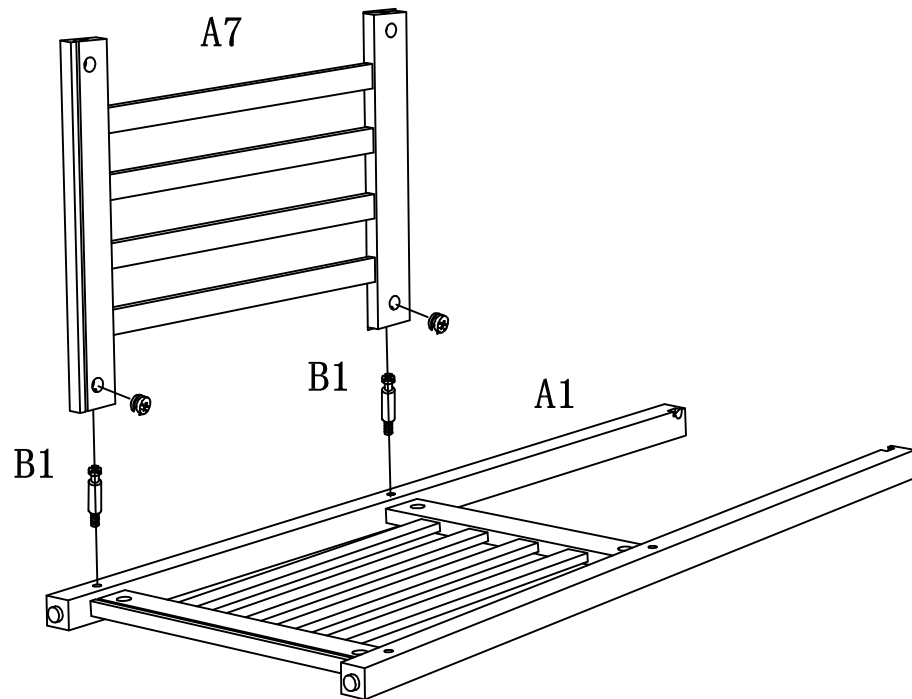

Attach Side Frame A7 to Right Front Legs A1 using Cambolts and Camlocks B1.


Step 4

B1:   2SETS

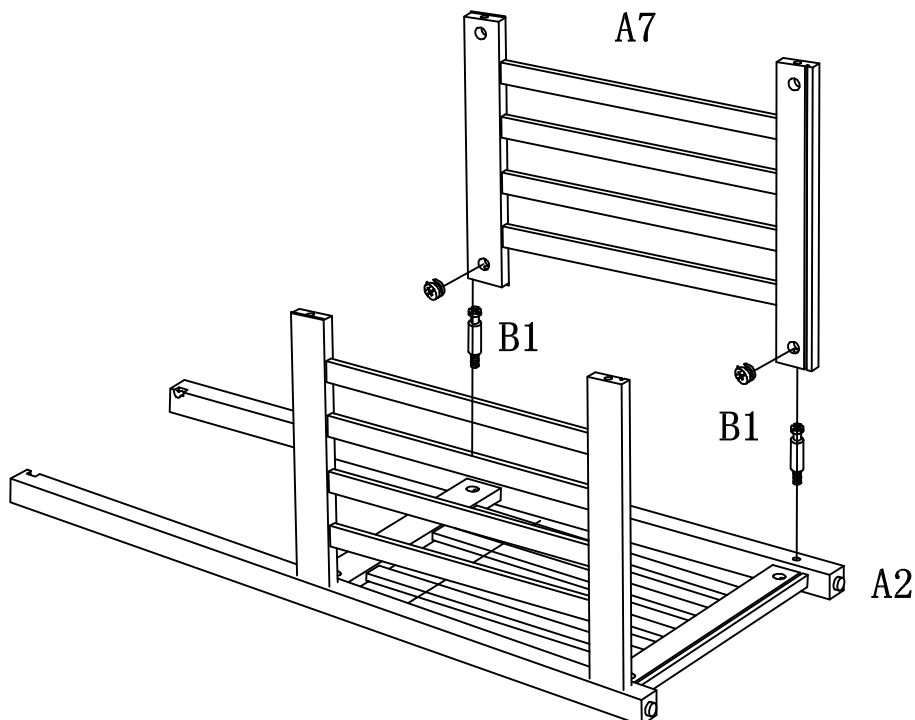



Attach Side Frame A7 to Left Front Legs A2 using Cambolts and Camlocks B1.

Step 5

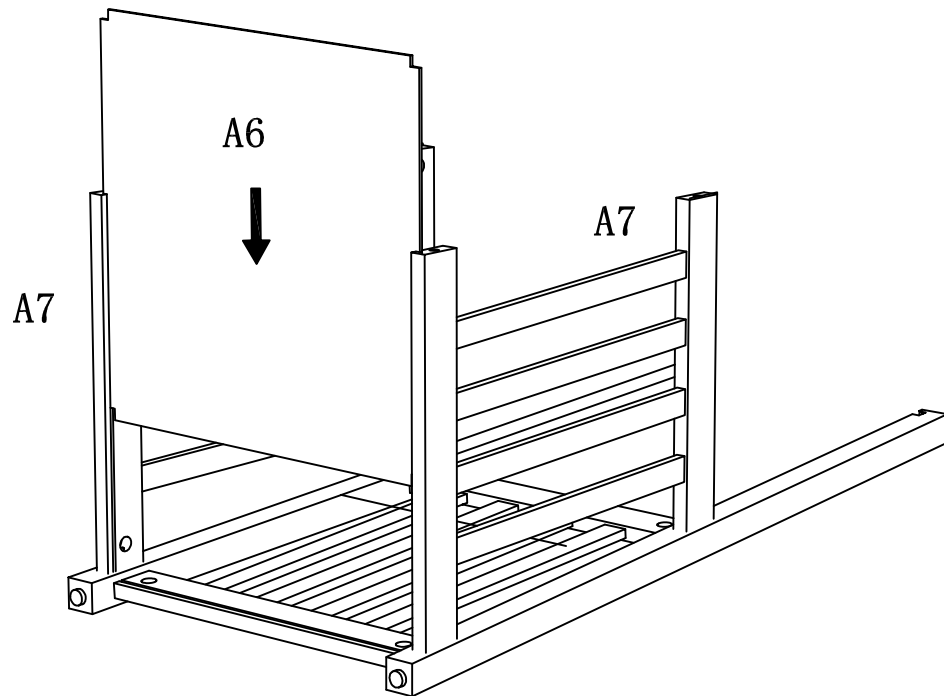

Insert Bottom Panel A6 into the grooves on the Side Frames A7.


Step 6

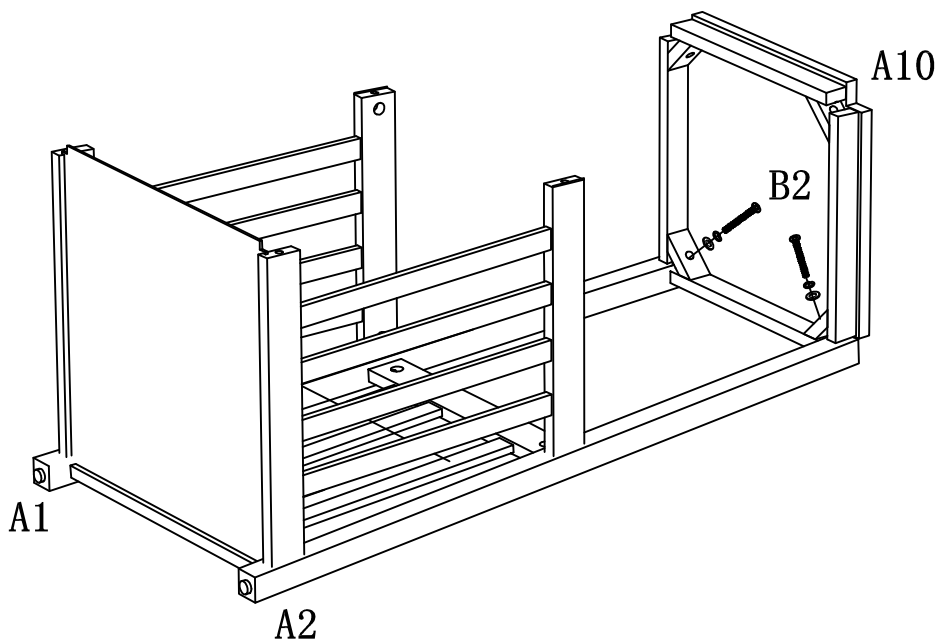

Attach Shelf Panel A10 to Front Legs A1&A2 (L&R) using Bolts B2 with washers.
Note: Please do not tighten Bolts B2 until step 14.

Step 7

B1:   4SETS


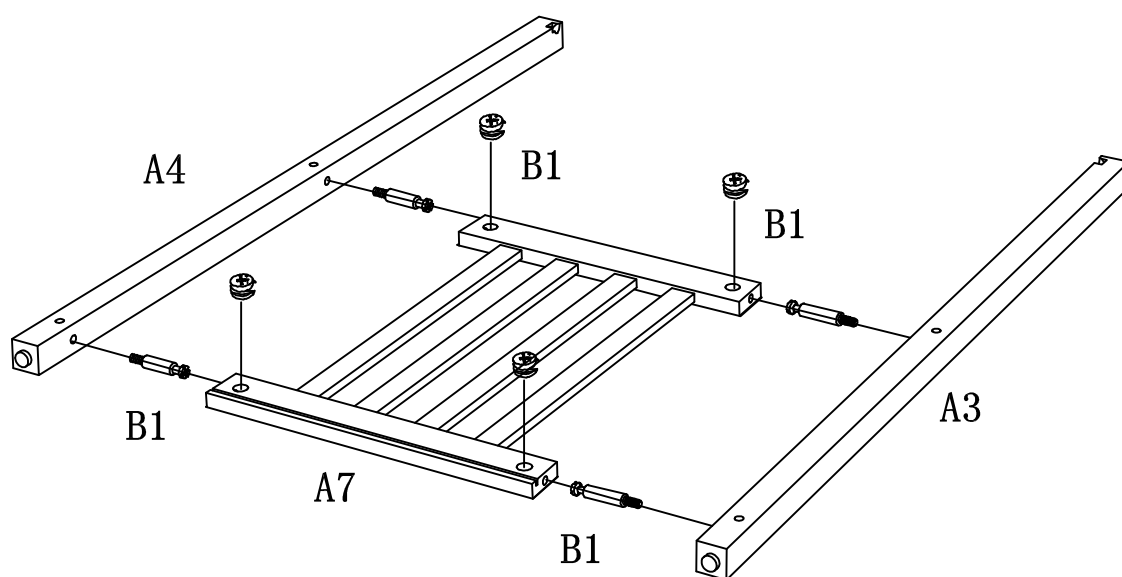


Attach Side Frame A7 to Rear Legs A3&A4 using Cambolts & Camlocks B1.

Step 8

B1:   4SETS


B2:   2SETS

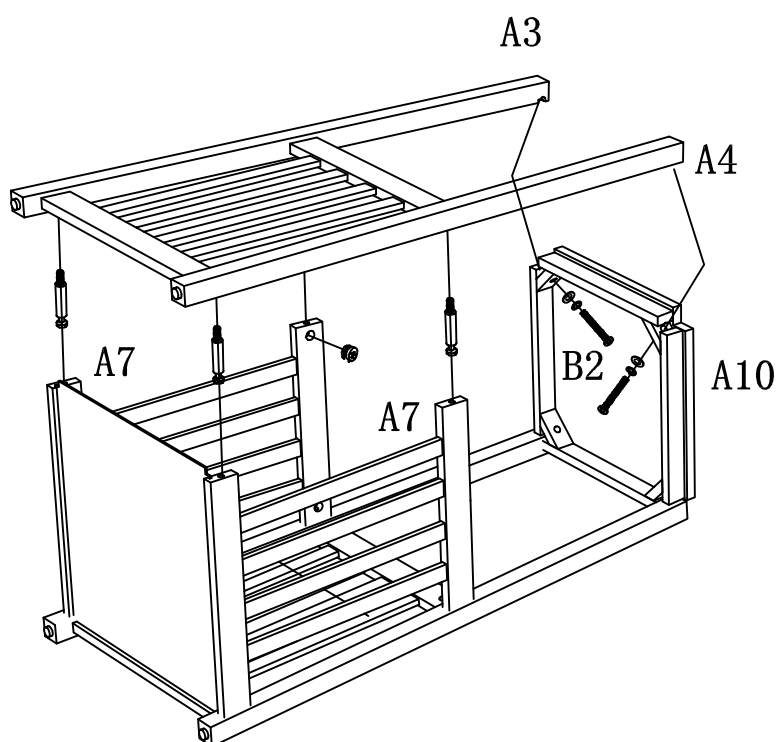

Attach Rear Legs A3&A4 to Side Frames A7 and Shelf Panel A10 using Cambolts & Camlocks B1 and Bolts B2 with washers.


Note: Please do not tighten Bolts B2 until step 14.

Step 9

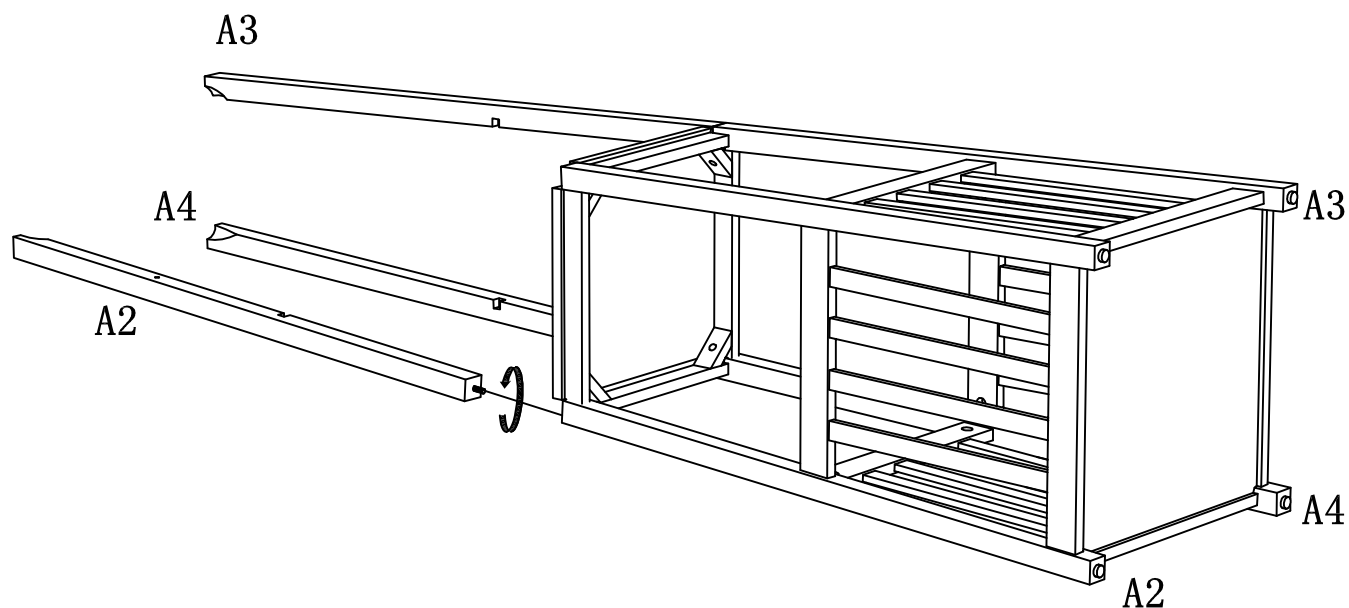


Attach and tighten Upper Left Front Leg A2 and Rear Legs A3&A4 to the other Left Front Leg A2 and Rear Legs A3&A4 as shown above.

Step 10

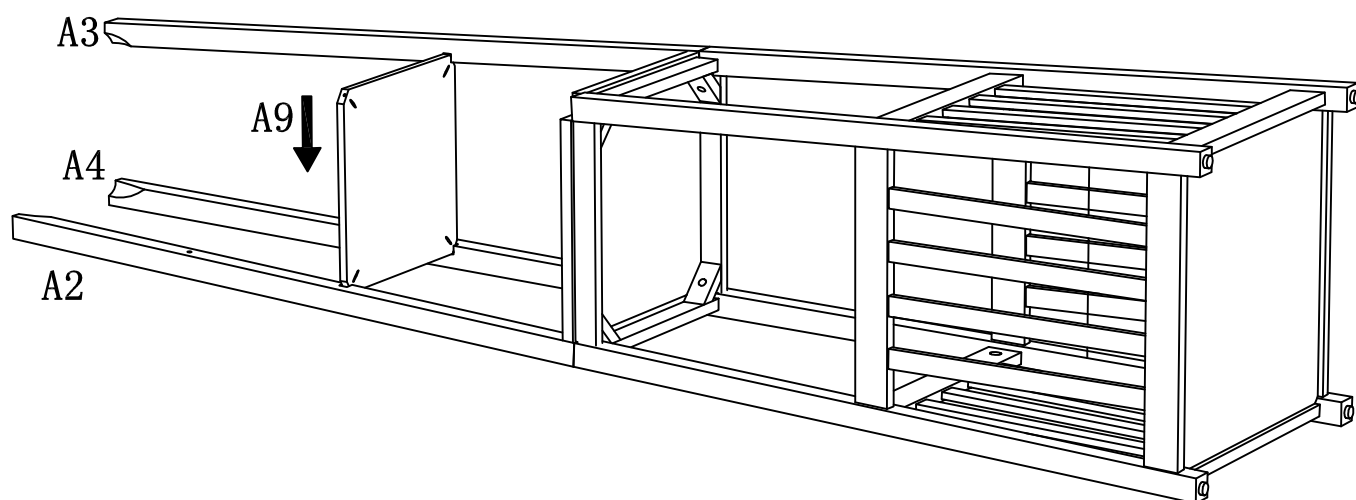

Insert Shelf Panel A9 into the grooves on the Left Front Leg A2 and Rear Legs A3&A4.


Step 11

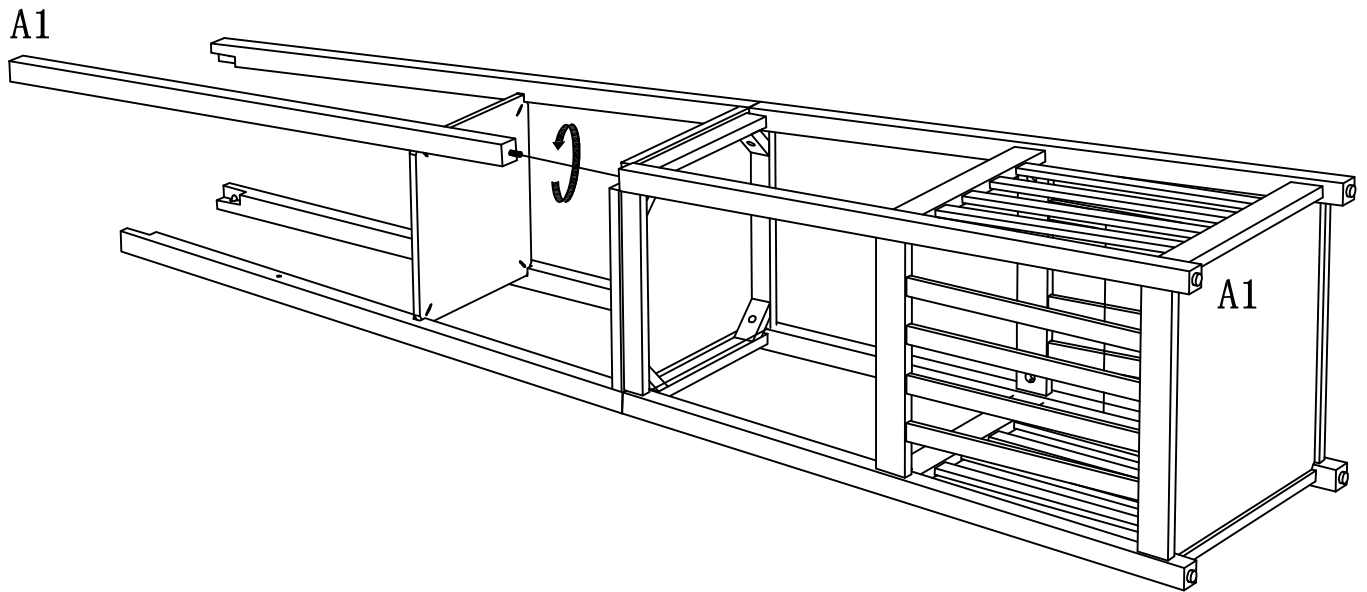

Attach and tighten Right Front Leg A1 to the other Right Front Leg A1 and Shelf Panel A9 as shown above.

Step 12



B3:  4PCS

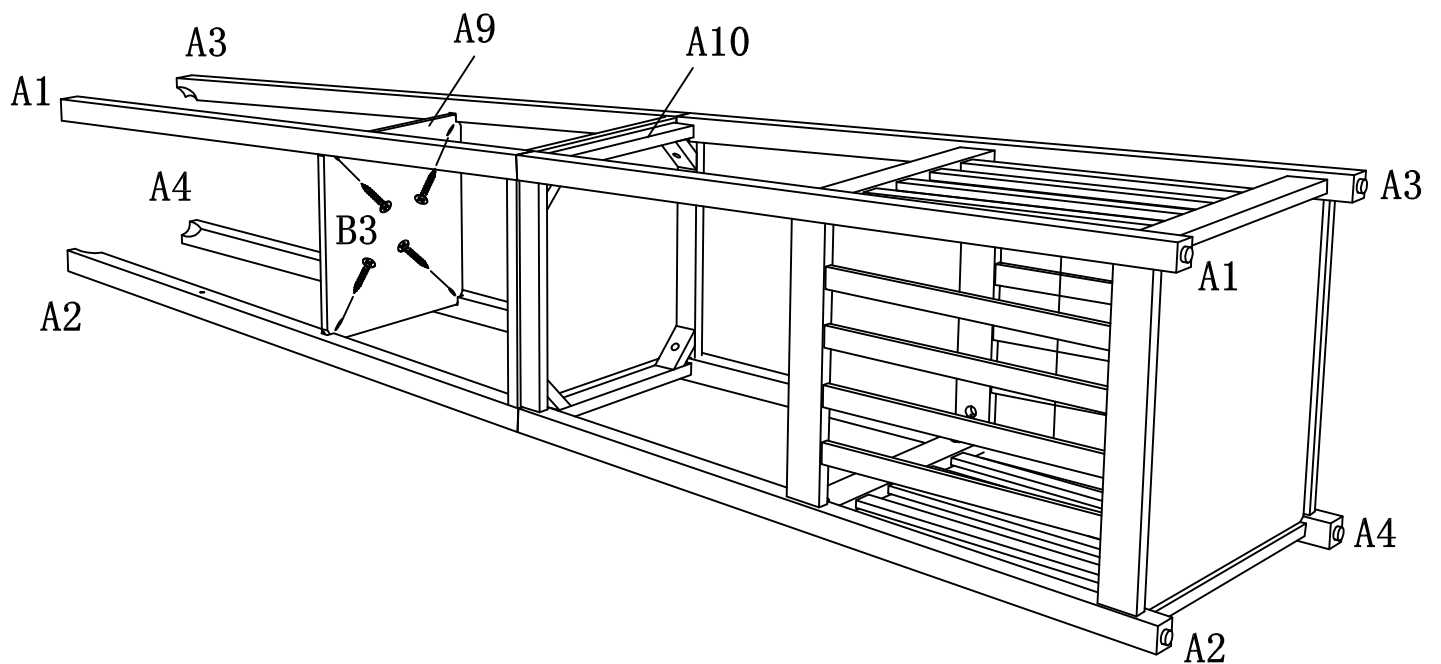

Please attach Shelf Panel A9 using Screws B3, but do not tighten all the way, (only tighten 80%) as it would need to be tightened 100% in step 14.

Step 13


B2:  4SETS

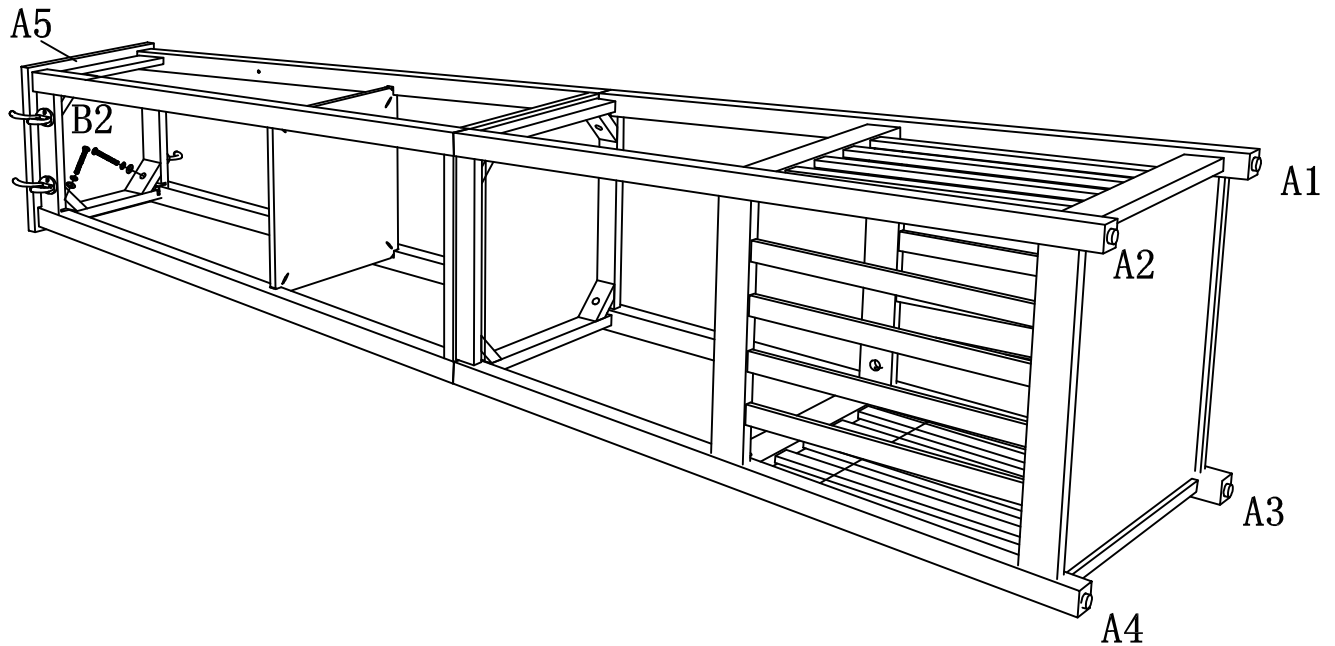

Attach and tighten Top Panel A5 to Legs A1&A2&A3&A4 using Bolts B2 with washers.
Note: Please do not tighten Bolts B2 until step 14.






Step 14

B5:  2PCS

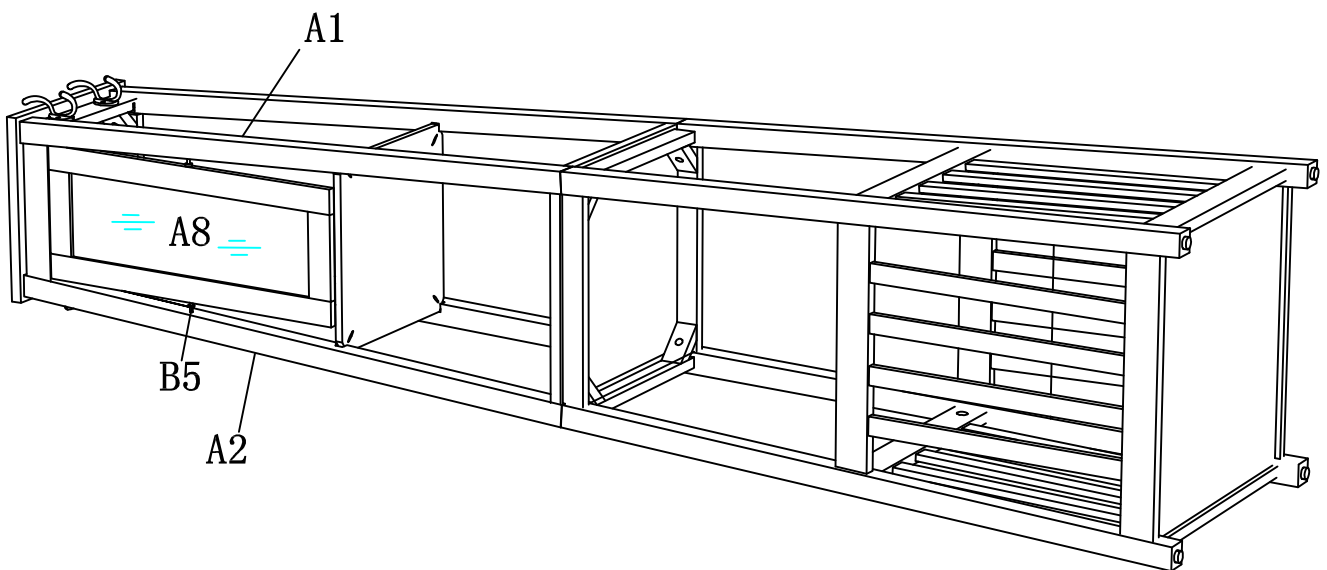

Attach Mirror A8 to Front Legs A1&A2 (L&R) using Connect Pins B5.
Note: Please tighten all bolts and screws at this point.

APPENDIX: Dimension of Hardwares in this AI.
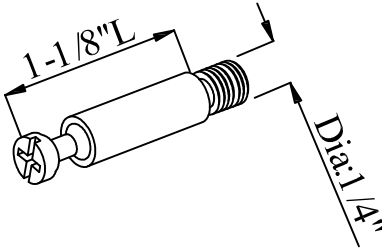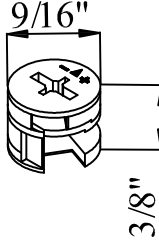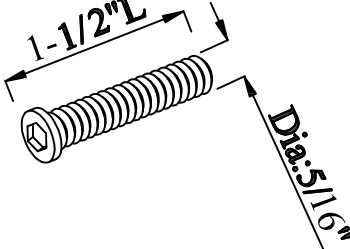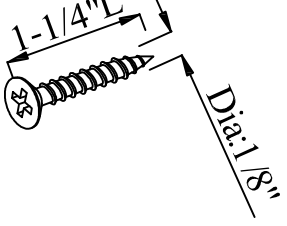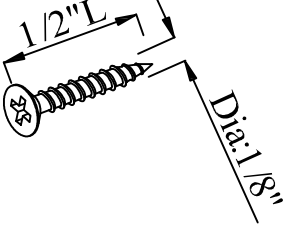
<p>B1.</p>  <p>Cam-bolt</p>	<p>B1.</p>  <p>Cam-nut</p>	<p>B2.</p> 
<p>B3.</p>  <p>Screw</p>	<p>B4.</p>  <p>Screw</p>	