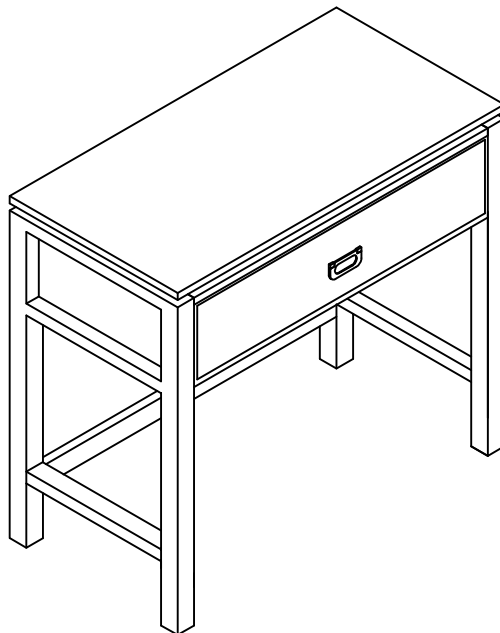


# ASSEMBLY INSTRUCTIONS

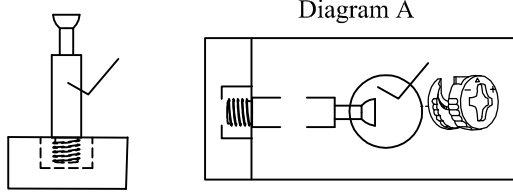
Style# HO292/HO281 Desk




## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## To insert a cam lock: (Please read below instructions before assembling)



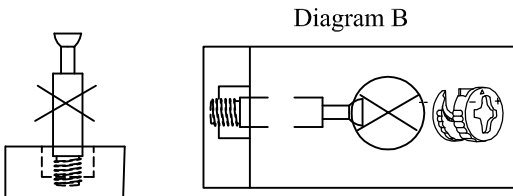
1. Insert cam screw into hole as shown in diagram A .



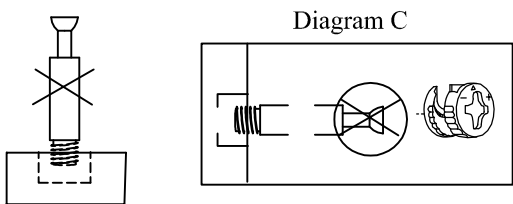
Make sure not to insert the cam screw:  
Too deep as shown in figure B as this will cause the  
cam screw to be misaligned and unable to  
interlock properly.



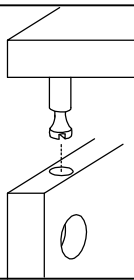
Also avoid inserting the cam screw too close to the  
surface of the hole as shown in figure C, as this will  
cause the cam lock to be too loose, and not interlock  
properly.



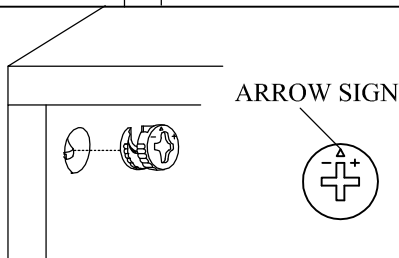2. Connect the panels together.



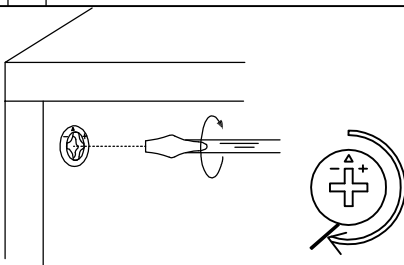3. When inserting the cam lock make sure the arrow  
of the cam lock faces the cam screw.














4. To tighten the cam lock turn the cam lock clockwise  
90-180 degree or until the arrow is facing opposite  
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC  
SCREWDRIVER TO TIGHTEN CAM LOCKS.**







### Note:

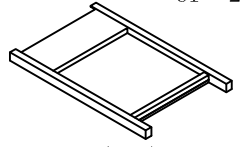- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.








# Part List

<p>A1</p> <p>Quantity of 1</p>  <p>Top Panel</p>	<p>A2</p> <p>Quantity of 2</p>  <p>Side Panel (L&amp;R)</p>	<p>A3</p> <p>Quantity of 1</p>  <p>Upper Apron</p>	<p>A4</p> <p>Quantity of 2</p>  <p>Connect Bar</p>
<p>A5</p> <p>Quantity of 1</p>  <p>Back Panel</p>	<p>A6</p> <p>Quantity of 1</p>  <p>Drawer Front Panel</p>	<p>A7</p> <p>Quantity of 2</p>  <p>Drawer Side Panel (L&amp;R)</p>	<p>A8</p> <p>Quantity of 1</p>  <p>Drawer Back Panel</p>
<p>A9</p> <p>Quantity of 1</p>  <p>Drawer Bottom Panel</p>	<p>A10</p> <p>Quantity of 1</p>  <p>Drawer Connect Bar</p>	<p>A11</p> <p>Quantity of 1</p>  <p>Connect Bar</p>	


# Hardware List
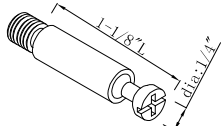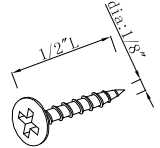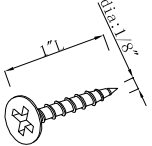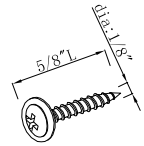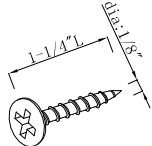
<p>B1</p> <p>Quantity of 4</p>  <p>Wood Dowel</p>	<p>B2</p> <p>Quantity of 18</p>  <p>Cam-Lock</p>	<p>B3</p> <p>Quantity of 1</p>  <p>Knob with Screw</p>	<p>B4</p> <p>Quantity of 8</p>  <p>Screw</p>
<p>B5</p> <p>Quantity of 12</p>  <p>Screw</p>	<p>B6</p> <p>Quantity of 3</p>  <p>Screw</p>		

## APPENDIX: Dimension of Hardwares in this AI.


<p>B1</p>  <p>Wood Dowel</p>	<p>B2</p>  <p>Cam-bolt</p>	<p>B3</p>  <p>Cam-Lock</p>	<p>B3</p>  <p>Screw</p>
<p>B4</p>  <p>Screw</p>	<p>B5</p>  <p>Screw</p>	<p>B6</p>  <p>Screw</p>	

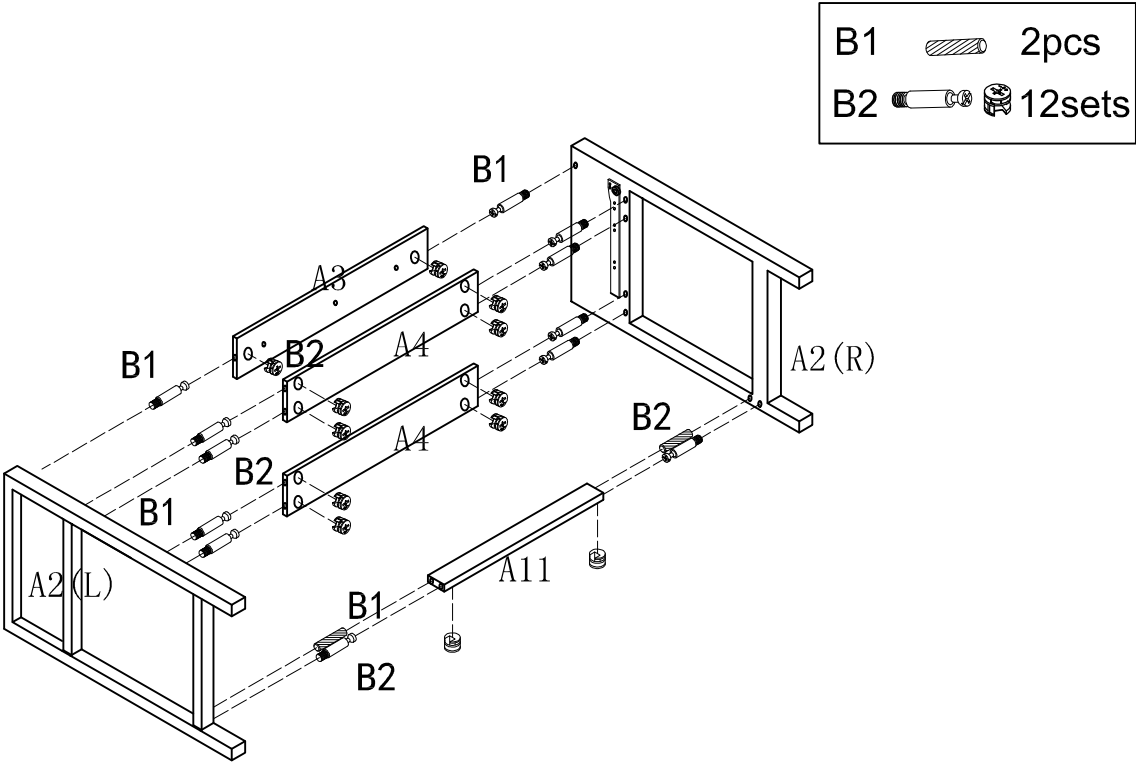STEP 1



Assemble Side Panels A2 (L&R) to Upper Apron A3,Connect Bars A4 and A11 using Wood Dowels B1 and Cam-Locks B2.

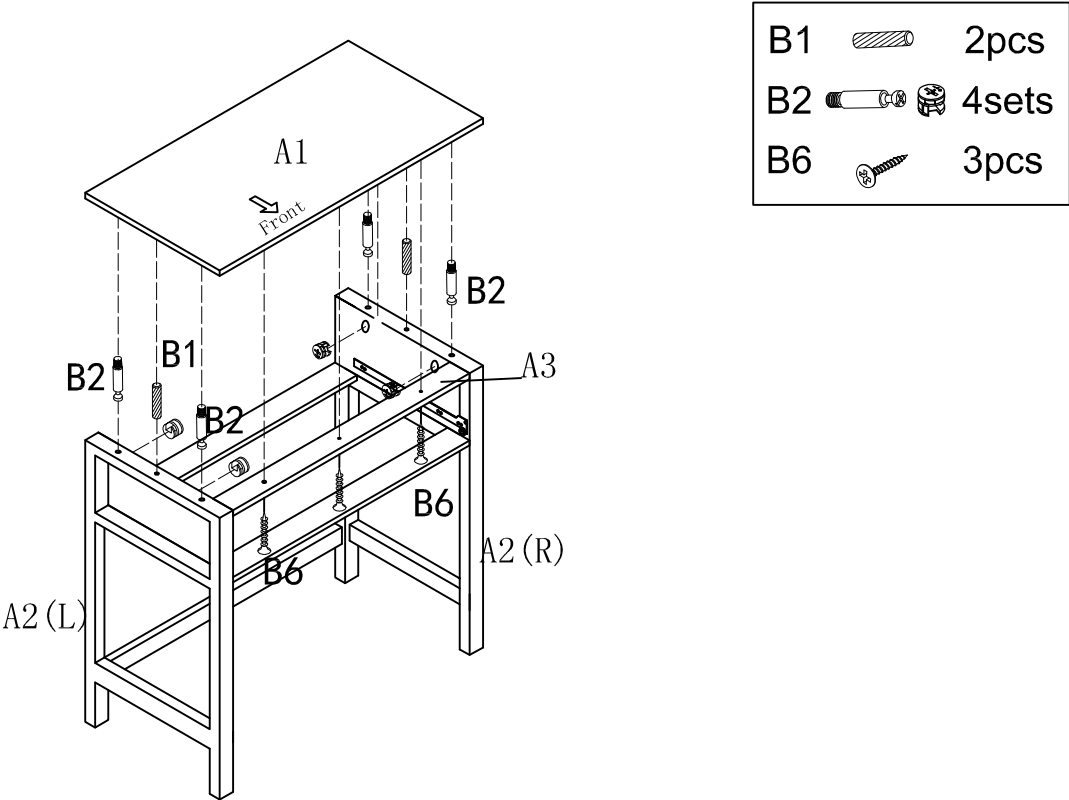
STEP 2



Assemble Top Panel A1 to Side Panels A2 (L&R) and Upper Apron A3 using Wood Dowels B1, Cam-Locks B2 and Screws B6.

## STEP 3

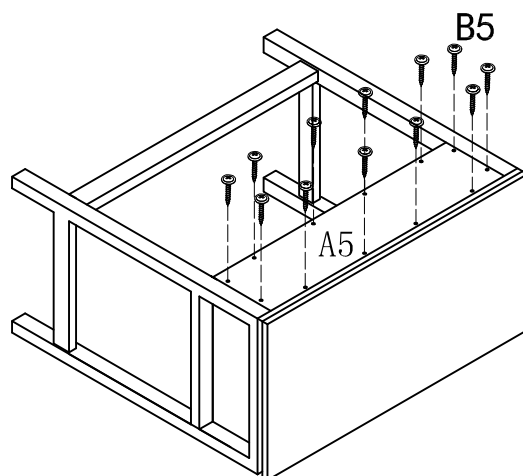
B5  12pcs



Attach Back Panel A5 to the back of the desk using Screws B5.


## STEP 4

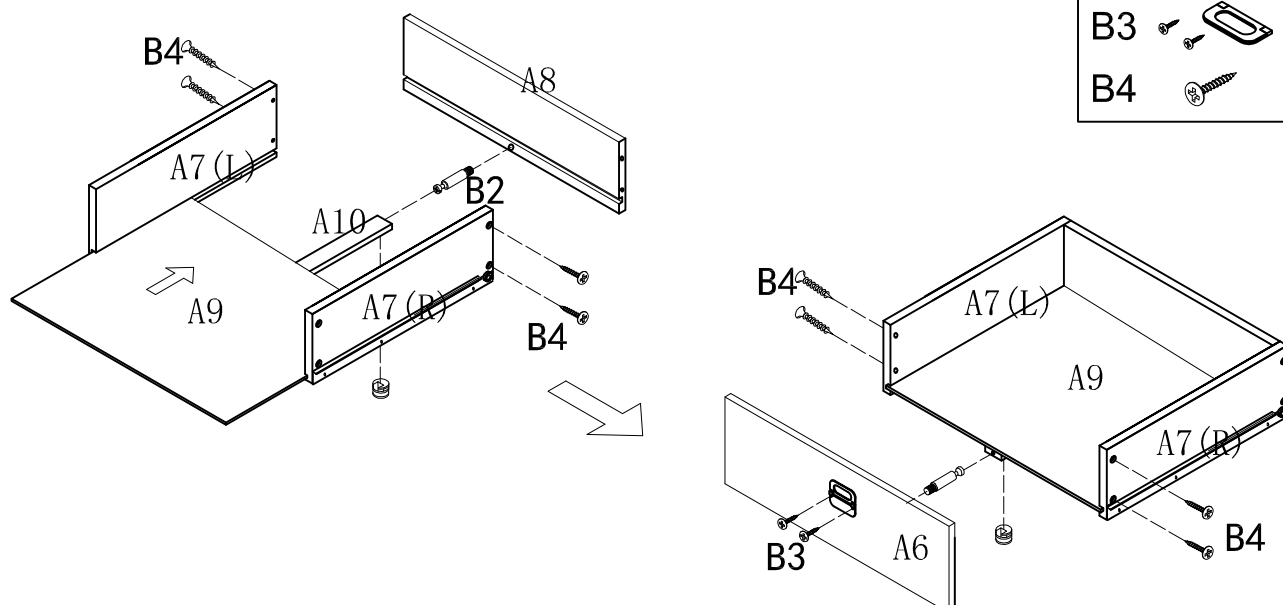B2  2sets  
B3  1set  
B4  8pcs



- 1). Assemble Drawer Side Panels A7 (L&R) and Drawer Connect Bar A10 to Drawer Back Panel A8 using Cam-Locks B2 and Screws B4.
- 2). Insert Drawer Bottom Panel A9 into the grooves on the Drawer Side Panels A7 and Drawer Back Panel A8.
- 3). Assemble Drawer Front Panel A6 to Drawer Side Panels A7 (L&R) and Drawer Connect Bar A10 using Cam-Locks B2 and Screws B4.
- 4). Attach Knob With Screws B3 to Drawer Front Panel A6 with included screws.

## STEP 5

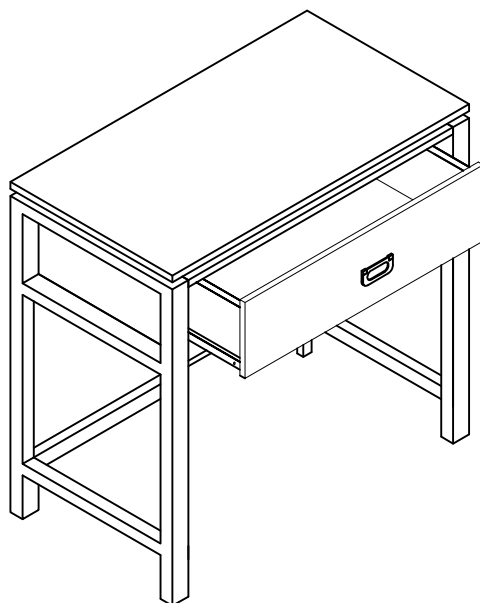

Insert Drawer into the desk as shown above.