


ASSEMBLY INSTRUCTIONS


















MODEL #HO 335 DESK

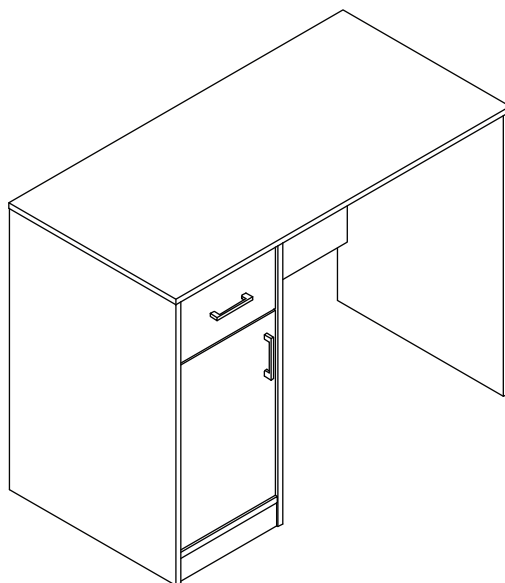







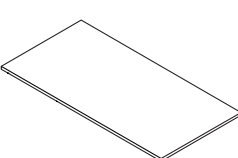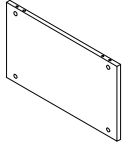








NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS IDENTIFICATION


P1 Quantity: 1  Leg Panel-Left	P2 Quantity: 1  Leg Panel- Center	P3 Quantity: 1  Leg Panel- Right	P4 Quantity: 1  Table Top Panel	P5 Quantity: 1  Compartment- Bottom Panel
P6 Quantity: 1  Compartment- Upper Panel	P7 Quantity: 1  Compartment- Shelf Panel	P8 Quantity: 1  Compartment- Plinth Panel	P9 Quantity: 1  Upper Modesty Panel	P10 Quantity: 1  Lower Modesty Panel
P11 Quantity: 1  Compartment - Back Panel	P12 Quantity: 1  Drawer front Panel	P13 Quantity: 1  Drawer - Left Side Panel	P14 Quantity: 1  Drawer - Right Side Panel	P15 Quantity: 1  Drawer - Back Panel
P16 Quantity: 1  Drawer - Base Panel	P17 Quantity: 1  Compartment- Door Panel			

HARDWARE LIST


H1 Screw #9 x 1 1/2"  Quantity: 8 pcs	H2 Wooden Dowel m8 x 25mm  Quantity: 22 pcs	H3 Wooden Dowel m6x 25mm  Quantity: 2 pcs	H4 Connecting Bolts  Quantity: 26 pcs	H5 Cam Lock 15/12.5mm  Quantity: 22 pcs
H6 Cam Lock 12/9.5mm  Quantity: 4 pcs	H7 Shelf Support  Quantity: 4 pcs	H8 Adhesived Shelf Stopper  Quantity: 1 pc	H9 Pan Head Screw #6 x 22mm  Quantity: 4 pcs	H10 Pull Handle  Quantity: 2 pcs
H11 Leg Stud  Quantity: 9 pcs	H12 Door Hinges  Quantity: 2 pcs	H13 Screw m3.5 x 14mm  Quantity: 8 pcs	H14 Screw m4 x 12mm  Quantity: 12 pcs	H15 Drawer Slider  Quantity: 1 set

STEP 1


insert wooden dowels (H2) & (H3) into the following parts respectively.

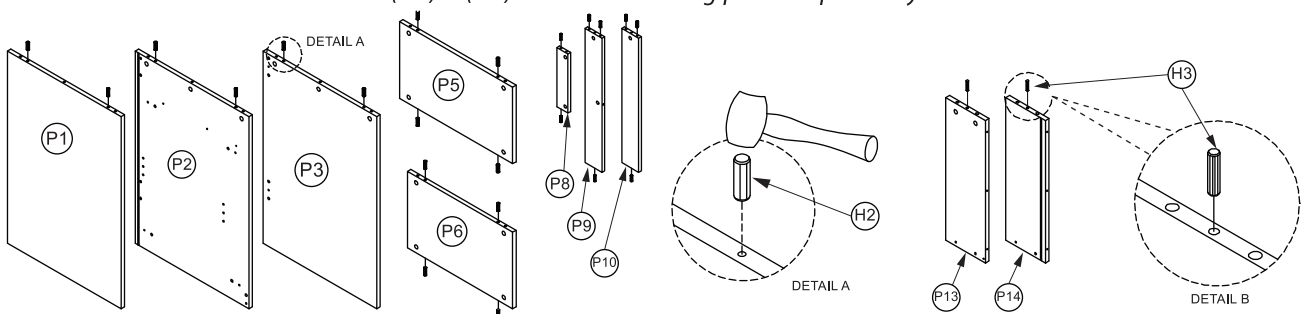


STEP 2 Align the connecting bolts (H4) into the following parts by using a house hold screw driver.

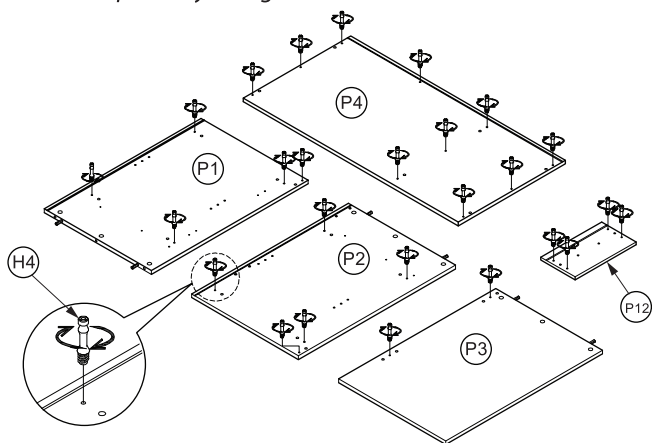

STEP 3 Install one part of the Drawer Slides (H15) onto leg panels (P1) & (P2).

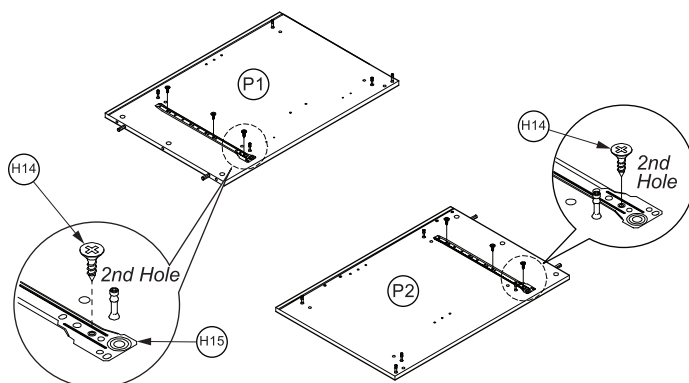


STEP 4 Assemble parts of the Storage Compartment.

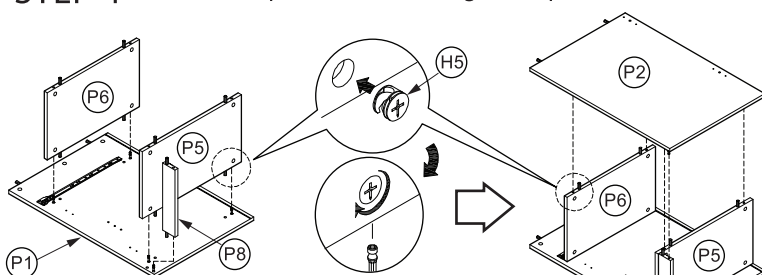


Align the Camlock & turn it to locked position when it is connected to the bolts.


STEP 5

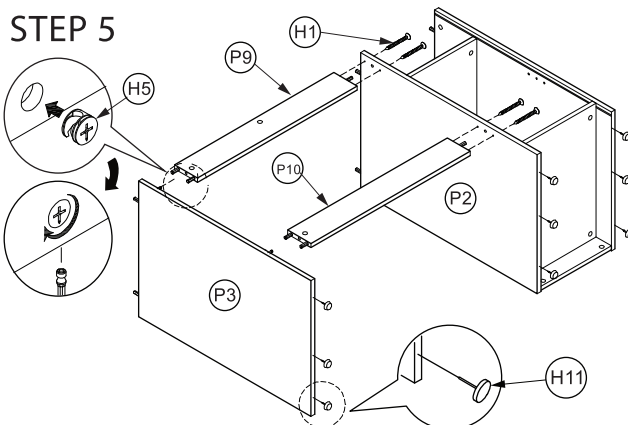

STEP 6

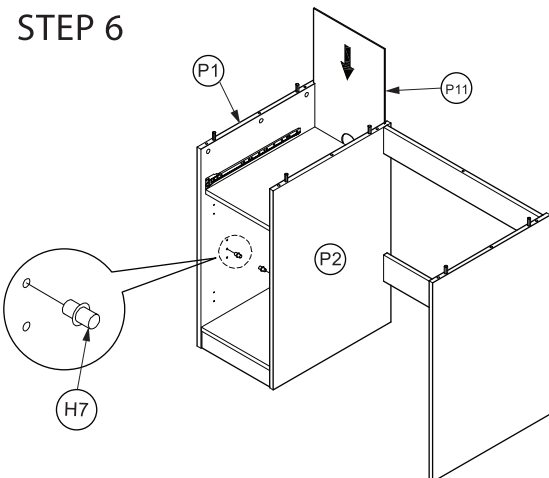


STEP 7

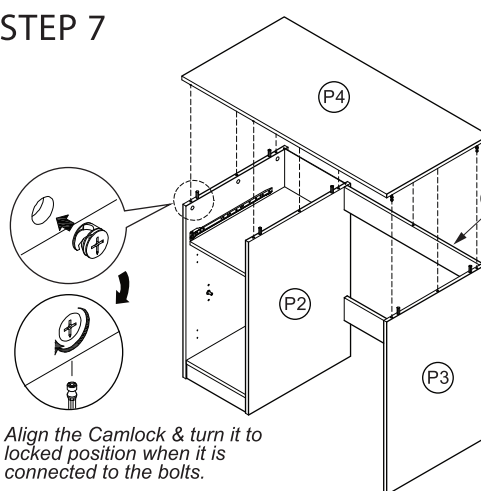


Align the Camlock & turn it to locked position when it is connected to the bolts.

STEP 8 Assembly of Door Hinges & a Pull Handle.

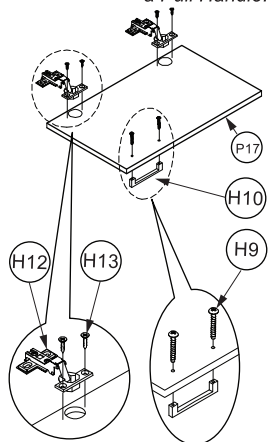

STEP 9 Drawer assembly.

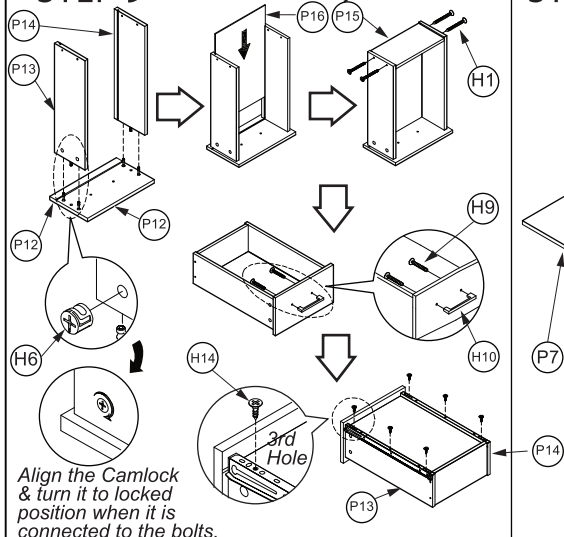

Align the Camlock & turn it to locked position when it is connected to the bolts.

STEP 10

