





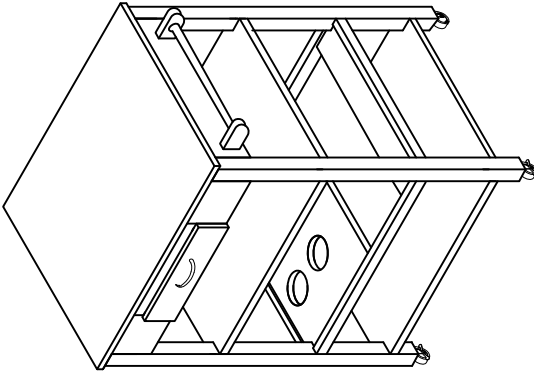






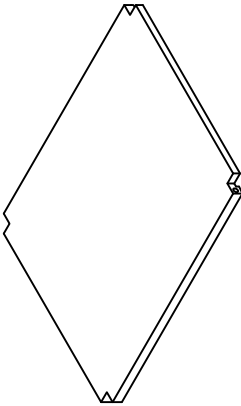
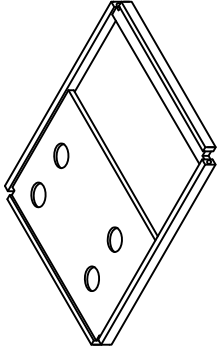
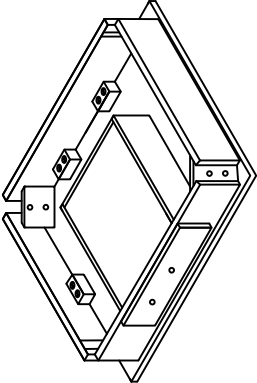
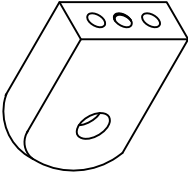

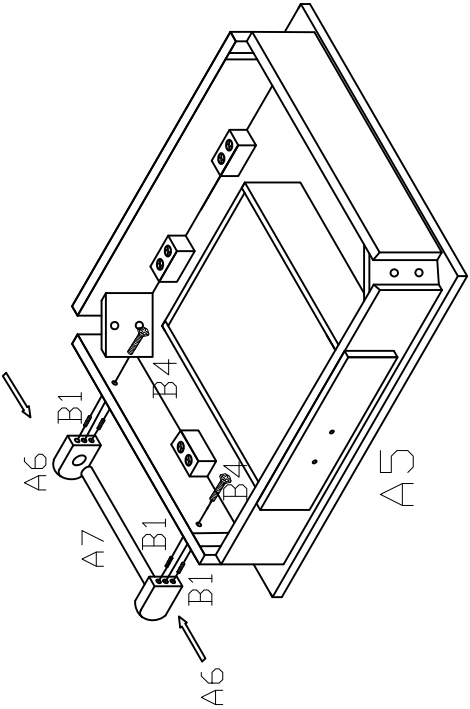
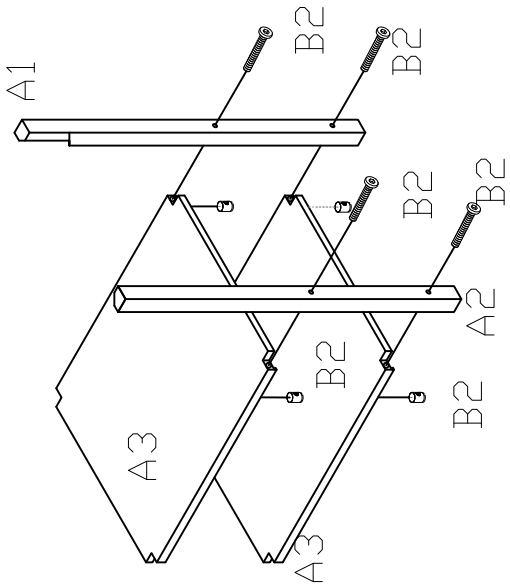
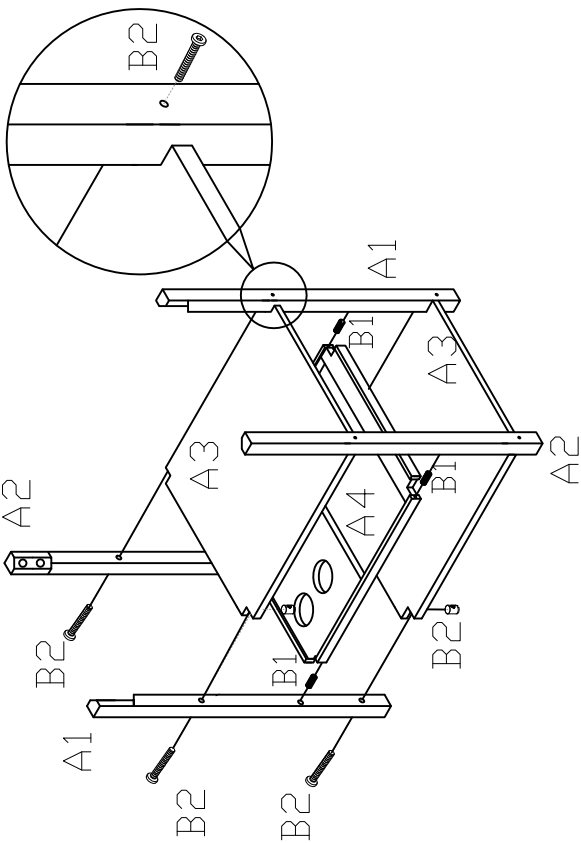
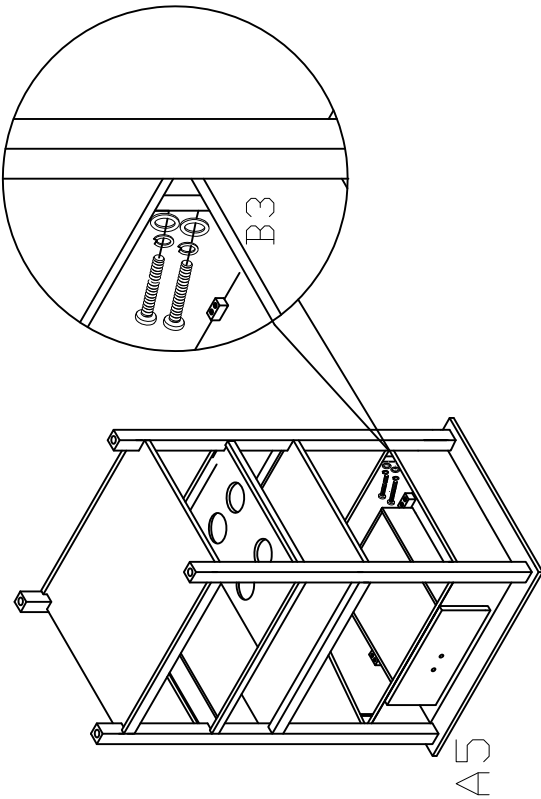
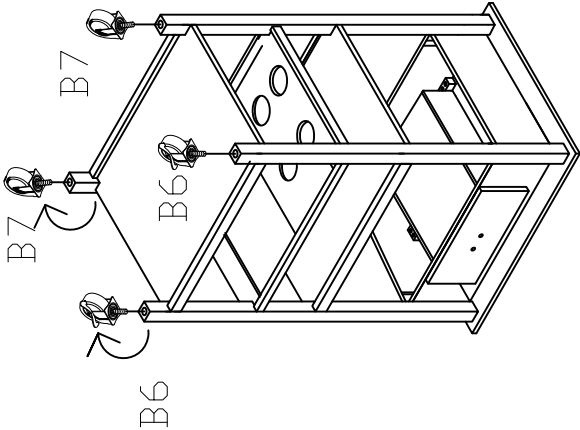
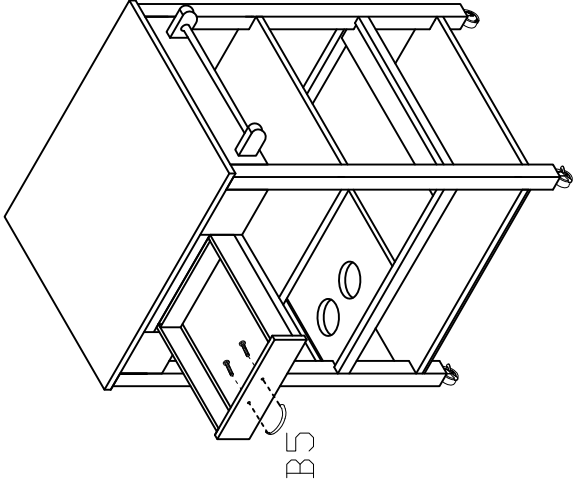
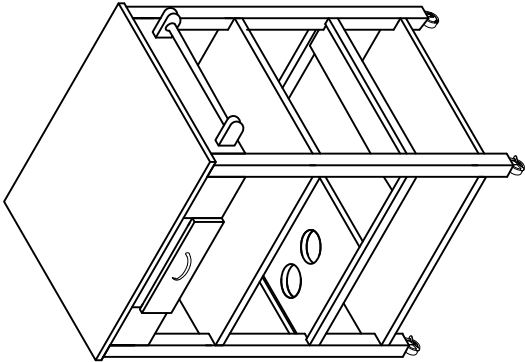


<div> Assembly Instruction <div>Style#K02</div> </div>	Tools Required	Hardware Provided
<div> <div>Kitchen Buffet</div>  </div>	<div>  <div>Phillips screwdriver</div> <div>(Provided)</div>  <div>Allen key</div> </div>	<div> <div>  <div>B1</div> <div>8PCS</div> </div> <div>  <div>B2</div> <div>8SETS</div> </div> <div>  <div>B3</div> <div>8SETS</div> </div> <div>  <div>B4</div> <div>2PCS</div> </div> <div>   <div>B5</div> <div>1SET</div> </div> <div>  <div>B6</div> <div>2PCS</div> </div> <div>  <div>B7</div> <div>2PCS</div> </div> </div>
Furniture Parts		
<div> <div>A1 2pcs</div>  </div> <div> <div>A2 2pcs</div>  </div> <div> <div>A3 2pcs</div>  </div> <div> <div>A4 1pcs</div>  </div> <div> <div>A5 1pcs</div>  </div> <div> <div>A6 2pcs</div>  </div> <div> <div>A7 1pcs</div>  </div>		

Step 1	Step 2
	
Step3	Step 4
	

<div data-bbox="100 1496 151 1624" data-label="Caption"><p>Step 5</p></div>	<div data-bbox="188 1469 770 1897" data-label="Image"><p>A perspective line drawing of a wooden frame assembly. The frame consists of several horizontal and vertical slats. Four screws are shown being inserted into the frame: two at the top corners labeled B7, and two at the bottom corners labeled B6. Curved arrows indicate the direction of screw insertion.</p></div>
<div data-bbox="100 568 151 685" data-label="Caption"><p>Step 6</p></div>	<div data-bbox="173 430 748 909" data-label="Image"><p>A perspective line drawing of a wooden frame assembly. The frame is similar to the one in Step 5 but includes a central vertical support. A screw labeled B5 is shown being inserted into the central support. A curved arrow indicates the direction of insertion.</p></div>
<div data-bbox="790 1055 841 1180" data-label="Caption"><p>Step 7</p></div>	<div data-bbox="922 990 1449 1350" data-label="Image"><p>A perspective line drawing of the final assembled wooden frame. It shows a complete structure with multiple horizontal and vertical slats, a central vertical support, and a flat top panel.</p></div>