


# ASSEMBLY INSTRUCTIONS


## Style # R1125 Step Stool

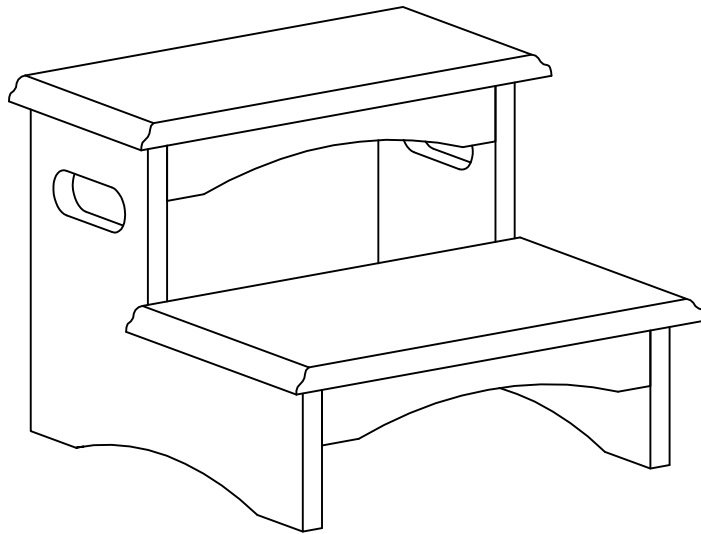

### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## Parts List:

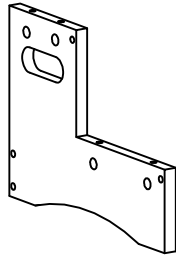

A1(L/R): Side Panel 2PCS



A2: Front Apron 2PCS



A3: Back Apron 1PC




A4: Top Panel 2PCS

## Hardware List:



B1: Camlock 16SETS

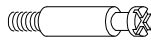

B2: Screw 2PCS





### Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


### To use Dowels:

1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.


### To use Cam Locks:
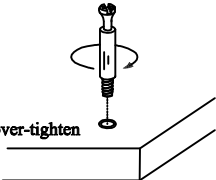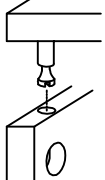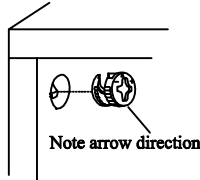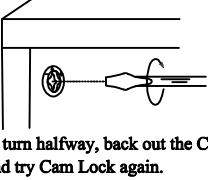
<p>1. Insert Cam Pin until snug</p>  <p>Do not over-tighten</p>	<p>2. Set boards together</p> 	<p>3. Insert Cam Lock</p>  <p>Note arrow direction</p>	<p>4. Turn Cam Lock clockwise (half a turn)</p>  <p>if it won't turn halfway, back out the Cam Pin <math>\frac{1}{4}</math> turn and try Cam Lock again.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



**Step 1: Assemble Front Aprons A2 and Back Apron A3 to Side Panel A1R using Camlocks B1.**

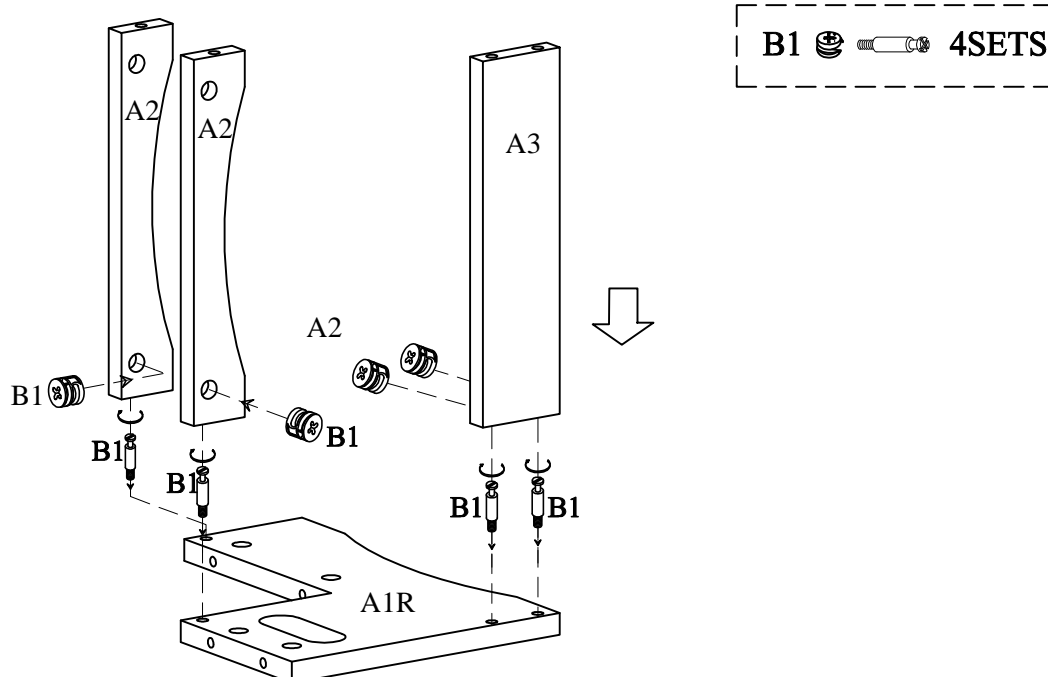

**Step 1: Repeat step 1 to assemble Front Aprons A2 and Back Apron A3 to Side Panel A1L.**

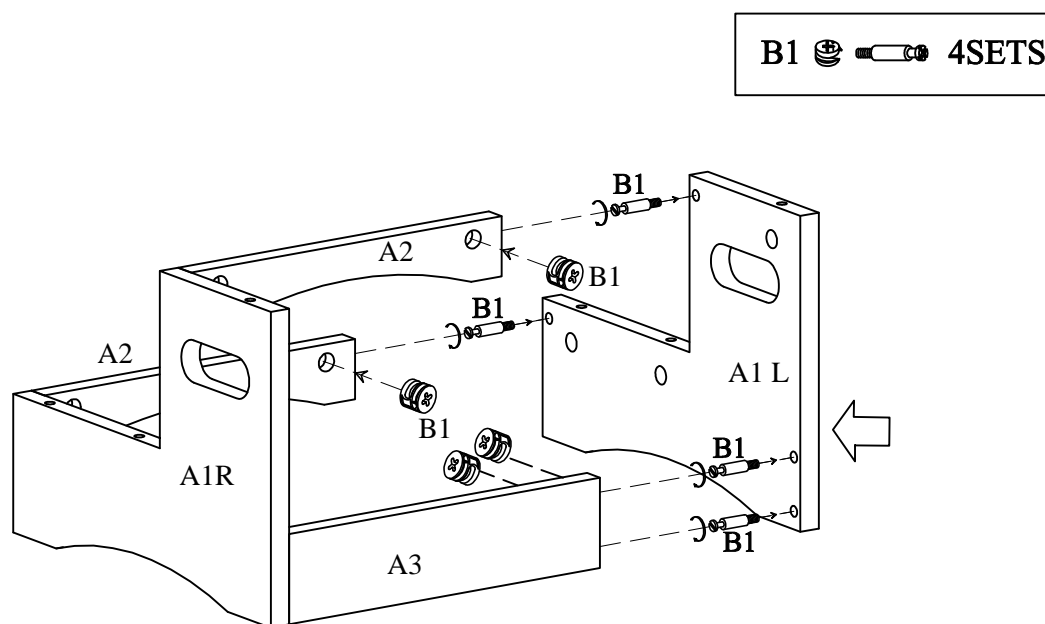

Step 3: Assemble Top Panels A4 to Side Panels A1 using camlocks B1.

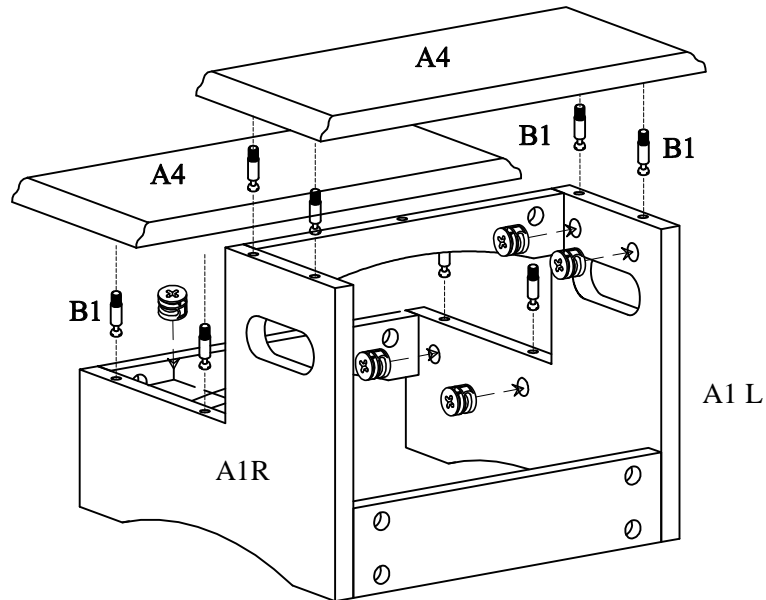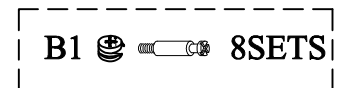

Step 4: Tighten Top Panels A1 to Front Aprons A2 using Screws B2.

