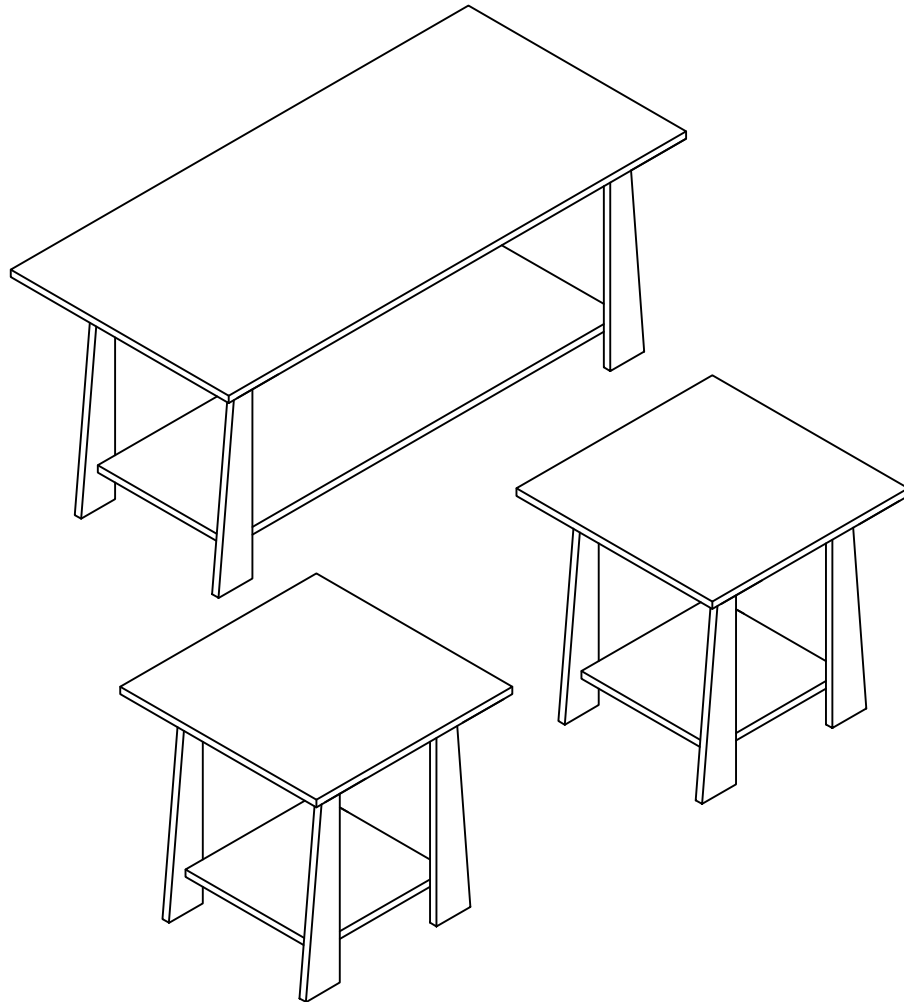


ASSEMBLY INSTRUCTIONS

Style # T997 3 Pack Table



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)

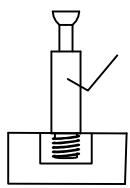
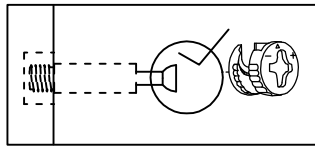


Diagram A



1. Insert cam screw into hole as shown in diagram A .

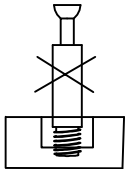
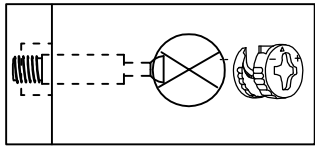


Diagram B



Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.

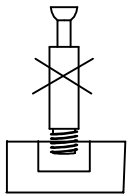
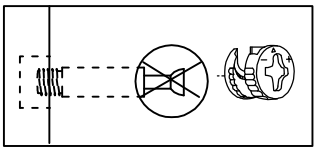
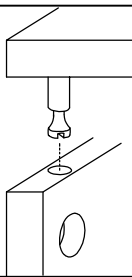


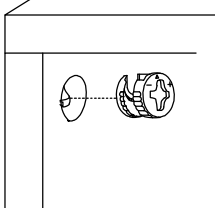
Diagram C



Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



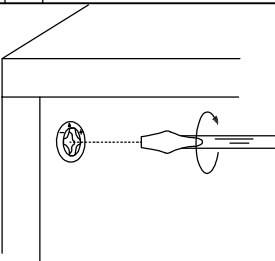
2. Connect the panels together.



ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.





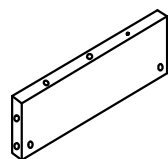
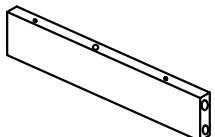
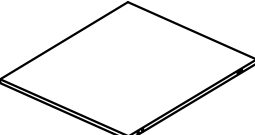
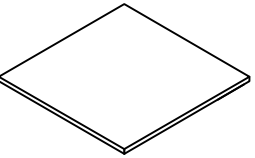


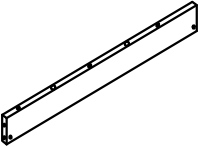
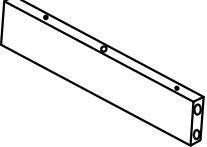
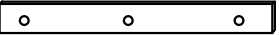
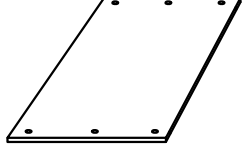
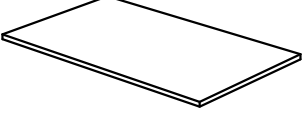
4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**

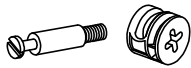


Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.




Part List

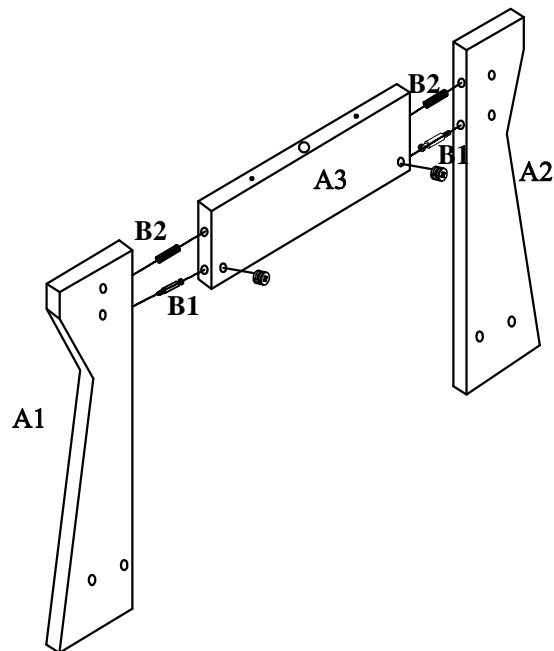
<p>A1. Quantity of 4</p>  <p>Leg for end table</p>	<p>A2. Quantity of 4</p>  <p>Leg for end table</p>	<p>A3. Quantity of 4</p>  <p>Short Apron for end table</p>	<p>A4. Quantity of 4</p>  <p>Long Apron for end table</p>
<p>A5. Quantity of 2</p>  <p>Bottom Panel for end table</p>	<p>A6. Quantity of 2</p>  <p>Top Panel for end table</p>	<p>A7. Quantity of 2</p>  <p>Leg for coffee table</p>	<p>A8. Quantity of 2</p>  <p>Leg for coffee table</p>
<p>A9. Quantity of 2</p>  <p>Long Apron for coffee table</p>	<p>A10. Quantity of 2</p>  <p>Short Apron for coffee table</p>	<p>A11. Quantity of 2</p>  <p>Support Bar</p>	<p>A12. Quantity of 1</p>  <p>Bottom Panel for coffee table</p>
<p>A13. Quantity of 1</p>  <p>Top Panel for coffee table</p>			

Hardware List

<p>B1. Quantity of 40</p>  <p>Camlock</p>	<p>B2. Quantity of 42</p>  <p>Wood Dowel</p>	<p>B3. Quantity of 26</p>  <p>Screw</p>	
--	---	---	--

STEP 1




B1			8sets
B2			8pcs

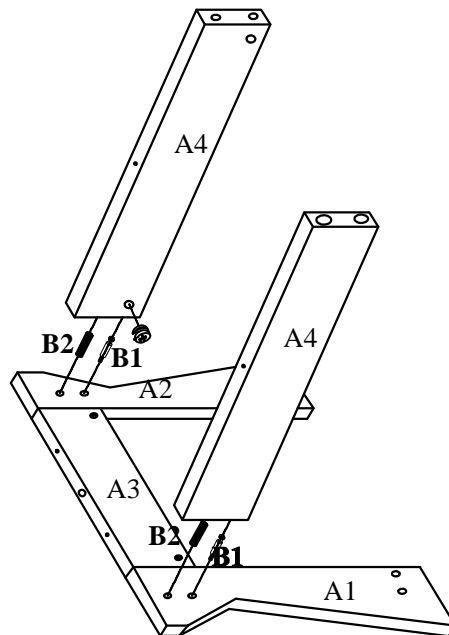


X4

Assemble Legs A1 & A2 to Short Apron A3 using Camlocks B1 and Wood Dowels B2.

STEP 2





B1			4sets
B2			4pcs

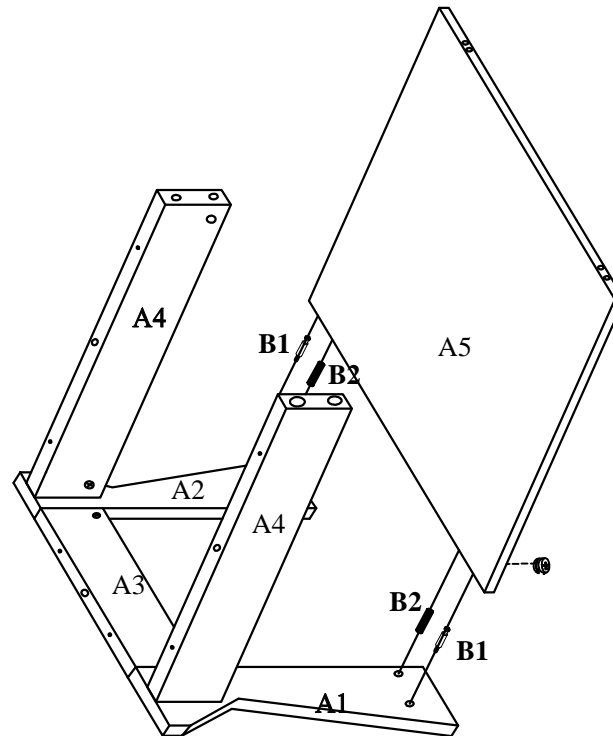


X2

Assemble Long Aprons A4 to Legs A1 & A2 using Camlocks B1 and Wood Dowels B2.

STEP 3





B1			4sets
B2			4pcs

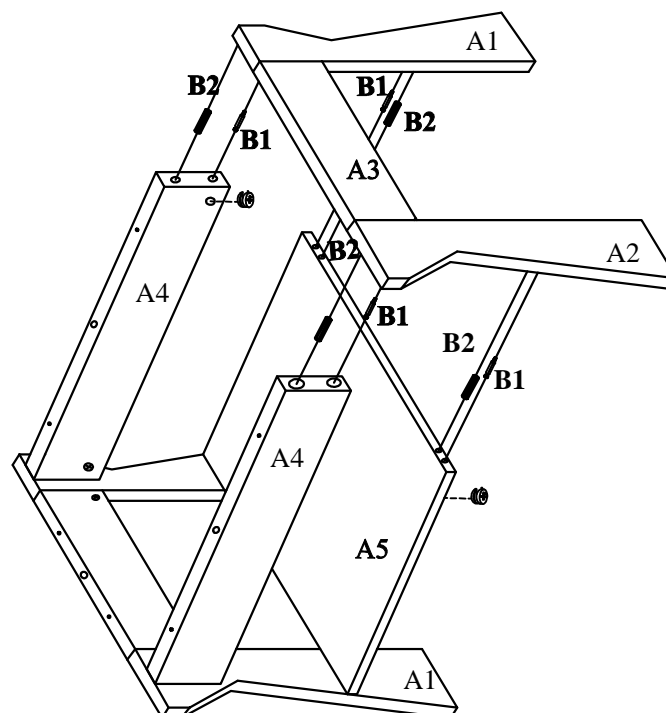


X2

Assemble Bottom Panel A5 to Legs A1&A2 using Camlocks B1 and Wood Dowels B2.

STEP 4

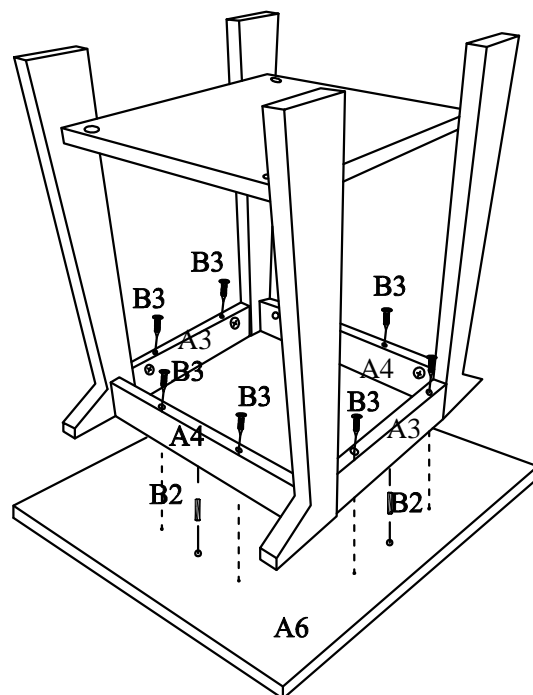
B1			8sets
B2			8pcs





X2

Assemble Legs A1&A2 to Long Aprons A4 and Bottom Panel A5 using Camlocks B1 and Wood Dowels B2.

STEP 5

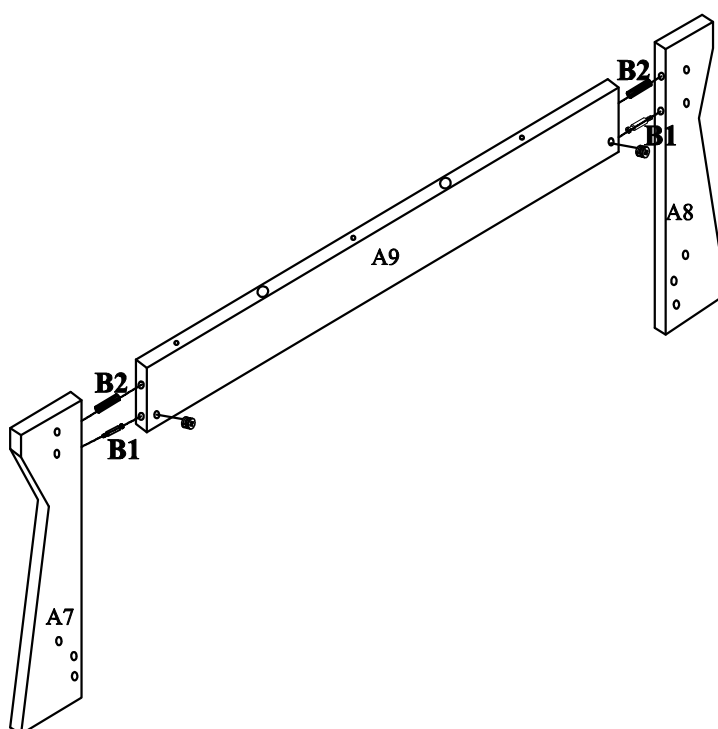




B2		8pcs
B3		16pcs

X2

Assemble Top Panel A6 to Aprons A3&A4 using Wood Dowels B2 and Screws B3.

STEP 6

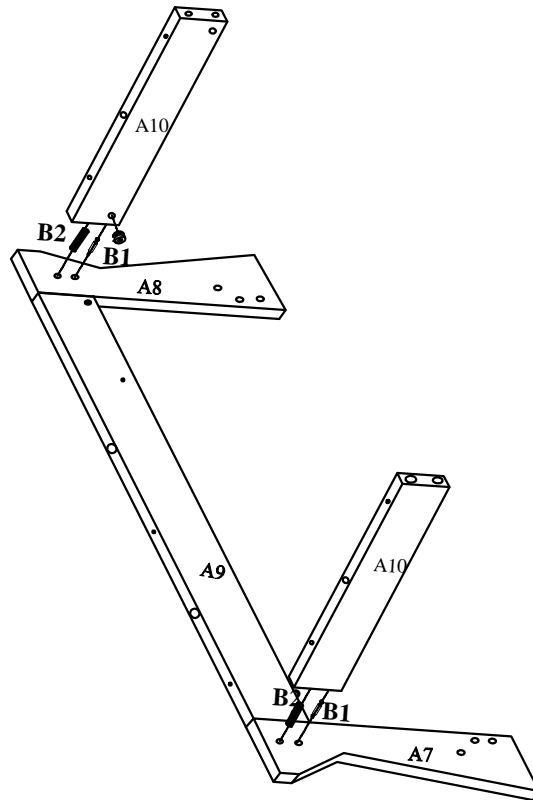





B1		4sets
B2		4pcs

X2

Assemble Legs A7&A8 to Long Apron A9 using Camlocks B1 and Wood Dowels B2.

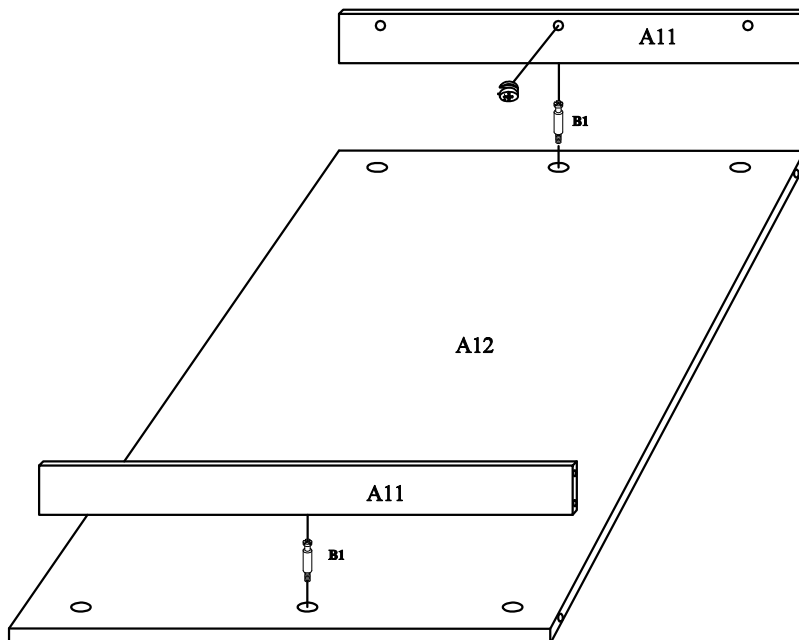
STEP 7





B1   2sets
B2  2pcs

Assemble Short Aprons A10 to Legs A7&A8 using Camlocks B1 and Wood Dowels B2.

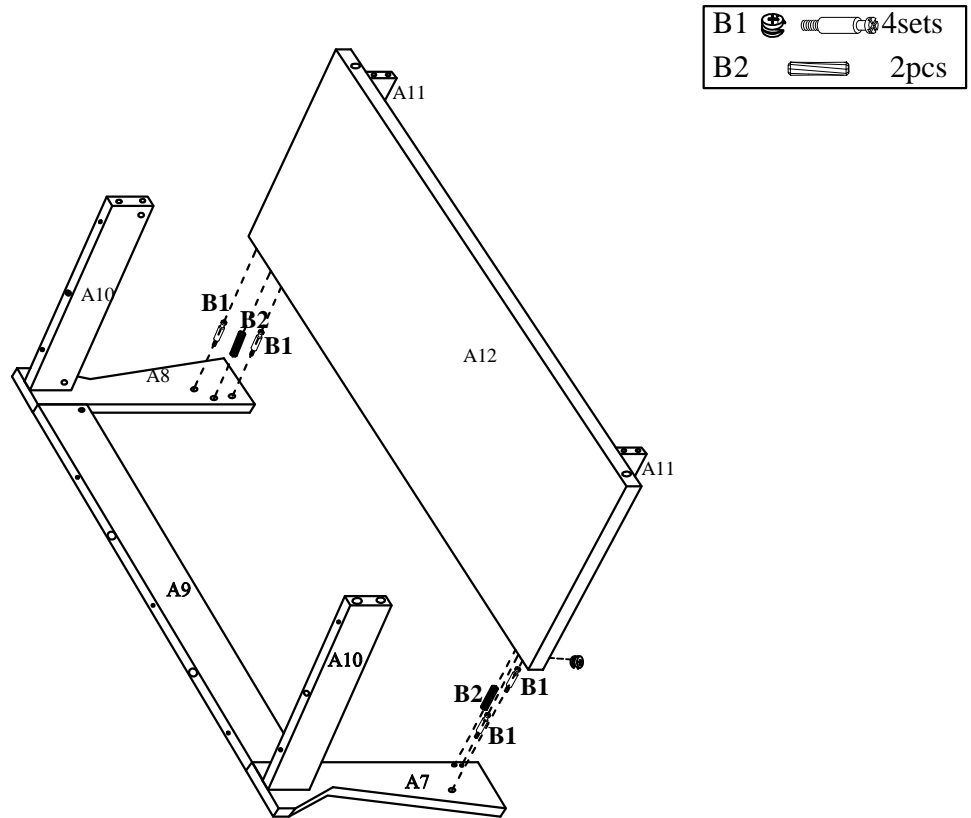
STEP 8



B1   2sets

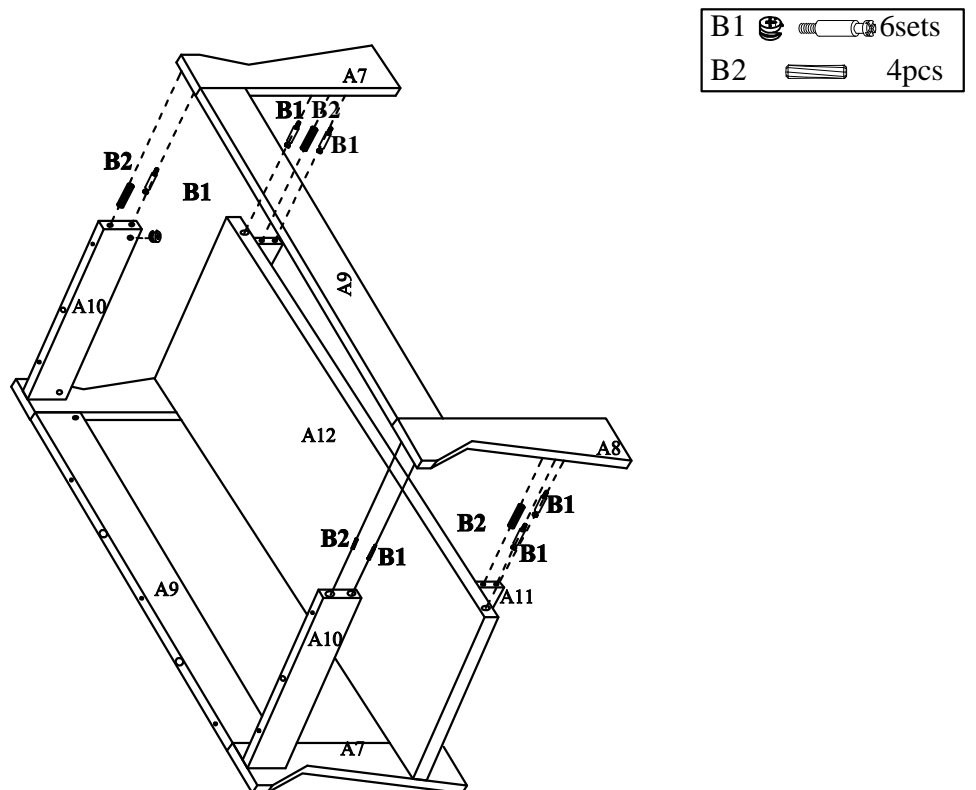
Assemble Support Bars A11 to the bottom of Bottom Panel A12 using Camlocks B1.

STEP 9





Assemble Support Bars A11 and Bottom Panel A12 to Legs A7&A8 using Camlocks B1 and Wood Dowels B2.

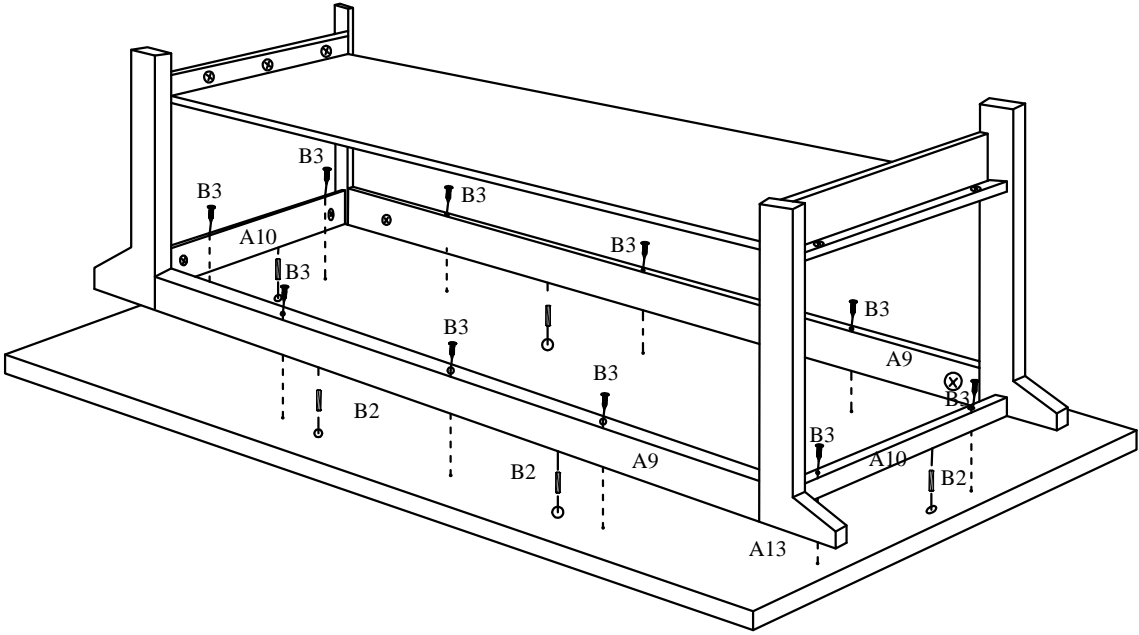
STEP 10



Assemble Legs A7&A8 to Bottom Panel A12, Short Aprons A10 and Support Bar A11 using Camlocks B1 and Wood Dowels B2.

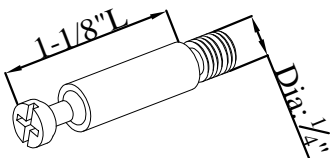
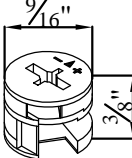
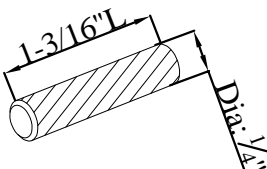
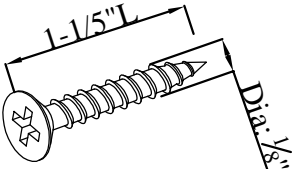
STEP 11

B2		6pcs
B3		10pcs



Assemble Top Panel A13 to Aprons A9&A10 using Wood Dowels B2 and Screws B3.

APPENDIX: Dimension of Hardwares in this AI.

<p>B1.</p>  <p>Cam-bol t</p>	<p>B2.</p>  <p>Cam-nut</p>	<p>B3.</p>  <p>Wood Dowel</p>
<p>B3.</p>  <p>Screw</p>		