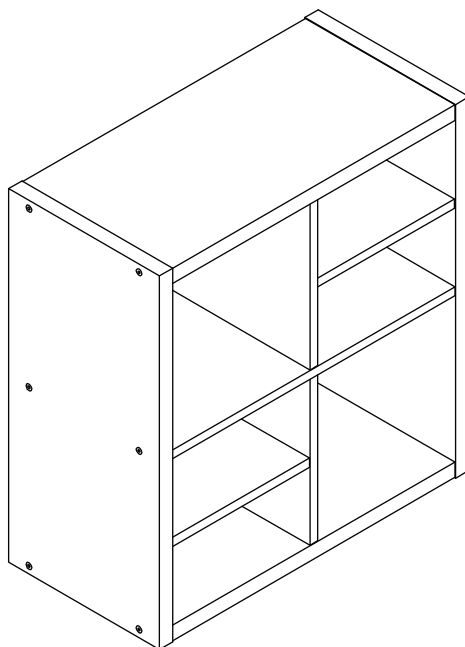


ASSEMBLY INSTRUCTIONS

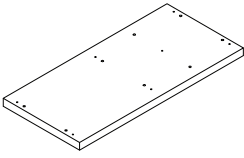
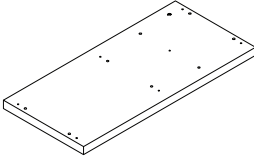
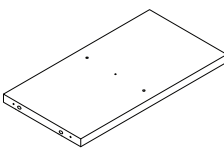
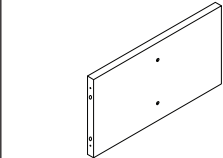
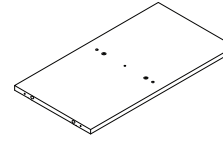





BOOKCASE













NOTE TO CUSTOMERS:


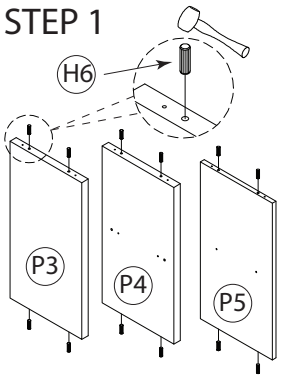
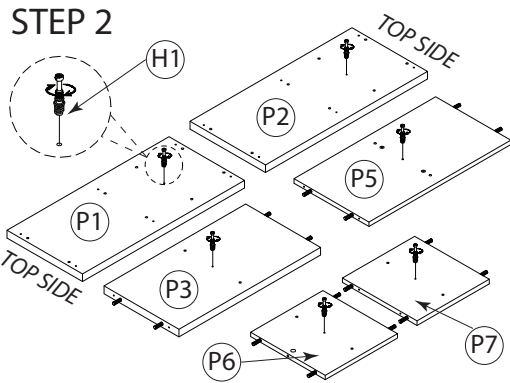
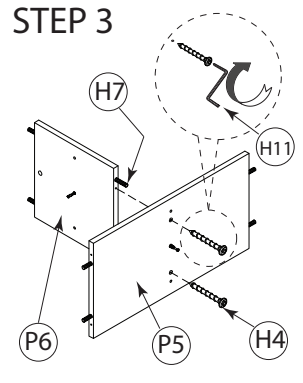
- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

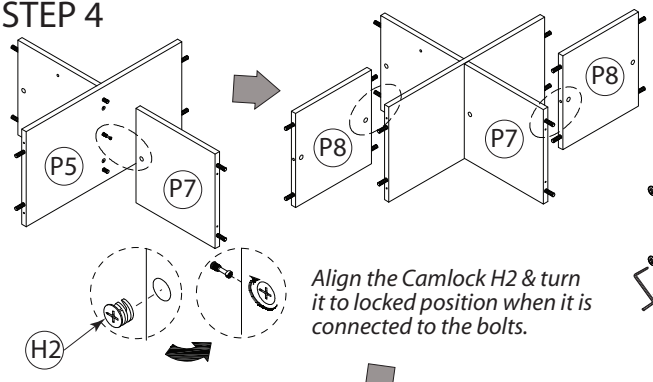
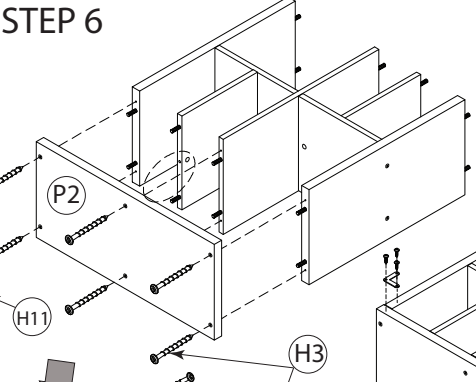
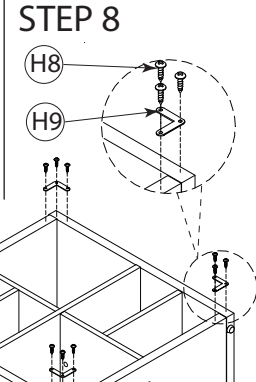
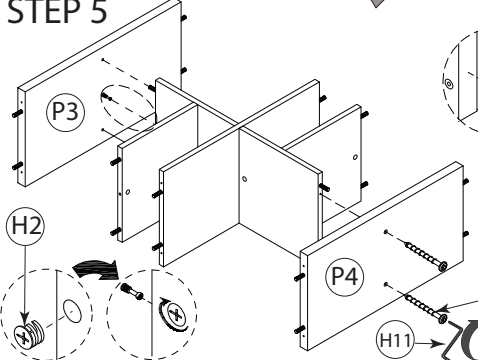
PARTS IDENTIFICATION

P1 Quantity: 1  Side Panel Left	P2 Quantity: 1  Side Panel Right	P3 Quantity: 1  Top Panel	P4 Quantity: 1  Base Panel	P5 Quantity: 1  Middle Shelf Panel
P6 Quantity: 1  Upper Divider Panel	P7 Quantity: 1  Lower Divider Panel	P8 Quantity: 2  Shelf Panel	TOOLS REQUIRED  SCREW DRIVER  MALLET	

HARDWARE LIST

H1 Connecting Bolt  Quantity: 6 pcs	H2 Cam Lock 15/12.5mm  Quantity: 6 pcs	H3 Flat head screw M6 x 60  Quantity: 14 pcs	H4 Flat head screw M6 x 40  Quantity: 2 pcs	H5 Leg stud  Quantity: 4 pcs
H6 Wood dowel M8 x 25  Quantity: 24 pcs	H7 Wood dowel M8 x 50  Quantity: 2 pcs	H8 Screw M3.5 x 14  Quantity: 12 pcs	H9 L-Metal plate  Quantity: 4 pcs	H10 Sticker  Quantity: 14 pcs

H11 Allen Key  Quantity: 1 pc	STEP 1 	STEP 2 	STEP 3 
---	---	--	---

STEP 4  <p>Align the Camlock H2 & turn it to locked position when it is connected to the bolts.</p>	STEP 6 	STEP 8 
STEP 5 	STEP 7 