


# ASSEMBLY INSTRUCTIONS



















## MODEL #C6000 - CONSOLE

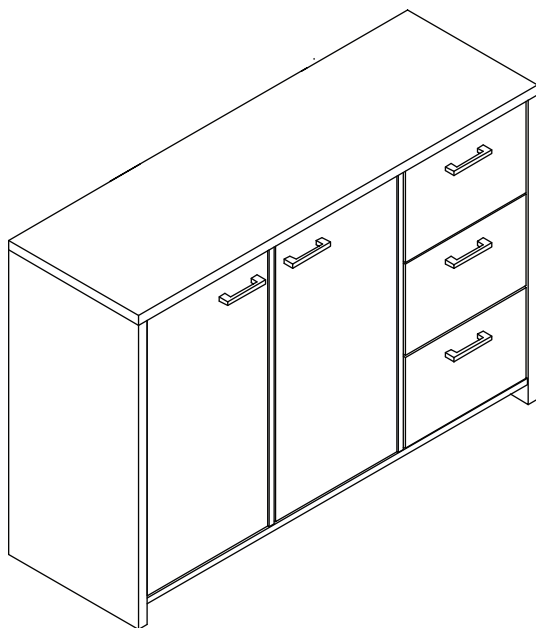

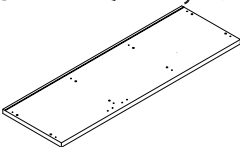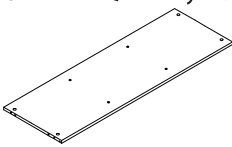





















### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## PARTS IDENTIFICATION

<b>P1</b> Quantity: 1  Side Panel-Left	<b>P2</b> Quantity: 1  Side Panel-Right	<b>P3</b> Quantity: 1  Top Panel	<b>P4</b> Quantity: 1  Base Panel	<b>P5</b> Quantity: 1  Inside Vertical Panel- Left
<b>P6</b> Quantity: 1  Inside Vertical Panel- Right	<b>P7</b> Quantity: 2  Adjustable Shelves	<b>P8</b> Quantity: 3  Back Panel	<b>P9</b> Quantity: 1  Base panel support bar	<b>P10</b> Quantity: 1  Left Door
<b>P11</b> Quantity: 1  Right Door	<b>P12</b> Quantity: 3  Drawer Front	<b>P13</b> Quantity: 3  Drawer Side-Left	<b>P14</b> Quantity: 3  Drawer Side-Right	<b>P15</b> Quantity: 3  Drawer Back
<b>P16</b> Quantity: 3  Drawer Base	<h3>TOOLS REQUIRED</h3> <div>   Household screw driver </div> <div>   Hammer </div>			


## HARDWARE LIST

<b>H1</b> Screw #9 x 1 1/2"  Quantity: 16 pcs	<b>H2</b> Connecting Bolts  Quantity: 24 pcs	<b>H3</b> Cam Lock 15/12.5mm  Quantity: 12 pcs	<b>H4</b> Cam Lock 12/9.5mm  Quantity: 12 pcs	<b>H5</b> Wood Dowel M8 x 25  Quantity: 20 pcs
<b>H6</b> Drawer slides  Quantity: 3 set	<b>H7</b> Screw for slides m4 x 12  Quantity: 36 pcs	<b>H8</b> Door Handle  Quantity: 5 pcs	<b>H9</b> Screw for Door handle #6x20  Quantity: 10 pcs	<b>H10</b> Door Stopper  Quantity: 2 pcs
<b>H11</b> Screw for Door Stopper & Strap m3.5 x 16  Quantity: 3 pcs	<b>H12</b> Anti-Tip Strap  Quantity: 1 pc	<b>H13</b> Metal Bracket  Quantity: 2 pcs	<b>H14</b> Screw for Bracket & Hinges m3.5 x 14  Quantity: 20 pcs	<b>H15</b> Hinges  Quantity: 4 sets
<b>H16</b> Corner Wedges  Quantity: 8 pcs	<b>H17</b> Screw for Wedges m3 x 20  Quantity: 8 pcs	<b>H18</b> Leg Stud  Quantity: 6 pcs	<b>H19</b> Wood Dowel M6 x 25  Quantity: 6 pcs	<b>H20</b> Shelf Support Pin  Quantity: 8 pcs
<b>H21</b> Wall Plug for H22  Quantity: 1 pc	<b>H22</b> Screw #6 x 1 1/4" for mounting Anti-Tip strap to the wall  Quantity: 1 pc			


### STEP 2 Align connecting bolts H2

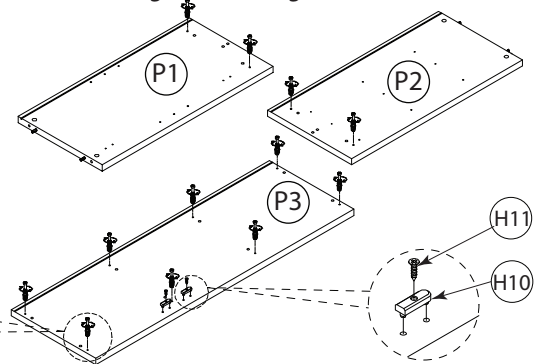


### STEP 1

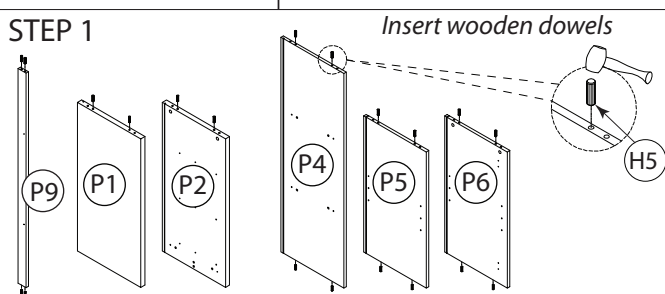


### STEP 3 Install Drawer Slides

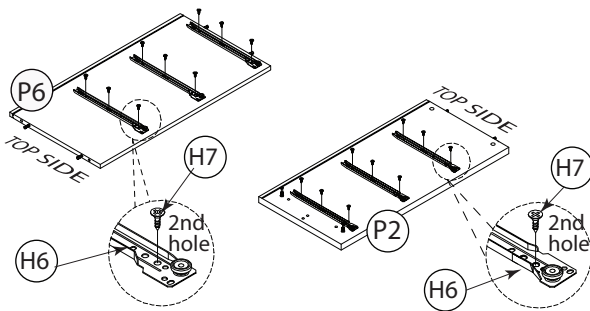


### STEP 4 Install Door Hinges & Handles.

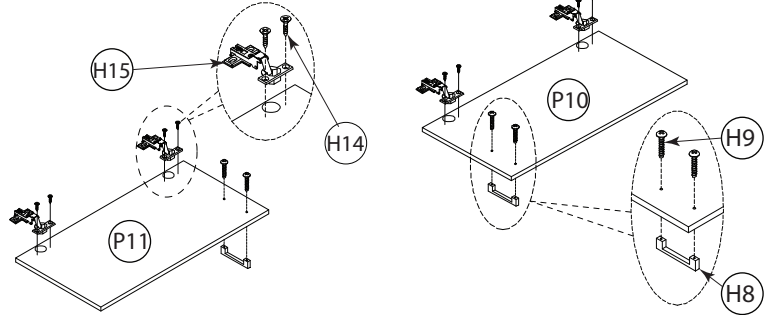


### STEP 5

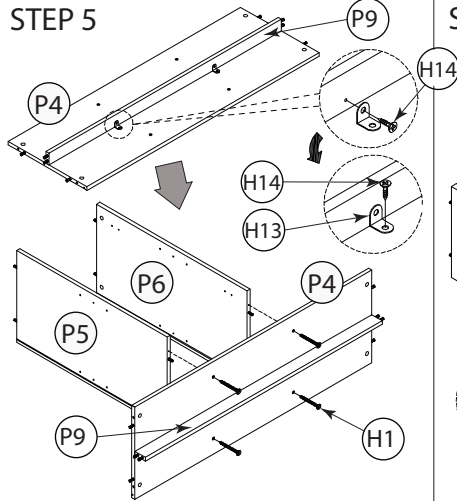

### STEP 6

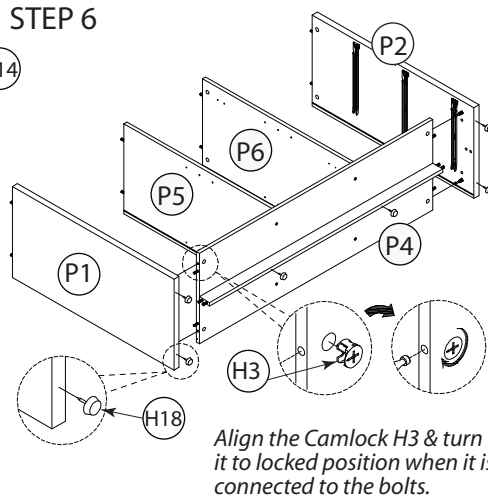


### STEP 7

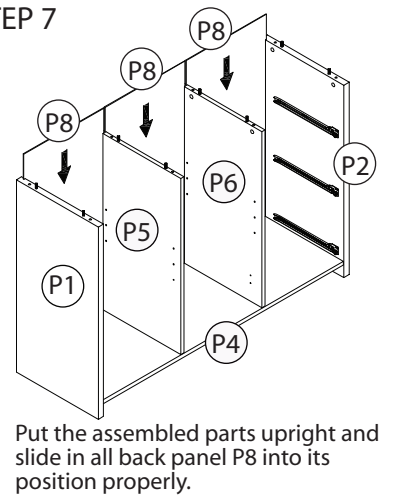


### STEP 8


#### Install Top Panel P3

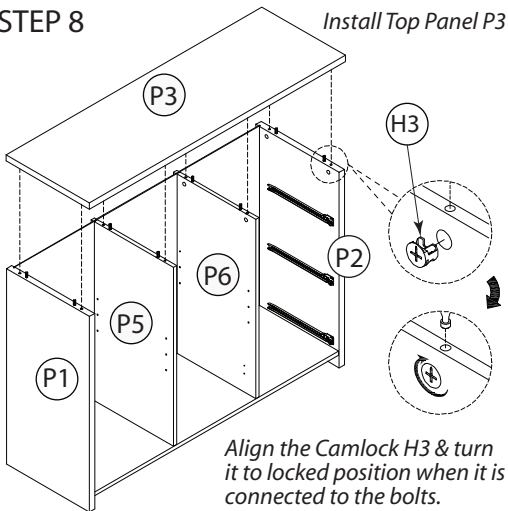


### STEP 9

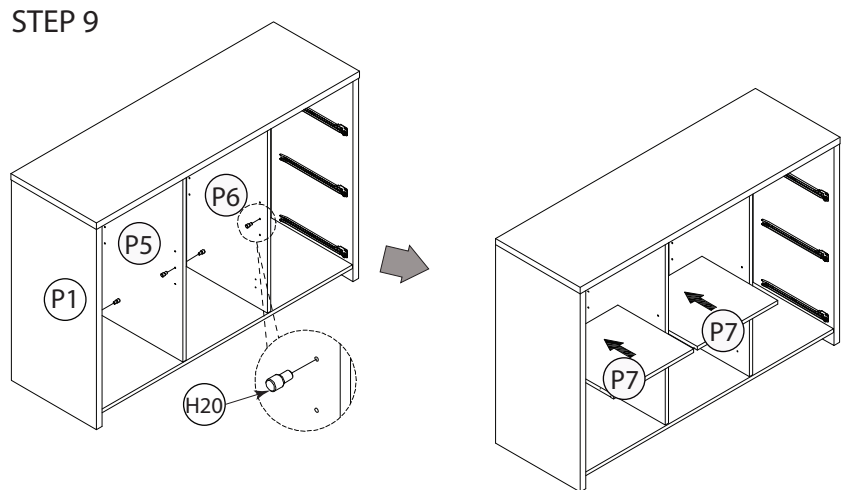


### STEP 10

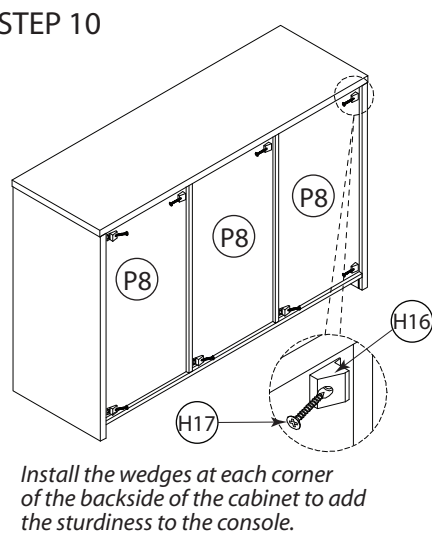

### STEP 11

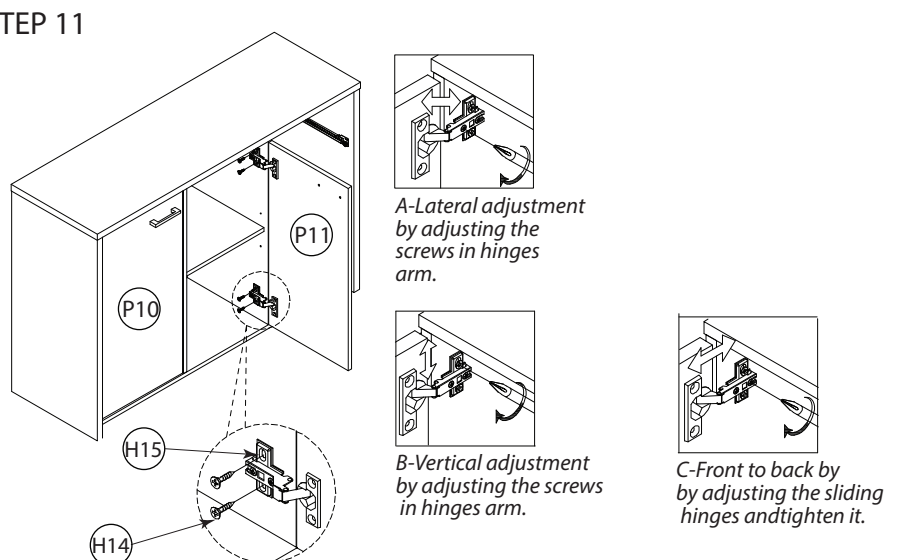

## STEP 12 Assemble all 3 sets of drawers.

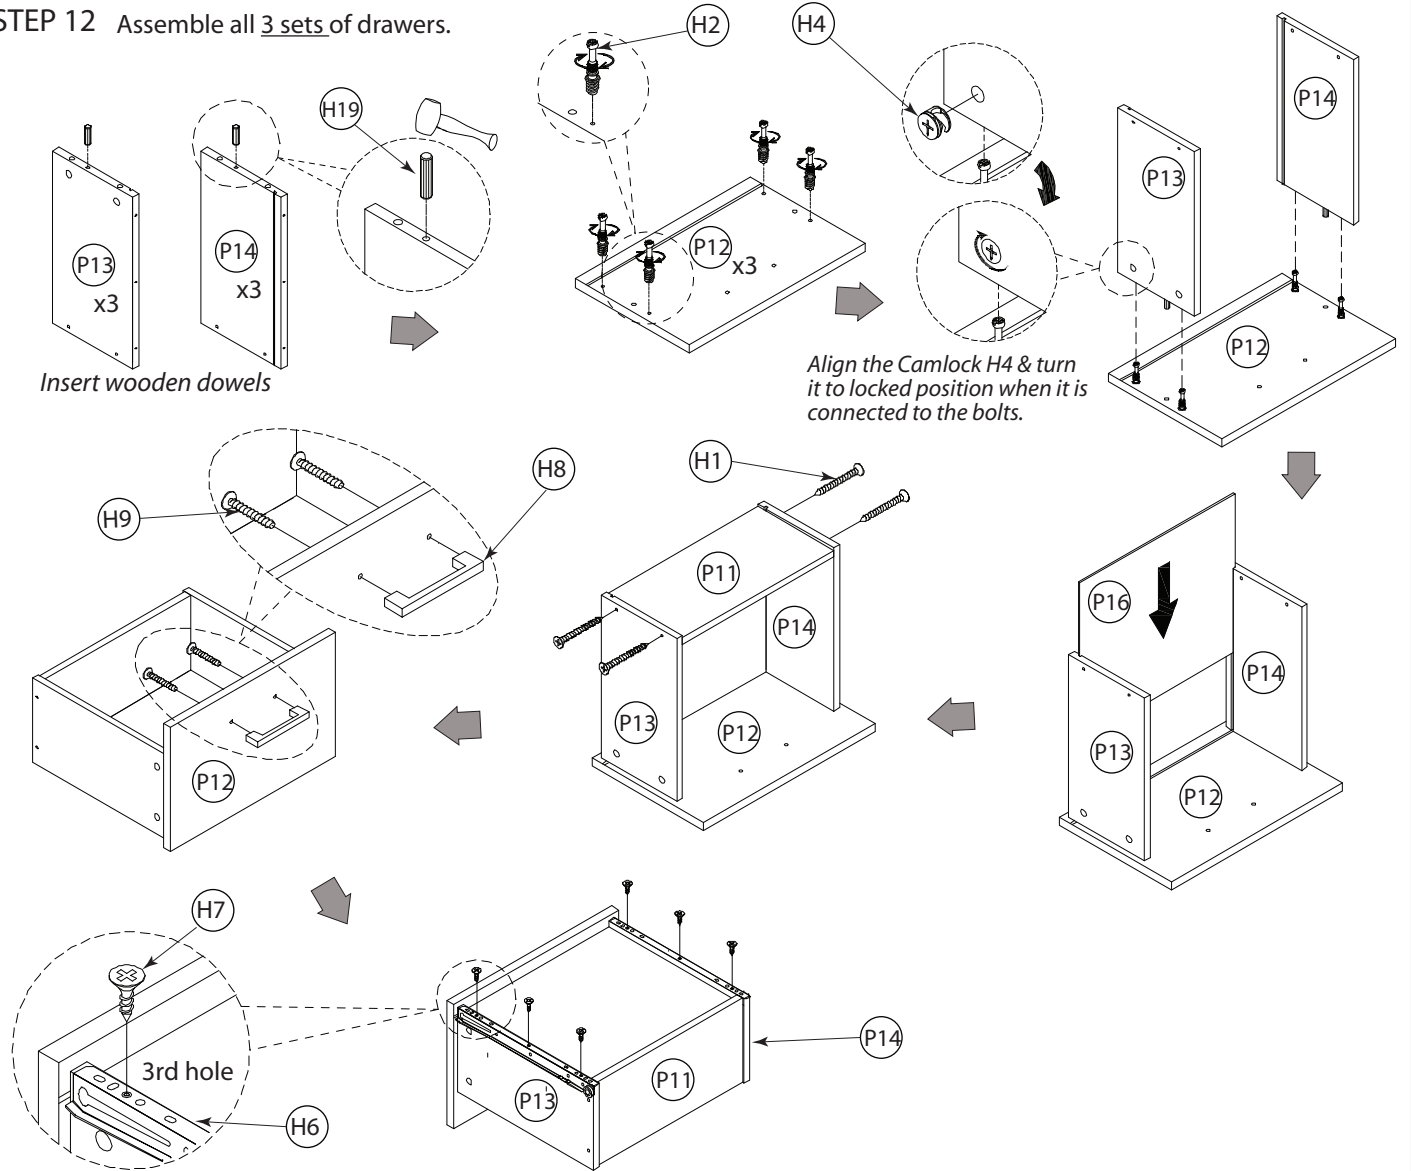

## STEP 13

