


ASSEMBLY INSTRUCTIONS


ITEM NO: B1305

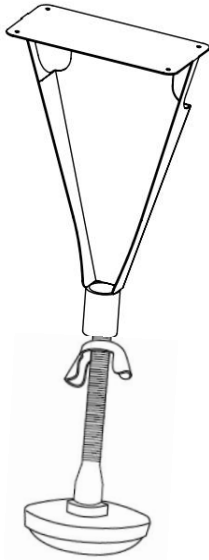

Parts & Hardware

<p>(A) (1pc)</p>	<p>(B) (1set)</p>
-------------------------	--------------------------

<p>① (4 pcs)</p> <p>Screw</p>	
--------------------------------------	--

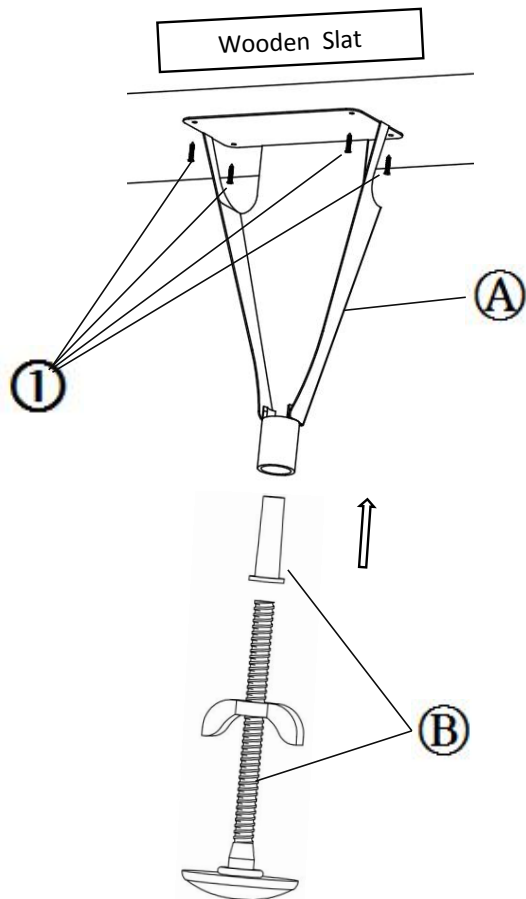

Wooden Slat

①  4 pcs

Tools Needed:
1: Phillips Head Screwdriver
 (Not Provided)
2: Wrench (Not Provided)

<p>for height (from the wooden slat to floor) 7.5"-10"</p>	<p>for height (from the wooden slat to floor) 10"-14"</p>