


ASSEMBLY INSTRUCTIONS


Style # C1274/C1277/C1278 Console Table

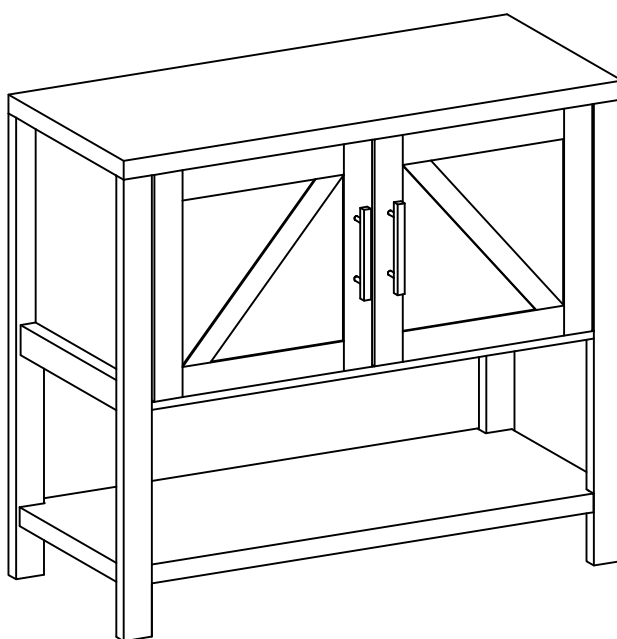


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- It is recommended that this item should be assembled by two adults.


To insert a cam lock: (Please read below instructions before assembling)

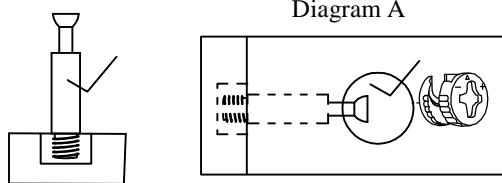


1. Insert cam screw into hole as shown in diagram A .

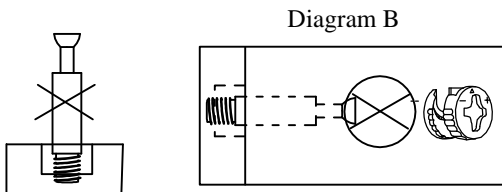


Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.

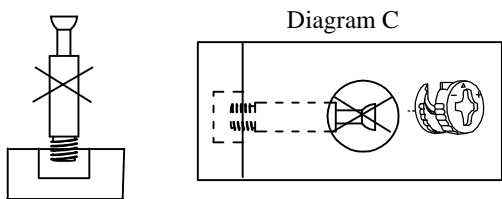


Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

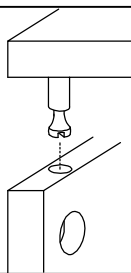

2. Connect the panels together.

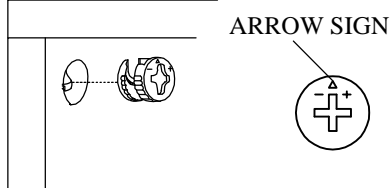

3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

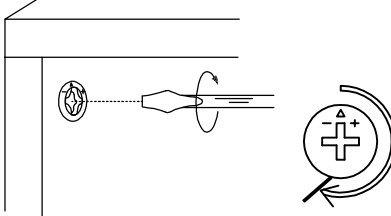




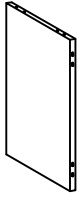
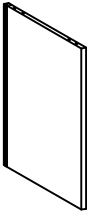
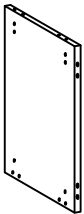
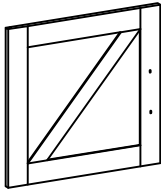
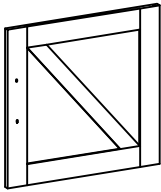
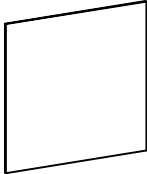
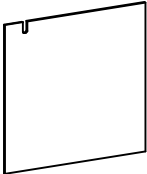
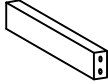




4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**









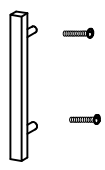




Note:

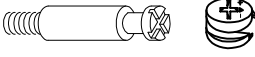
- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List

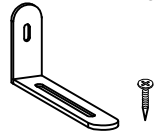
<p>① Quantity of 1</p>  <p>Top Panel</p>	<p>② Quantity of 1</p>  <p>Divider Panel</p>	<p>③ Quantity of 1</p>  <p>Bottom Shelf</p>	<p>④ Quantity of 1</p>  <p>Side Panel(Left)</p>
<p>⑤ Quantity of 1</p>  <p>Center Divider</p>	<p>⑥ Quantity of 1</p>  <p>Side Panel(Right)</p>	<p>⑦ Quantity of 1</p>  <p>Door(Left)</p>	<p>⑧ Quantity of 1</p>  <p>Door(Right)</p>
<p>⑨ Quantity of 1</p>  <p>Back Panel(Left)</p>	<p>⑩ Quantity of 1</p>  <p>Back Panel(Right)</p>	<p>⑪ Quantity of 2</p>  <p>Connect Bar</p>	<p>⑫ Quantity of 1</p>  <p>Front Leg(Left)</p>
<p>⑬ Quantity of 1</p>  <p>Front Leg(Right)</p>	<p>⑭ Quantity of 1</p>  <p>Rear Leg(Left)</p>	<p>⑮ Quantity of 1</p>  <p>Rear Leg(Right)</p>	

Hardware List

<p>A</p> <p>Quantity of 22</p>  <p>Cam-Lock</p>	<p>B</p> <p>Quantity of 28</p>  <p>Wood Dowel</p>	<p>C</p> <p>Quantity of 2</p>  <p>Bolt</p>	<p>D</p> <p>Quantity of 22</p>  <p>Screw</p>
<p>E</p> <p>Quantity of 4</p>  <p>Connect Block</p>	<p>F</p> <p>Quantity of 2</p>  <p>Magnet with Screw</p>	<p>G</p> <p>Quantity of 1</p>  <p>Connect Plate with Screw</p>	<p>H</p> <p>Quantity of 4</p>  <p>Door Pin</p>
<p>I</p> <p>Quantity of 2</p>  <p>Handle with Bolt</p>	<p>J</p> <p>Quantity of 6</p>  <p>Connect Block</p>	<p>K</p> <p>Quantity of 1</p>  <p>Anchor with Screw</p>	<p>L</p> <p>Quantity of 14</p>  <p>Cover</p>
 <p>Allen Wrench</p>			

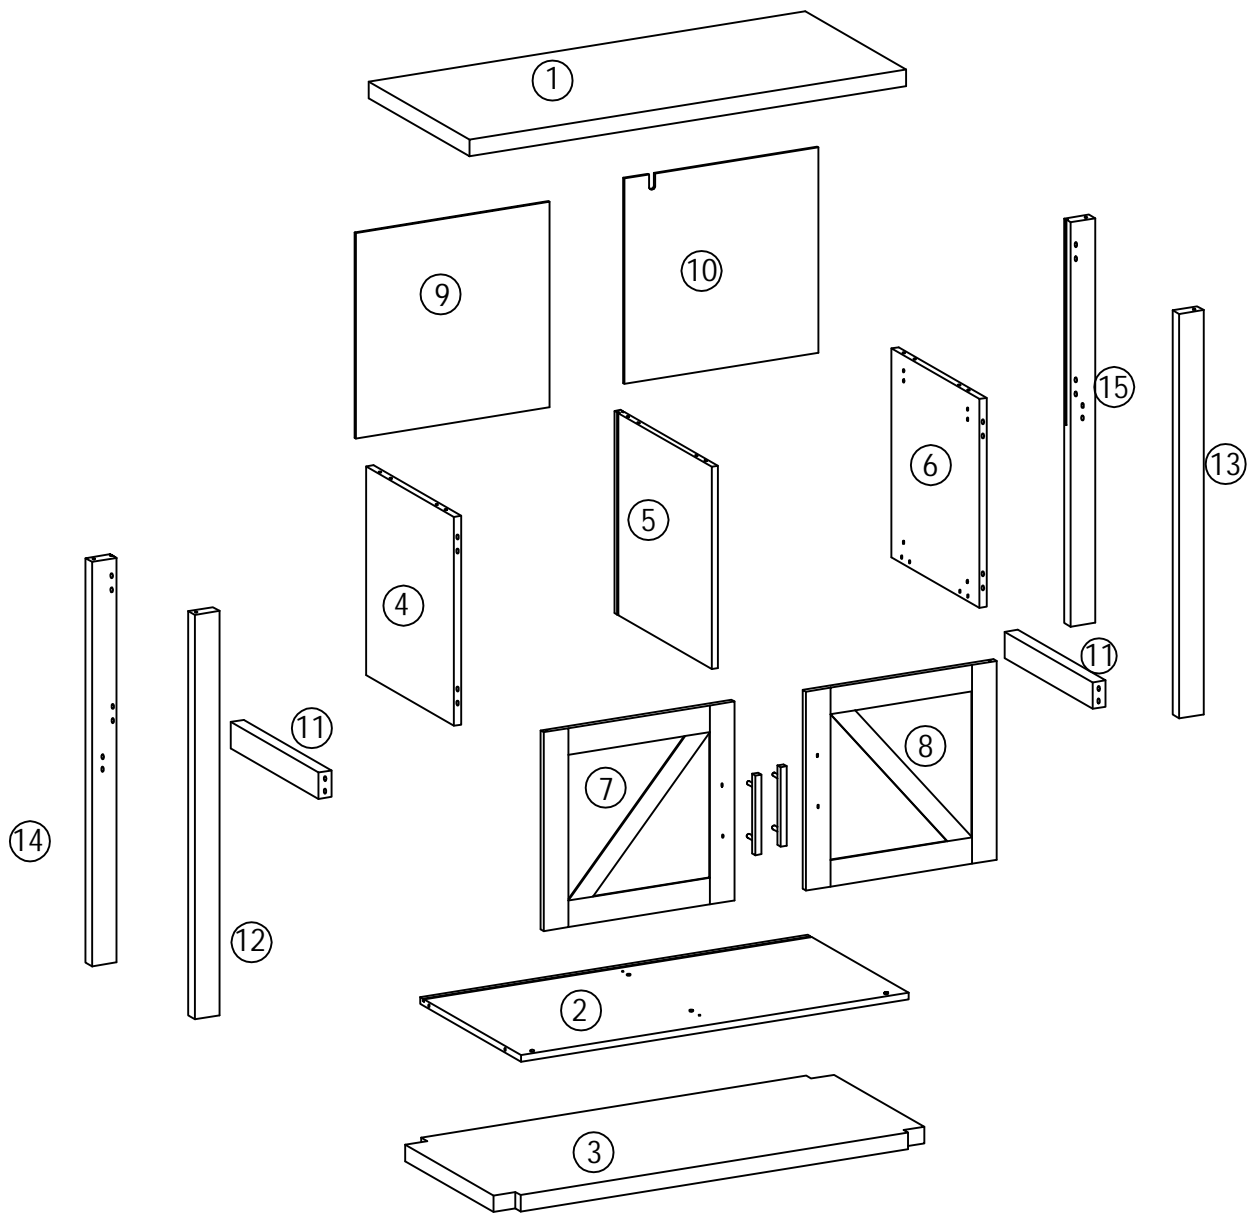


Step1:

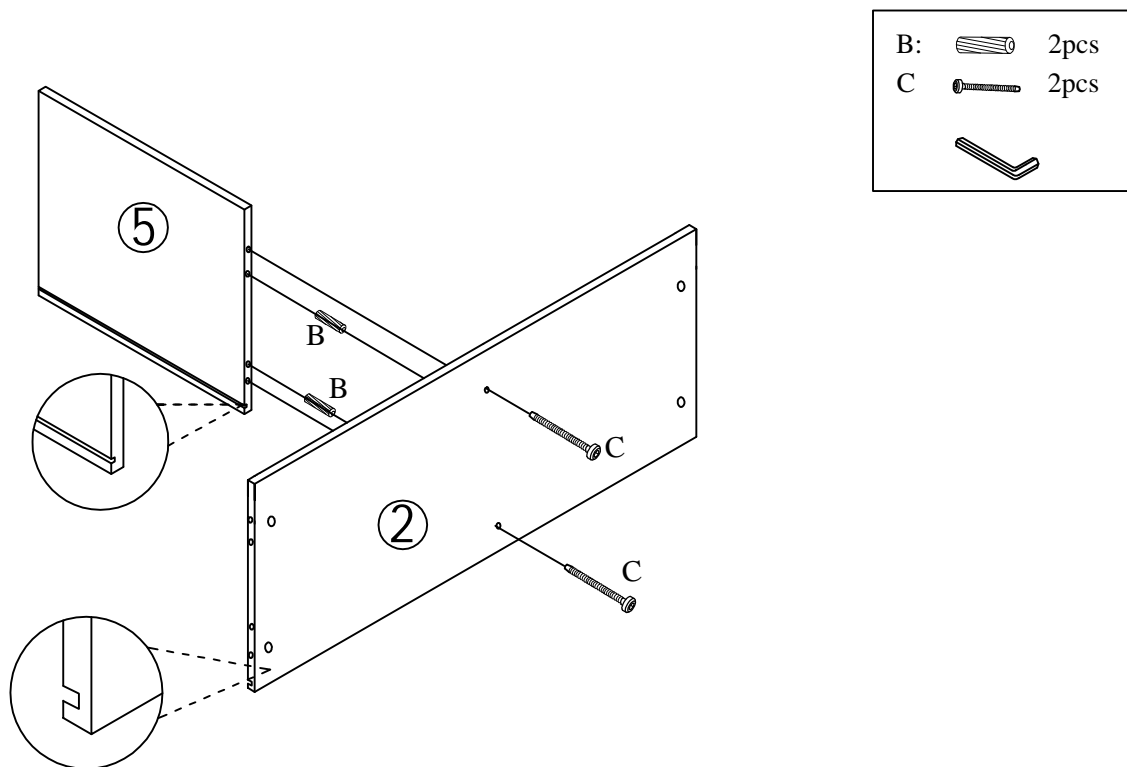



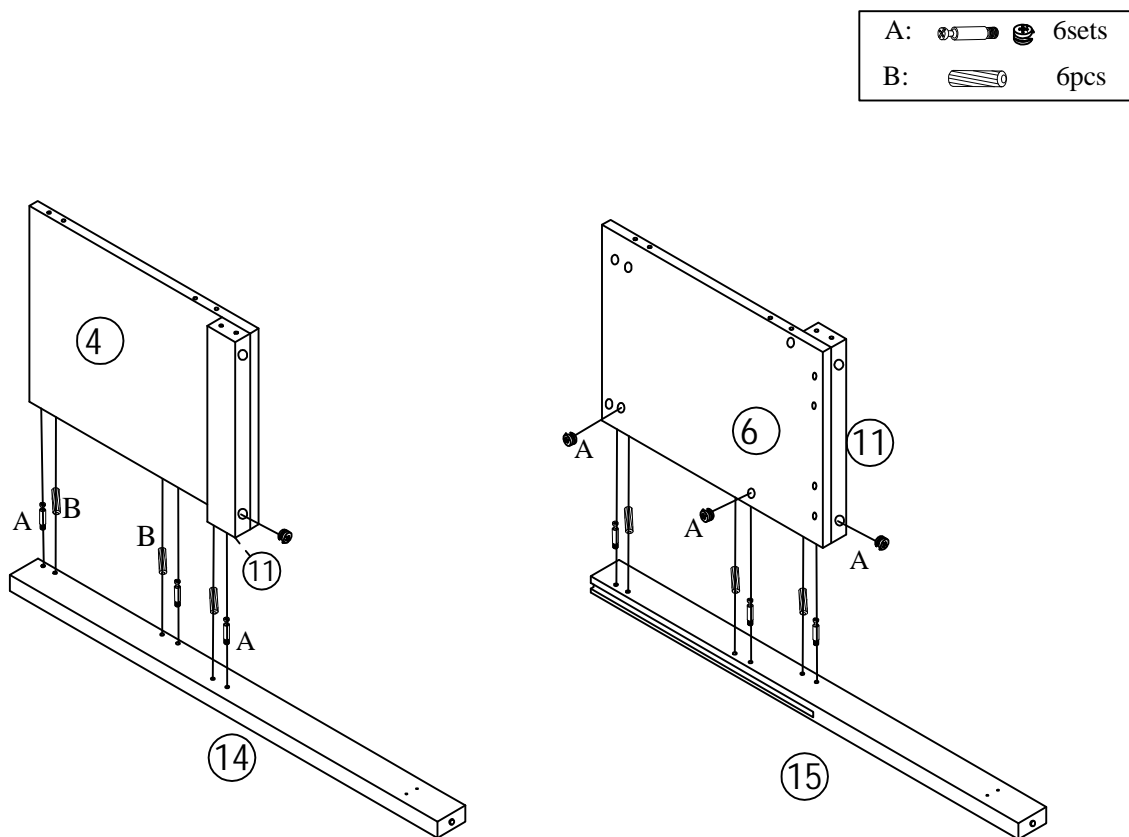

Assemble Divider (5) to Divider Panel (2) using Bolts (C) and Wood Dowels (B) as shown above.


Step 2:



Assemble Rear Legs (14&15) to Side Panels (4&6) and Connect Bars (11) using Cam-Locks (A) and Wood Dowels (B) as shown above.

Step 3:


A:		4sets
B:		4pcs
E:		2pcs
D:		4pcs

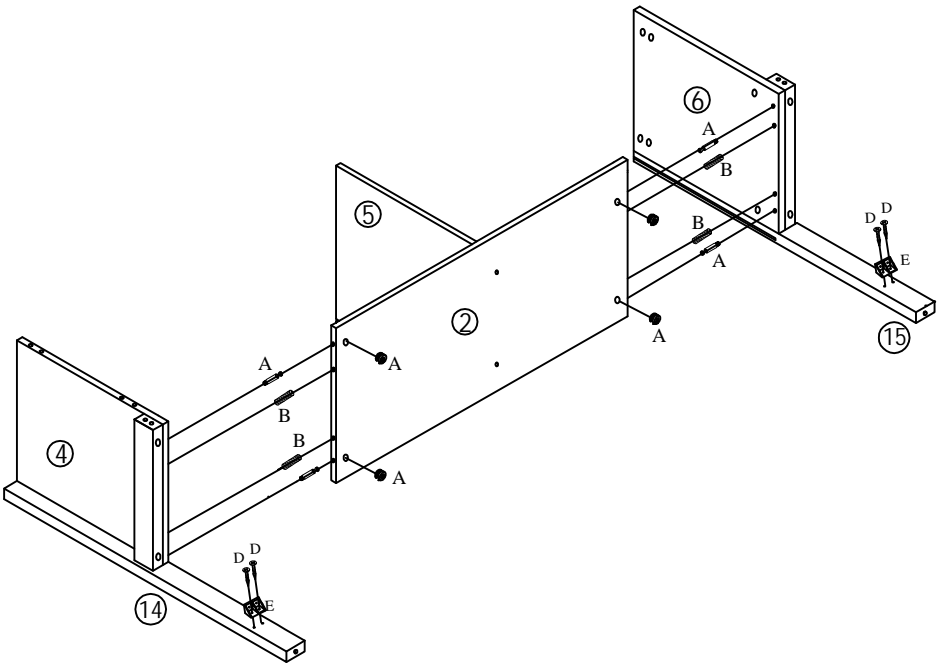

Assemble Divider Panel (2) to Side Panels (4&6) using Cam-Locks (A) and Wood Dowels (B) as shown above.
Assemble Connect Block (E) to Rear Legs (14&15) using Screws (D) as shown above.


Step 4:

D:		4pcs
----	---	------

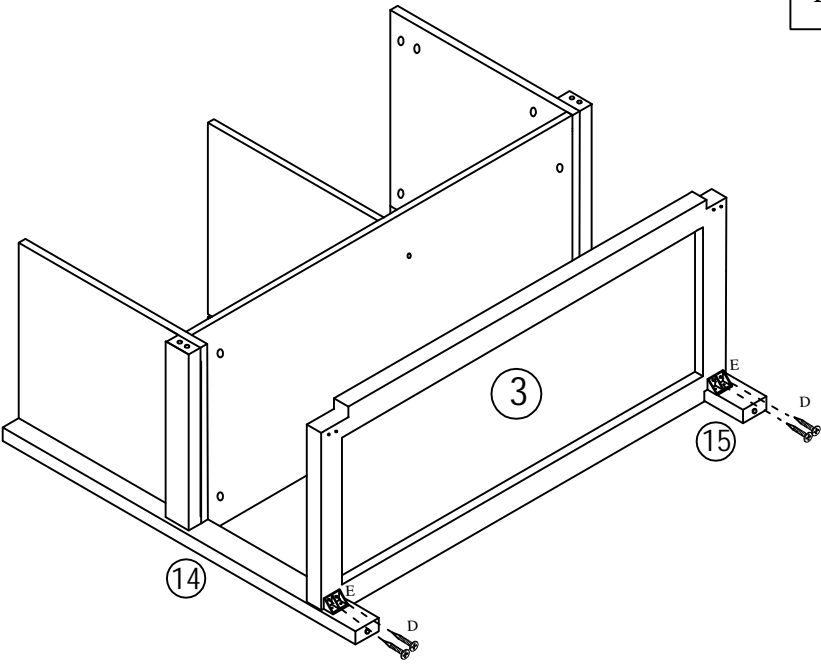


Assemble Bottom Shelf (3) to Rear Legs (14&15) using Screws (D) as shown above.

Step 5:

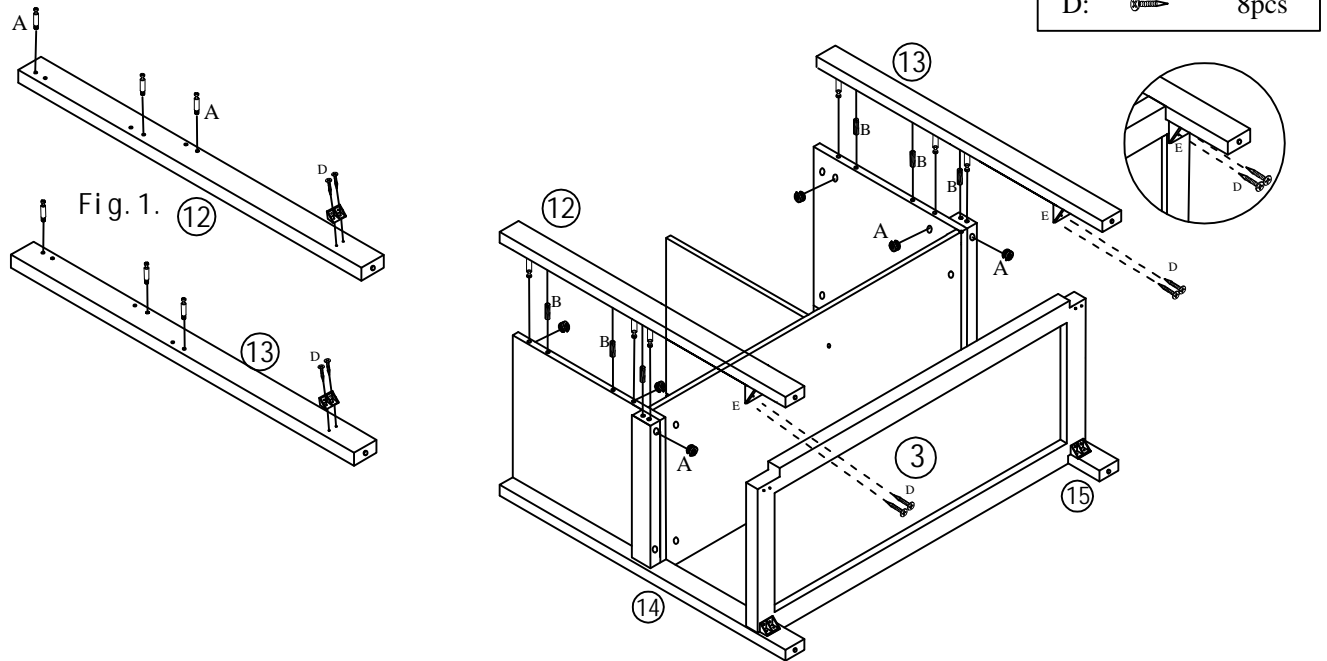


- 1). Assemble Connect Blocks (E) to Front Legs (12&13) using Screw(D) ,refer t o Fig.1.
- 2). Then assemble Front Legs (12&13) to Side Panels (4&6) , Bottom Shelf (3) and Connect Bars (11) using Cam-Locks (A) Wood Dowels (B) and Screws (D) as shown above.

Step 6:

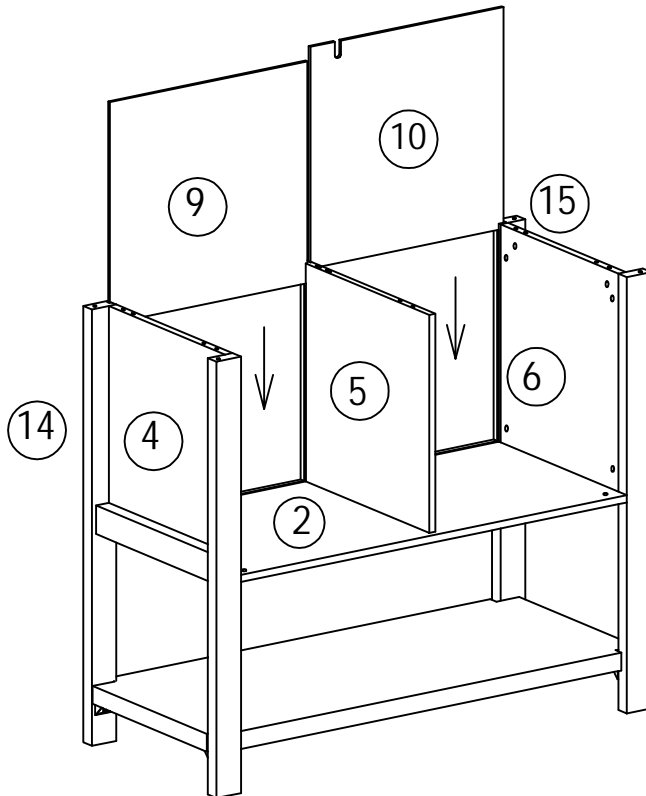


Insert Back Panels (9&10) into the grooves on Dividers (2&5) , Rear Legs (14&15) as shown above.

Step 7:

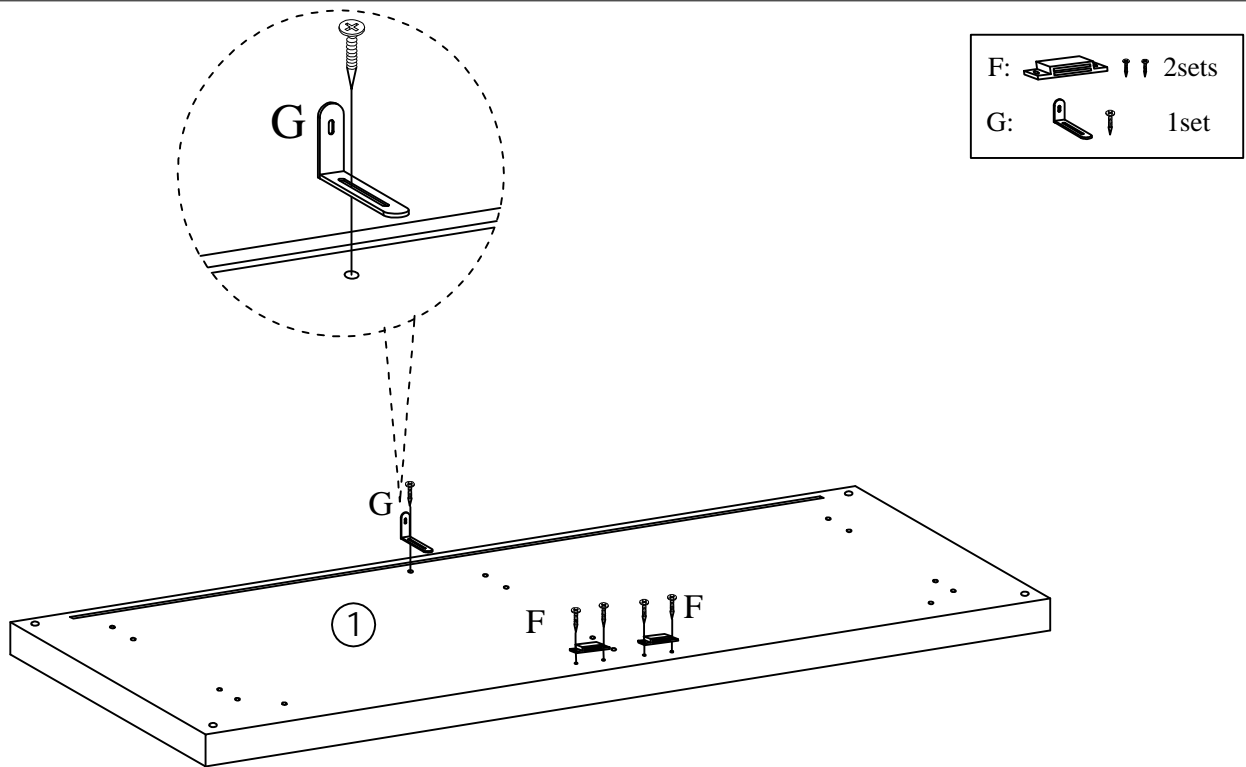


- 1). Attach Magnets (F) to the bottom of Top Panel (1) using included Screws (F) as shown above.
- 2). Attach Connect Plate (G) to the bottom of Top Panel (1) using included Screws (G).

Step 8:

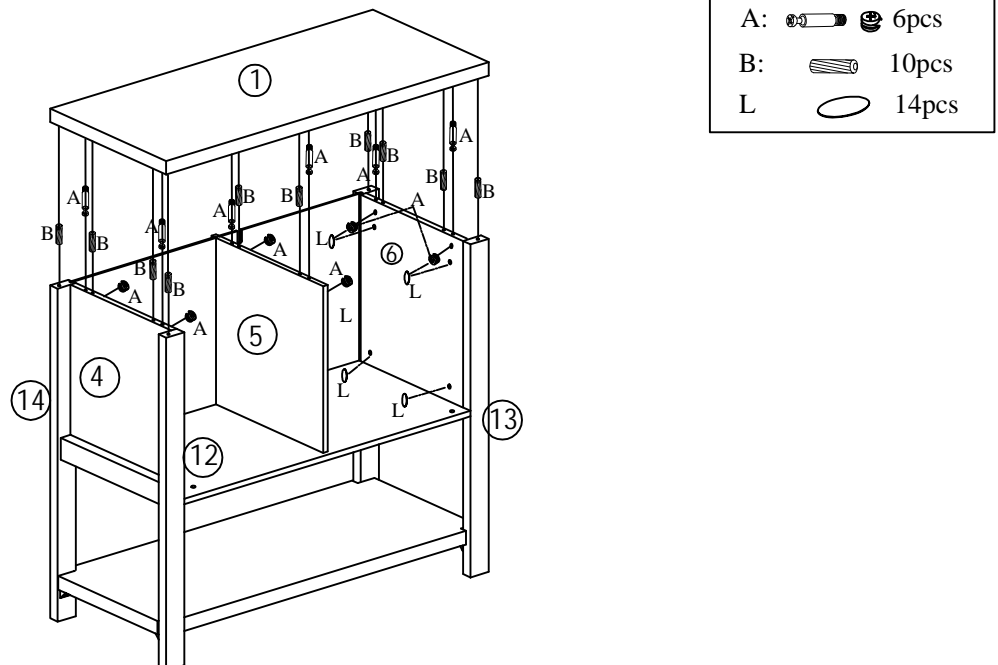


Assemble Top Panel (1) to Legs (12&13&14&15) and Divider (5) Side Panels (4&6) using Wood Dowels (B) and Cam-Locks (A) as shown above. Then using Covers (L) to cover the holes on Side Panel (4&6) and Divider (5) as shown above.

Step 9:

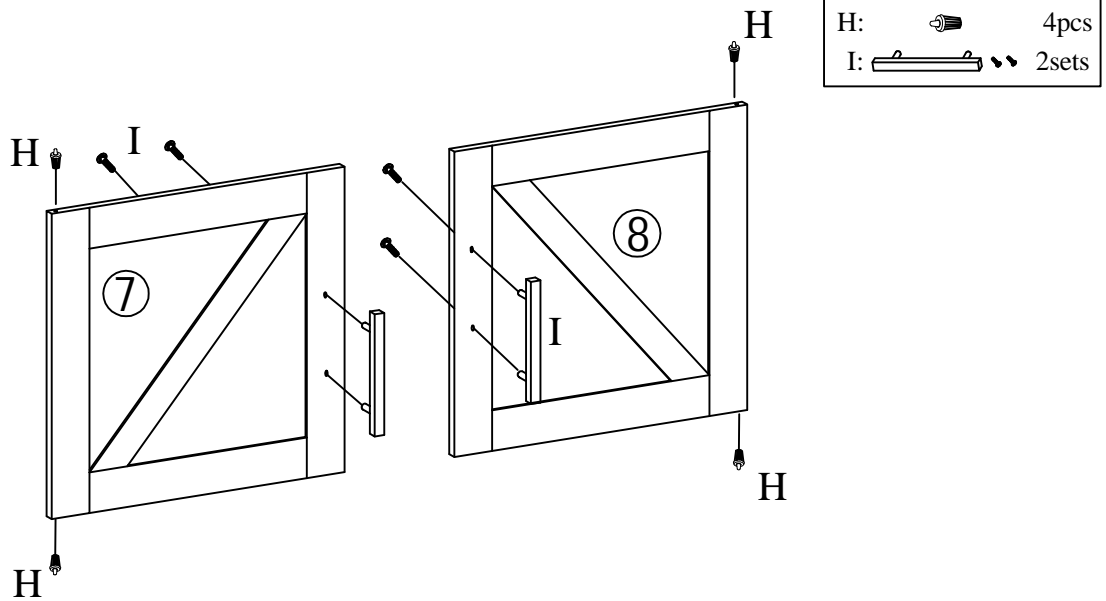


Insert Door Pins (H) into the hole on the two ends of Door Panels (7&8). Then attach Door Handles (I) to Door Panels (7&8) using included bolts (I).

Step 10:

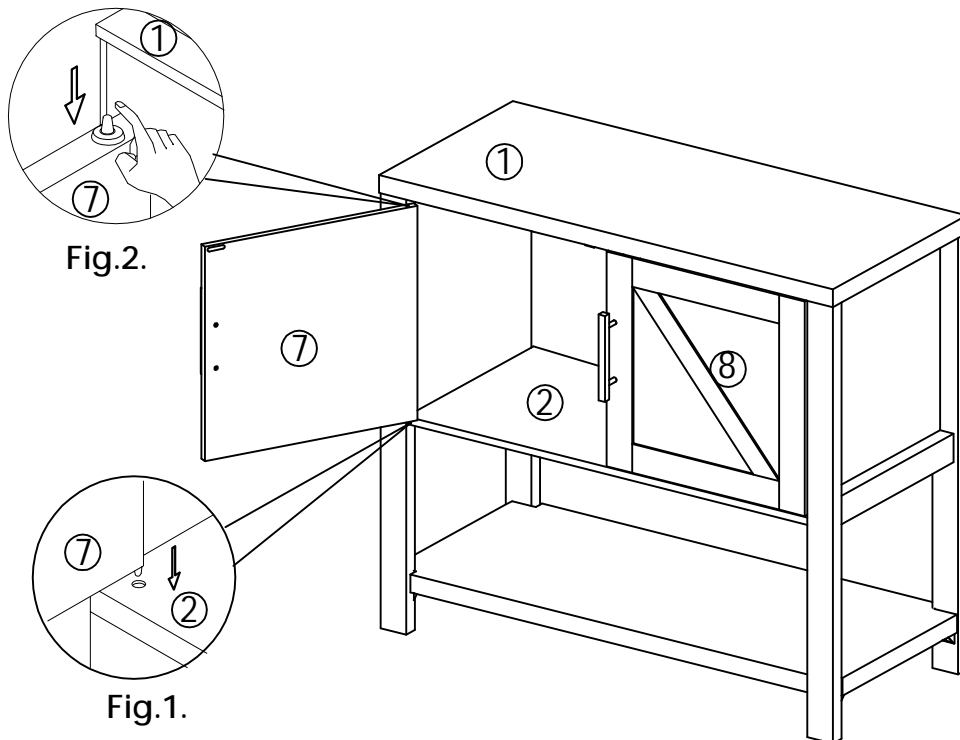


Connect Door Panels (7&8) to Divider Panel (2) as drawing Fig.1. Then press down Door Pin (H) (see Fig.2.) and hold the Door Panel carefully into the cabinet with the upper pin popping up into the hole of Top Panel (1).

Step 11:

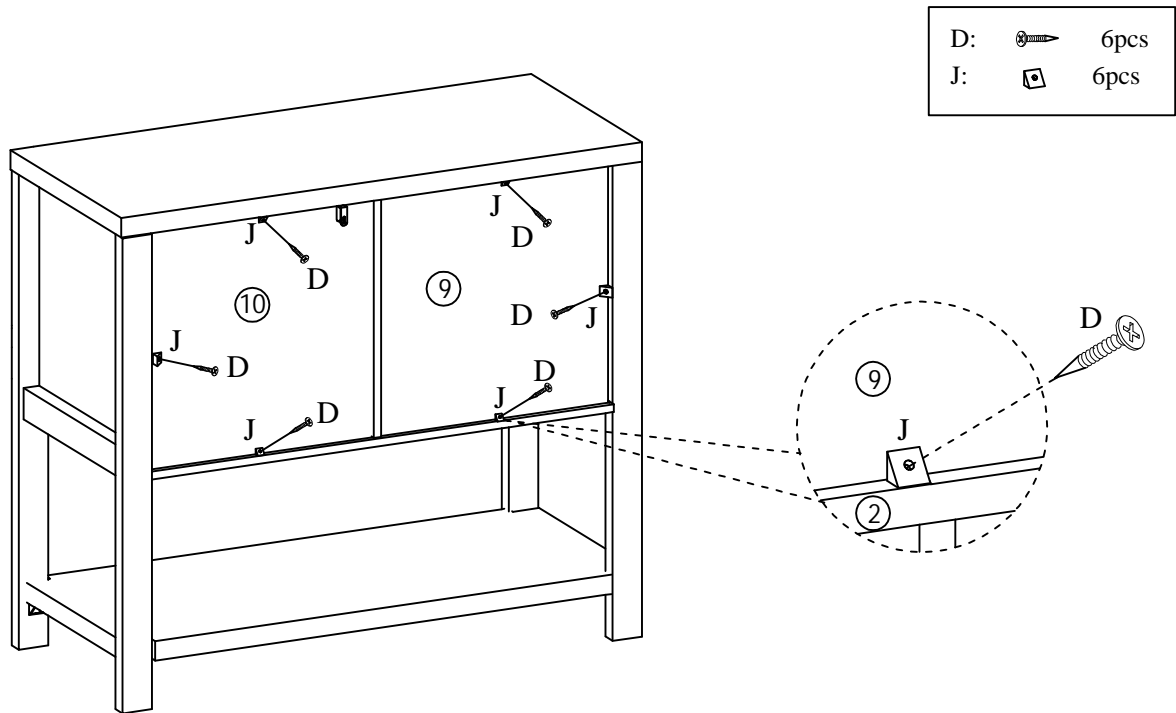

Attach Connect Blocks (J) to Rear Legs (14 & 15), Divider (2) and Top Panel (1) to hold Back Panels (9 & 10) using Screws (D) as shown above.

Step 12:

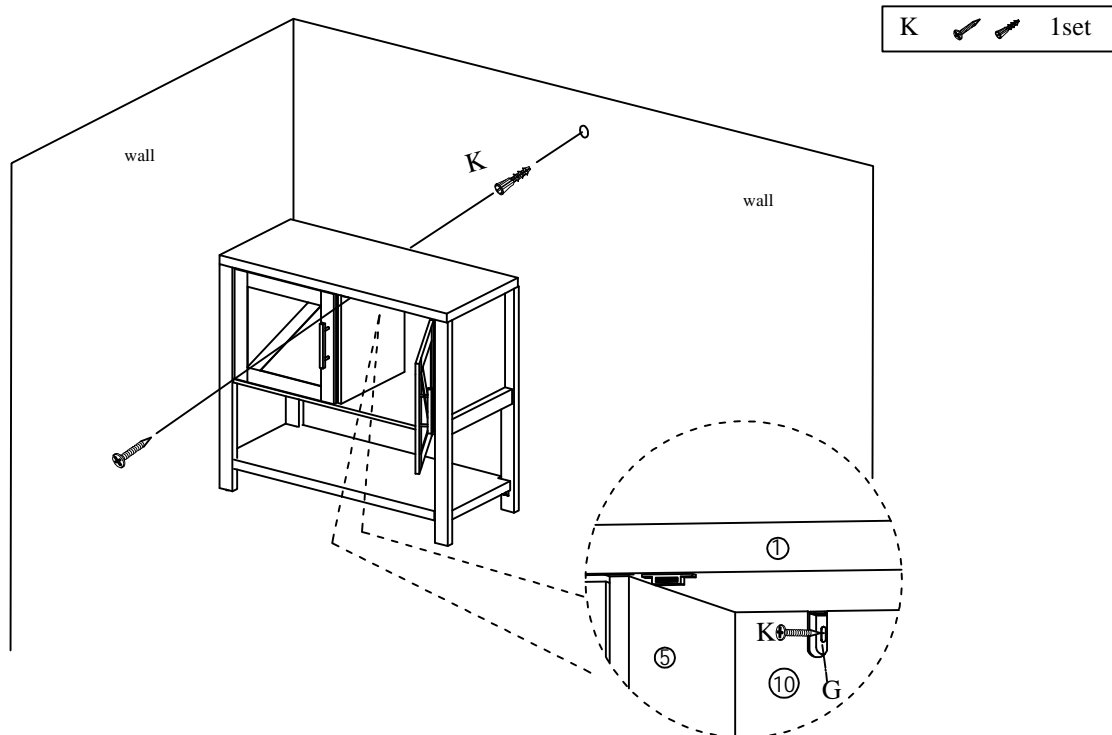

For your safety, please attach this unit to the wall by Anchor with Screws (K).