



# ASSEMBLY INSTRUCTIONS

**MODEL : 0289A**  
**CHEST**

**(BOX 1)**

**BOX OF CHEST**



NO	ITEM	QTY
	CHEST	
A		1 pc
	METAL LEG	
B		4 pcs

**(BOX 1)**

**HARDWARE LIST**

NO	ITEM	QTY
1	Pan Head Chipboard Screw m4x20mm Blk 	16 pcs

**STEP 1 :** Pull the bottom drawer and take out the Bunfoot carton ( B ). Assemble the Metal Leg (B) with CSK Screw ( as shown.

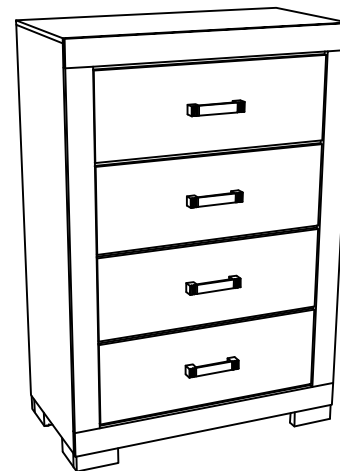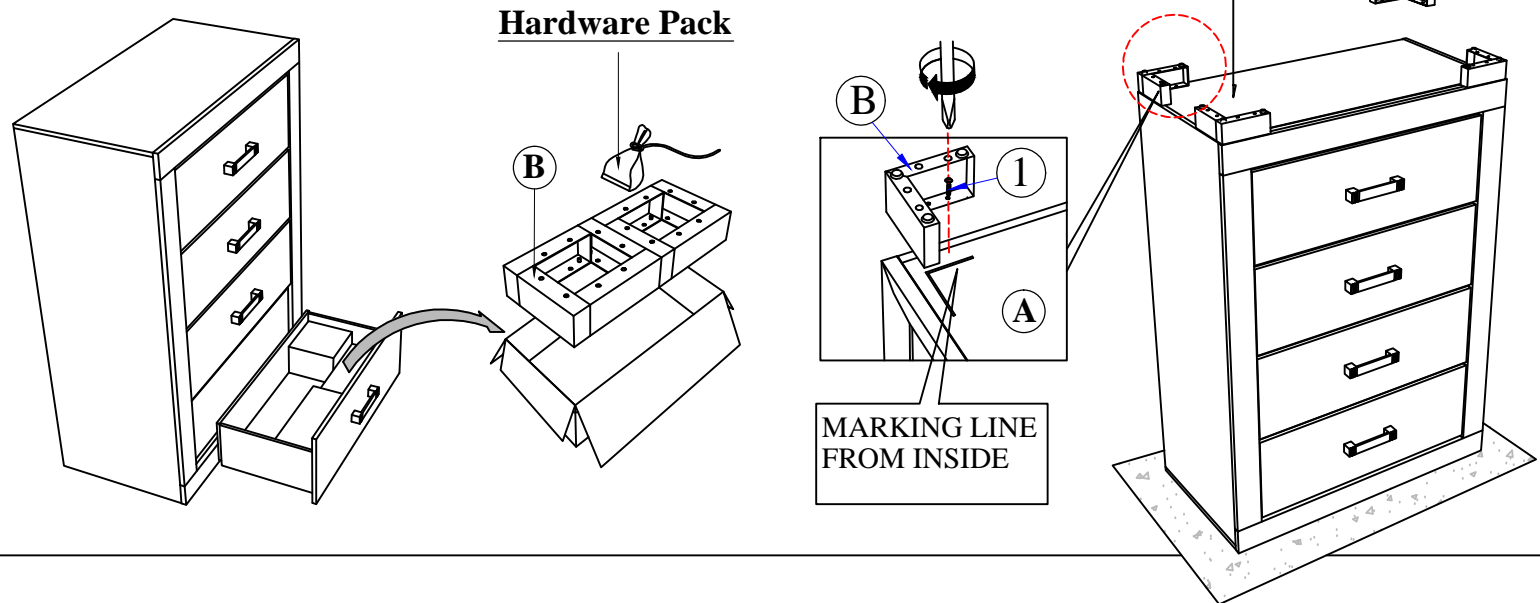

**COMPLETED ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.