

ASSEMBLY INSTRUCTION

**MODEL:0289A
DRESSER & MIRROR**

(Box 1)

BOX OF MIRROR

NO	ITEM	Qty
A	MIRROR	1 PC
B	MIRROR SUPPORT RAIL	2 PCS

(Box. 2)

BOX OF DRESSER


NO	ITEM	Qty
C	DRESSER	1 PC

**(Box. 1)
HARDWARE LIST**

NO	ITEM	Qty
1	Flat Head Chipboard Screw m4x32mm Rbw	8 PCS

STEP 1


Draw out mirror support (B) from the carton box.

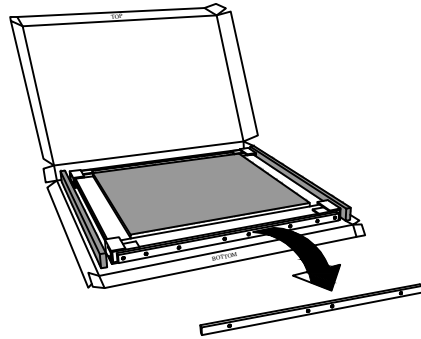

STEP 2 : Align & fasten mirror support (B) to the back of mirror (A) using Csk Screw (1).

Note : Make sure the marking of the mirror support (B) must in same level as the bottom frame as shown.

Secure the Screw by following the holes with indicator number as shown.

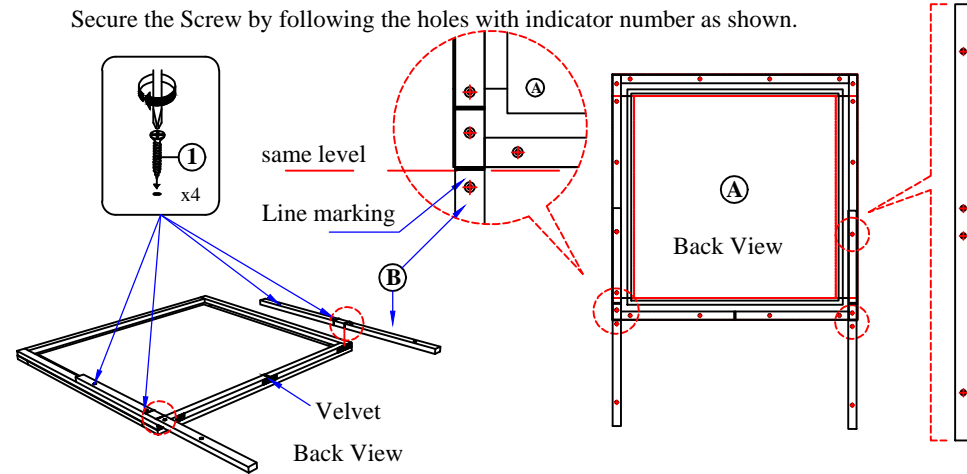



STEP 3 : Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using Csk Screw (1) with Srew with screw driver.(NOT PROVIDED)

Note : Make sure marking mirror must align with the dresser marking as shown.

Secure the Screw by following holes with indicator number as shown.

Mirror line marking

Dresser line marking

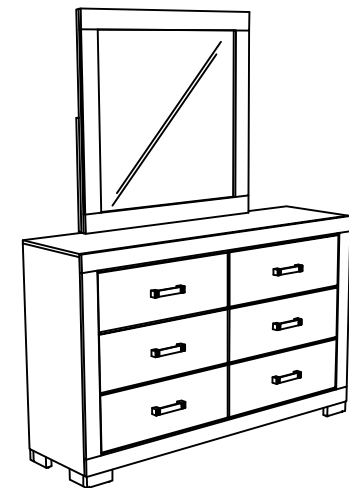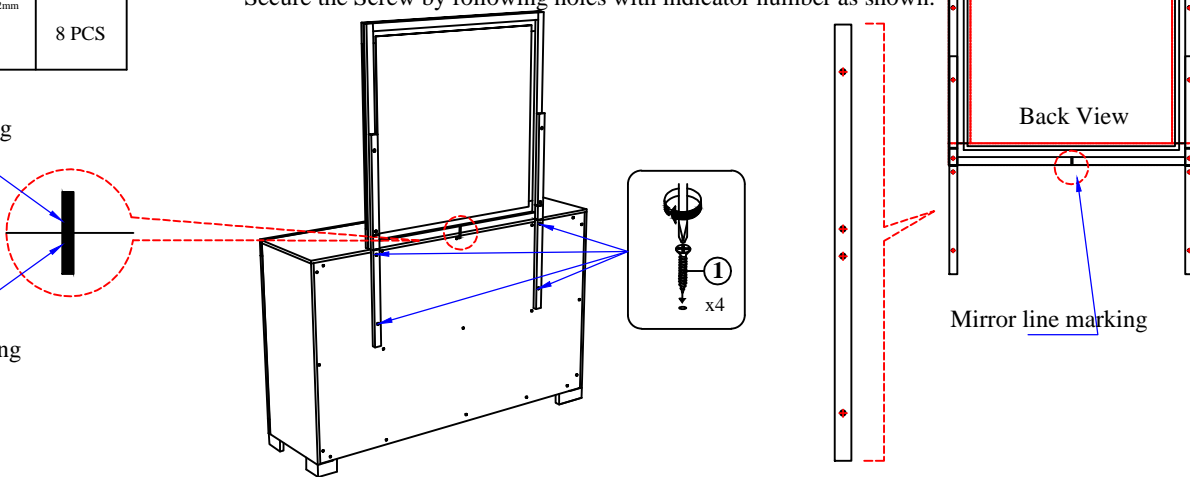

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.