
ASSEMBLY INSTRUCTIONS


Style # BM21-WH Cabinet

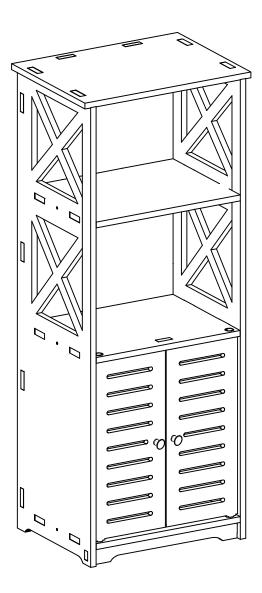


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- This product requires assembly by an adult because of the small parts. Care should be taken in unpacking and assembling this item to keep the small parts away from children.


Part List

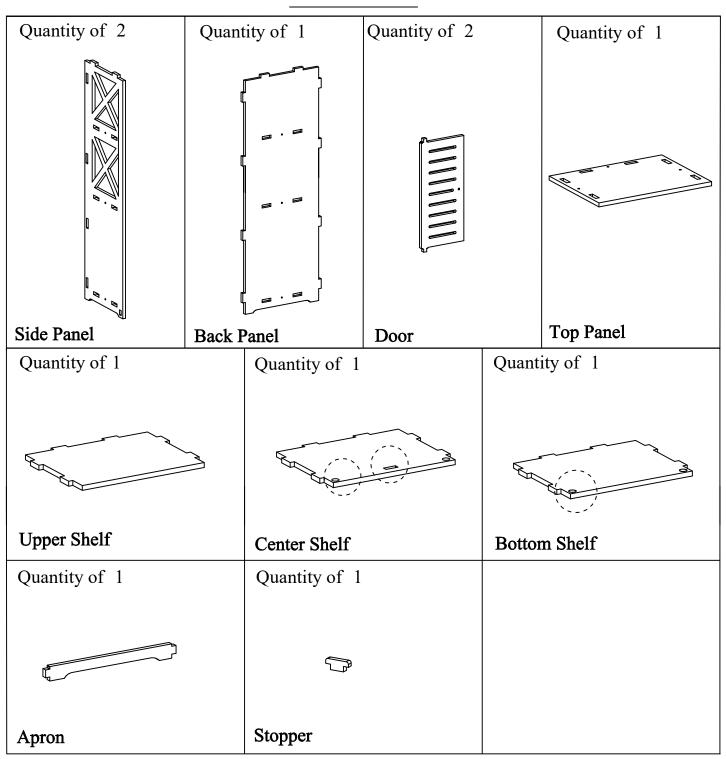

Hardware List



Part List

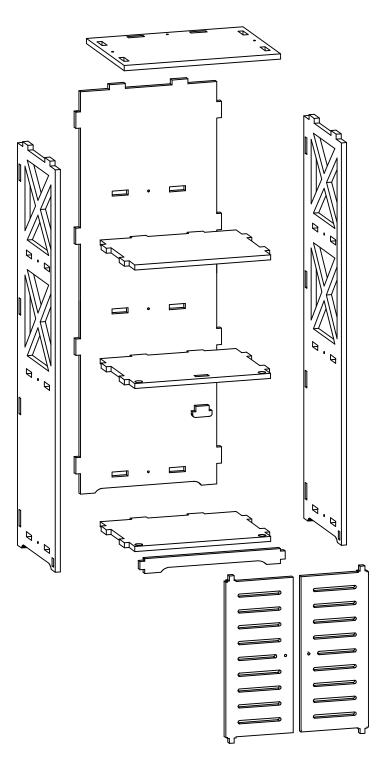

WARNING

INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- Do not place heavy objects on the top of the table.
- Never allow children to climb on to the furniture.


NOTE:

- This product is made of plastic wood, please do not use force when assembling in order to avoid damage.
- Each shelf maximum weight capacity is 4.4 lbs.
- Clean with damp cloth and non abrasive cleaning chemicals.


Assembly instructions

Step 1:

2Sets

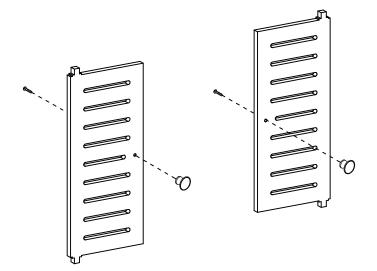


Attach the door knobs to doors using provided screws as shown above.

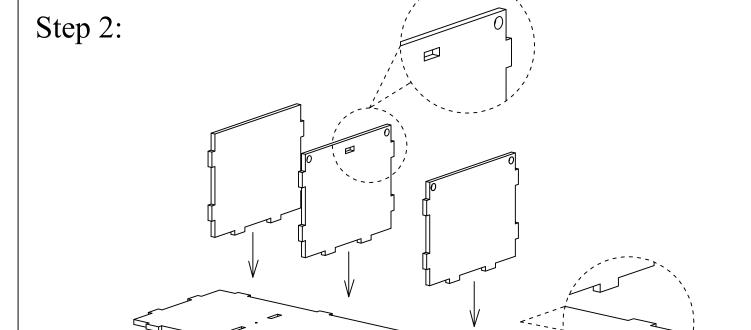


Attach the shelves to the back panel, by inserting them into the pre-drilled slats.

Step 3:

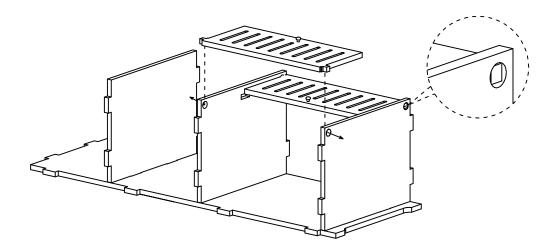


Attach the doors to the shelves, by inserting them into the pre-drillde slats as shown above.

Step 4:

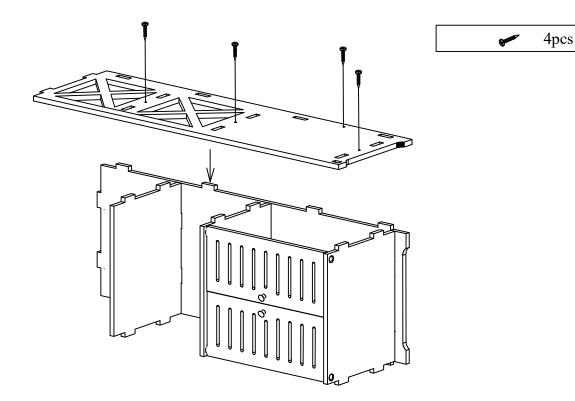


Attach the shelves and back panel to the side panel, by inserting them into the pre-drilled slats as shown above. Then tighten the side panel with provided screws into pre-drilled holes to secure unit as shown above.




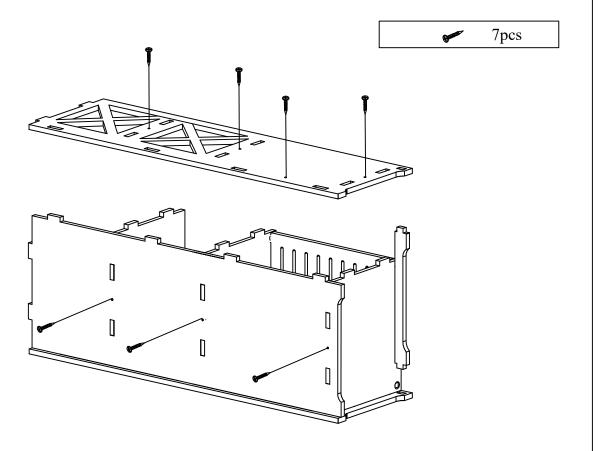

Attach the shelves and back panel to the other side panel, by inserting them into the pre-drilled slats as shown above. Then tighten the side panel & back panel with provided screws into pre-drilled holes to secure unit as shown above.

Step 6:

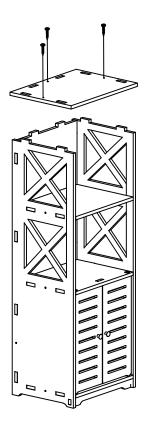

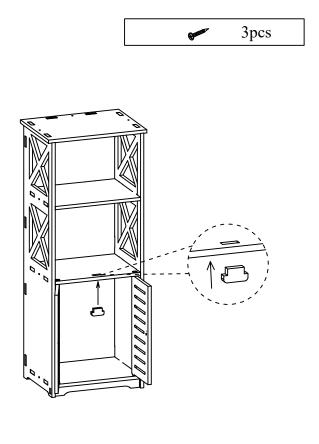

Insert the door stopper into holes on the center shelf as shown above.

Attach the top panel to the side panels& back panel ,by inserting them into the pre-drilled slats ,then tighten them by provided screws as shown above.

Page 6 of 6