


ASSEMBLY INSTRUCTIONS

Style # 1146BL-E/1146WH-E Side Cabinet

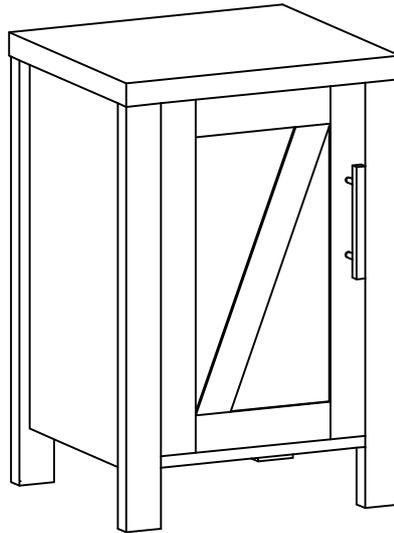


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


To insert a cam lock: (Please read below instructions before assembling)

Diagram A

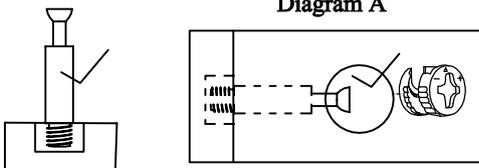


1. Insert cam screw into hole as shown in diagram A .

Diagram B

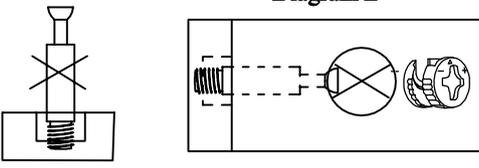


Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.

Diagram C

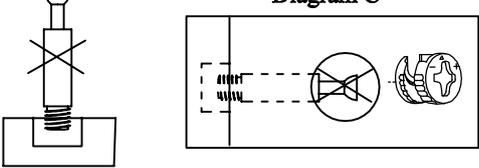


Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

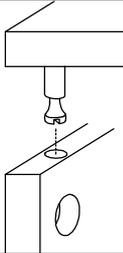


2. Connect the panels together.

ARROW SIGN

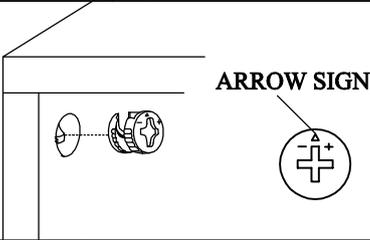

3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

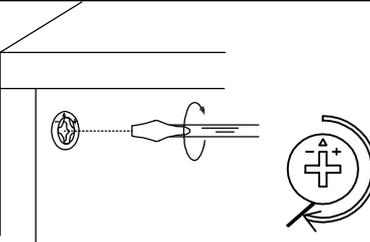






4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**



Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


Part List
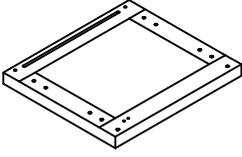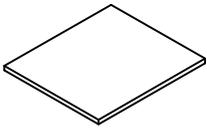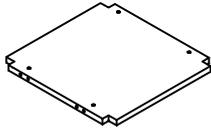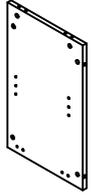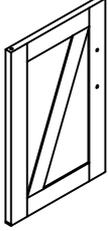
<p>A Quantity of 1</p>  <p>Top Panel</p>	<p>B Quantity of 1</p>  <p>Shelf Panel</p>	<p>C Quantity of 1</p>  <p>Bottom Panel</p>	<p>D Quantity of 2</p>  <p>Side Panel</p>
<p>E Quantity of 1</p>  <p>Door Panel</p>	<p>F Quantity of 1</p>  <p>Back Panel</p>	<p>G Quantity of 2</p>  <p>Front Leg</p>	<p>H Quantity of 1</p>  <p>Rear Leg(Left)</p>
<p>I Quantity of 1</p>  <p>Rear Leg(Right)</p>			


Hardware List
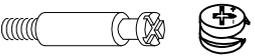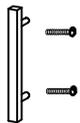
<p>1 Quantity of 16</p>  <p>Camlock</p>	<p>2 Quantity of 12</p>  <p>Wood Dowel</p>	<p>3 Quantity of 1</p>  <p>Magnet with Screw</p>	<p>4 Quantity of 6</p>  <p>Screw</p>
<p>5 Quantity of 6</p>  <p>Connect Block</p>	<p>6 Quantity of 1</p>  <p>Handle with Bolt</p>	<p>7 Quantity of 2</p>  <p>Door Pin</p>	<p>8 Quantity of 4</p>  <p>Shelf Supporter</p>

Part List

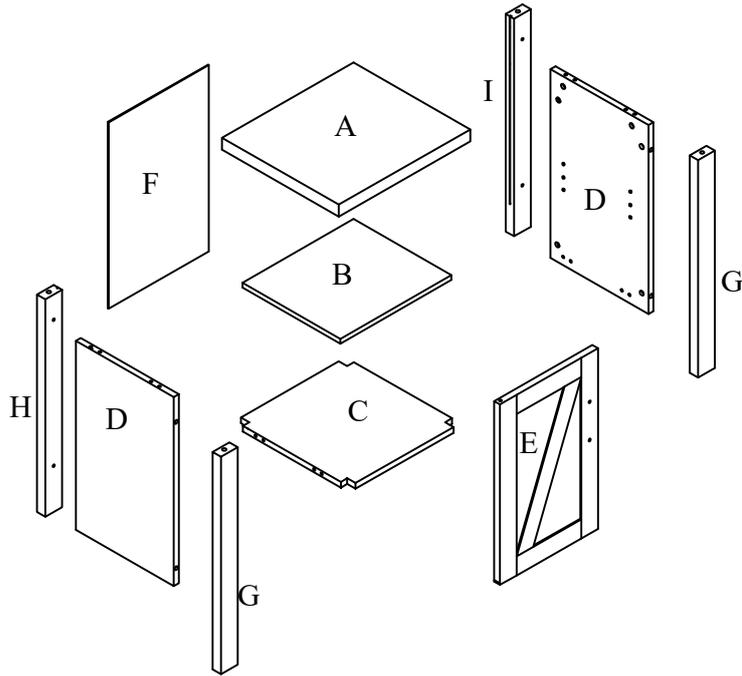


Step 1:

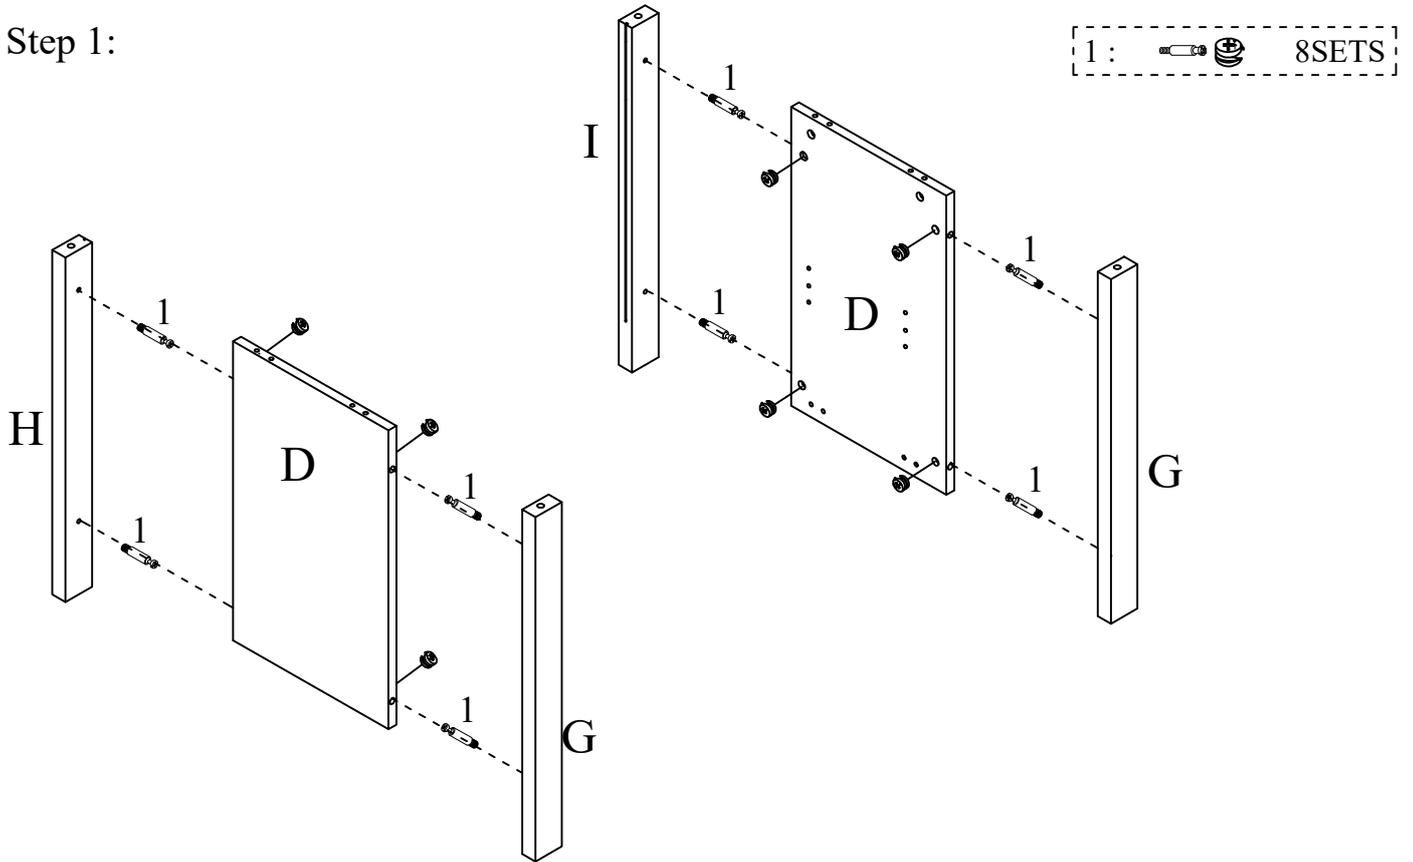


Assemble Legs (G&H&I) to Side Panels (D) using Cam-Locks (1) as shown above.

Step 2:

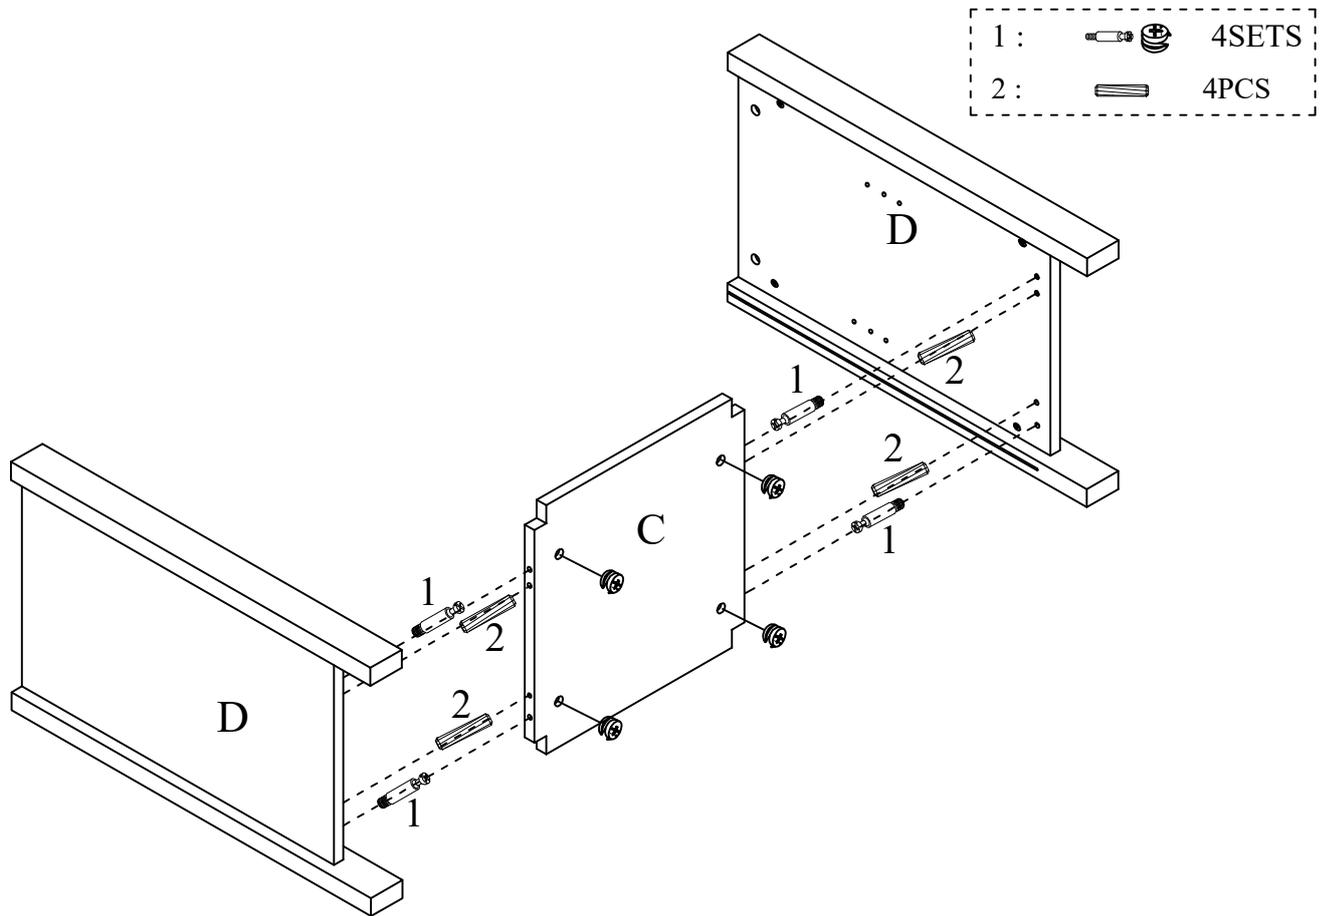


Assemble Bottom Panel (C) to Side Panels (D) using Cam-Locks (1) and Wood Dowels (2) as shown above.

Step 3:

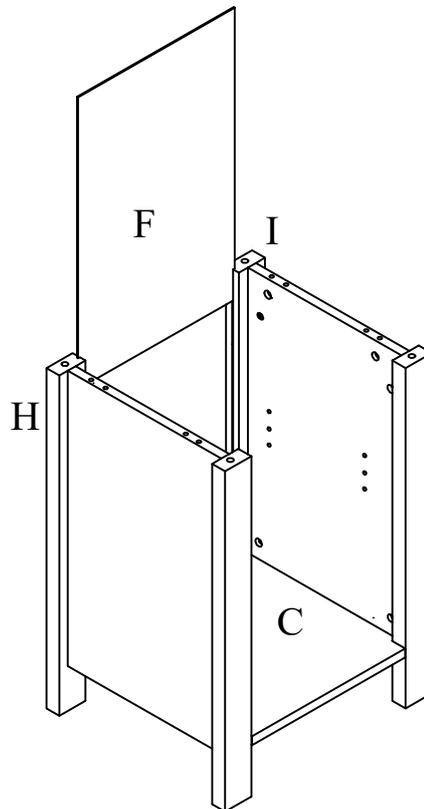


Insert Back Panel (F) into the grooves on Rear Legs (H&I) as shown above.

Step 4:

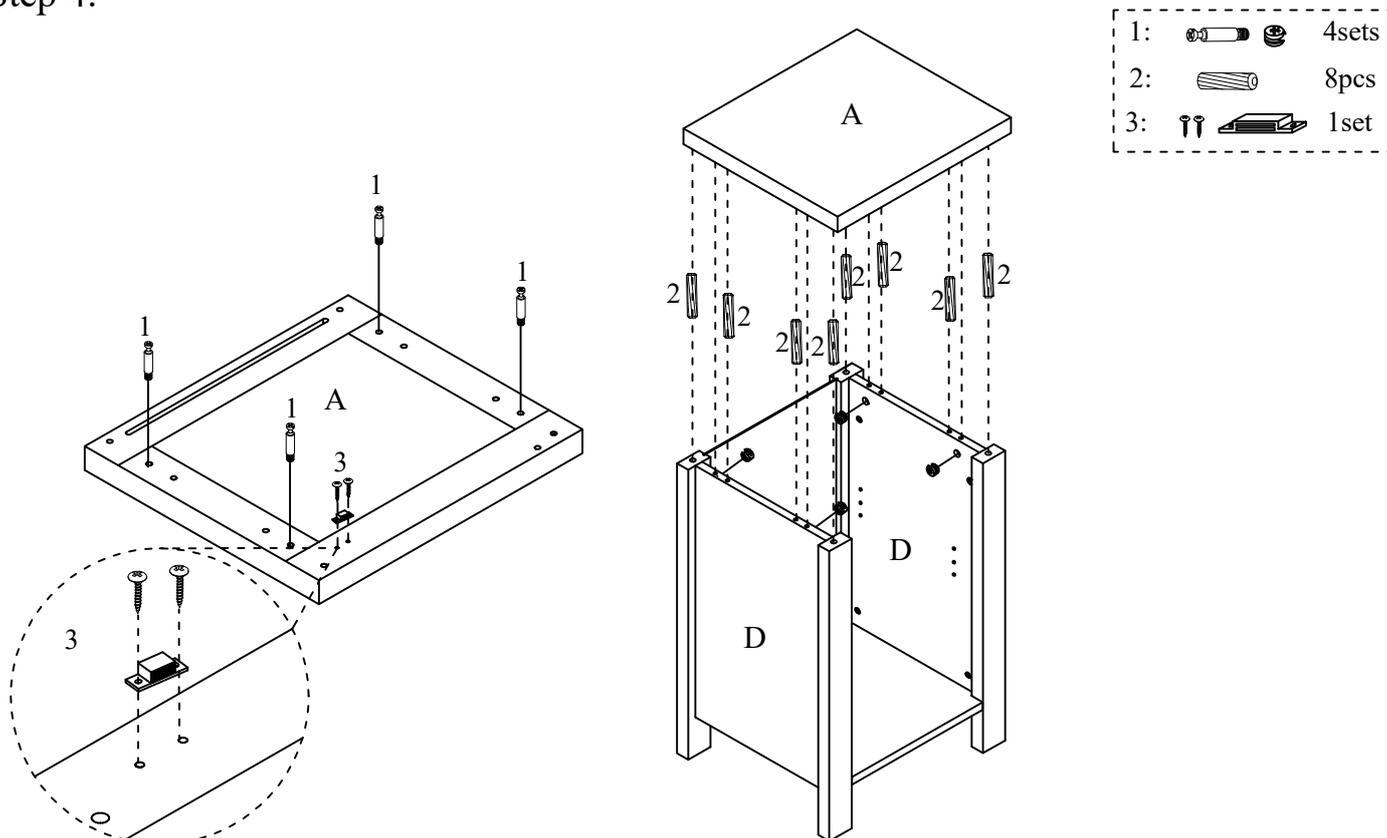

- 1). Attach Magnet (3) and tighten Cam-bolts (1) to the bottom of Top Panel (A) using included Screws (3) as shown above.
- 2). Then assemble Top Panel (A) to Legs (G&H&I) and Side Panels (D), Back Panel (F) using Wood Dowels (2) and Cam-Locks (1) as shown above.


Step 5:

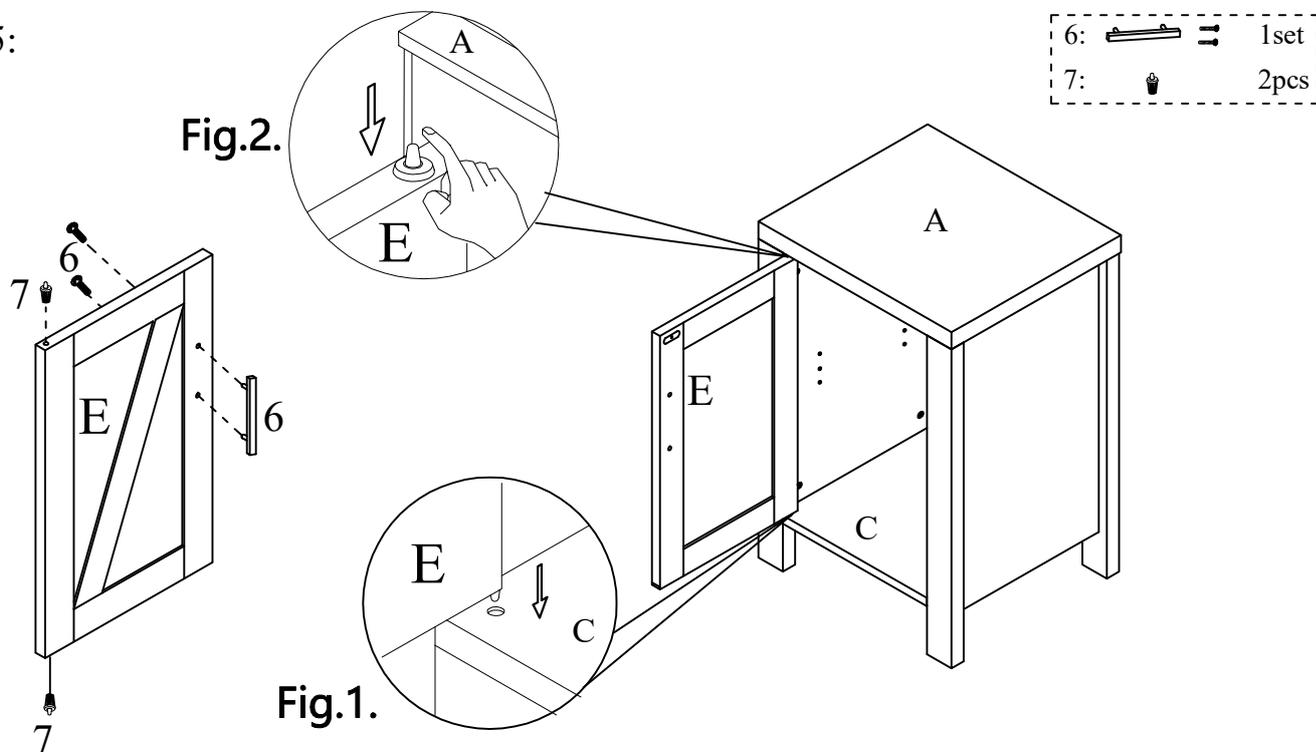

- 1). Insert Door Pins (7) into the hole on the two ends of Door Panel (E). Then attach Door Handle (6) to Door Panel (E) using included bolts (6).
- 2). Connect Door Panel (E) to Bottom Panel (C), refer to Fig.1. Then press down Door Pin (7) (see Fig.2.) and hold the Door Panel carefully into the cabinet with the upper pin popping up into the hole of Top Panel (A).

Step 6:


8:  4pcs

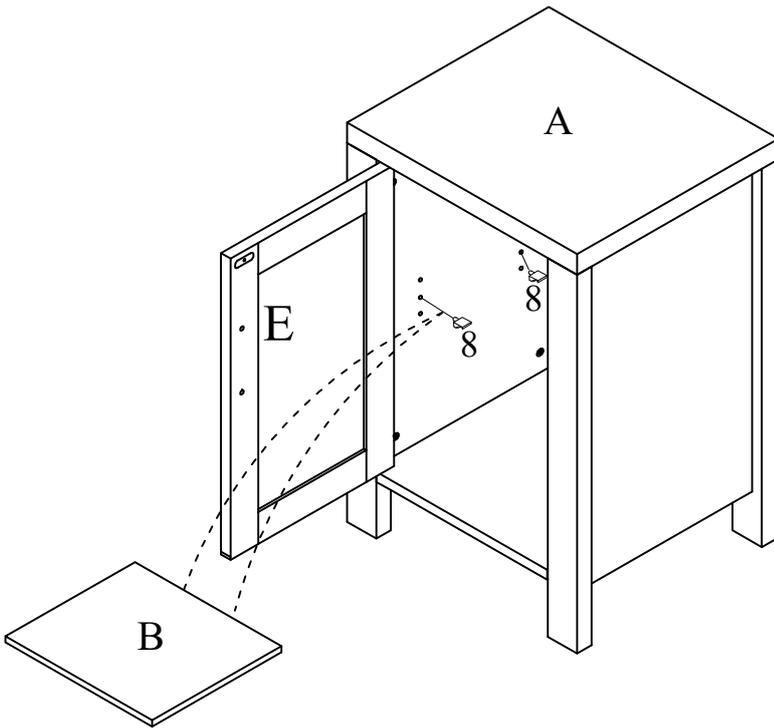

Insert the Shelf Supporters (8) into the holes of the side panels (D) , then put the Shelf Panel (B) onto the Shelf Supporters (8).

Step 7:

4:  6pcs
5:  6pcs

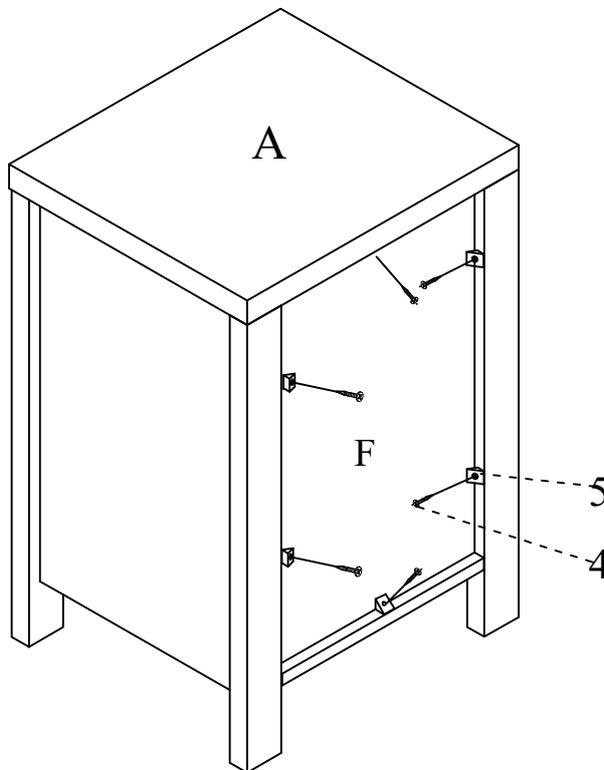

Attach Connect Blocks (5) to Rear Legs (H & I) and Bottom Panel (C) to hold Back Panel (F) using Screws (4) as shown above.