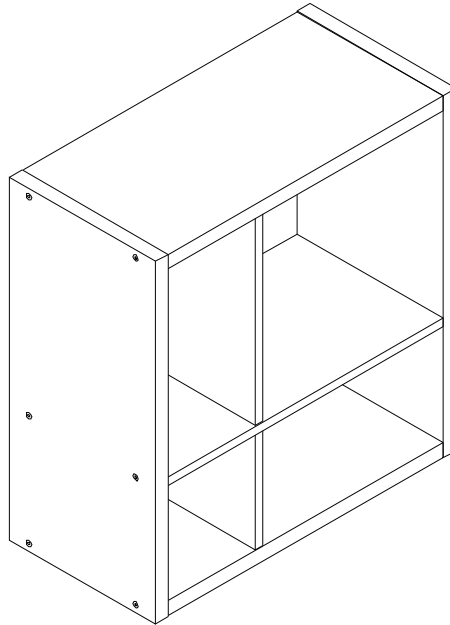


# ASSEMBLY INSTRUCTIONS







## MODEL : #BK1989 BOOKCASE
















### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## PARTS IDENTIFICATION

<p>① Quantity: 2</p>  <p>Side Panels</p>	<p>② Quantity: 1</p>  <p>Top Panel</p>	<p>③ Quantity: 1</p>  <p>Bottom Panel</p>	<p>④ Quantity: 1</p>  <p>Middle Shelf Panel</p>	<p>⑤ Quantity: 1</p>  <p>Upper Divider Panels</p>
<p>⑥ Quantity: 1</p>  <p>Lower Divider Panels</p>				

## HARDWARE LIST

<p>Ⓐ Screw JCBC-W M6 X 60   <math>\text{Ø } 15/64''</math>  <math>2 \frac{23}{64}''</math>                  Quantity: 14 pcs</p>	<p>Ⓑ Screw JCBC-W M6 X 40   <math>\text{Ø } 15/64''</math>  <math>1 \frac{37}{64}''</math>                  Quantity: 2 pcs</p>	<p>Ⓒ Wooden Dowel M8 x 50   <math>\text{Ø } 5/16''</math>  <math>2''</math>                  Quantity: 2 pcs</p>	<p>Ⓓ Wooden Dowel M8 x 25   <math>\text{Ø } 5/16''</math>  <math>1''</math>                  Quantity: 16 pcs</p>	<p>Ⓔ Connecting Bolt                    Quantity: 2 pcs</p>
<p>Ⓕ Camlock D:15/12.5mm                    Quantity: 2 pcs</p>	<p>Ⓖ Screw M3.5 x 14   <math>\text{Ø } 9/64''</math>  <math>35/64''</math>                  Quantity: 12 pcs</p>	<p>Ⓗ Allen Key                    Quantity: 1 pc</p>	<p>Ⓙ L-Plate                    Quantity: 4 pcs</p>	<p>Ⓝ Sticker                    Quantity: 14 pcs</p>
<p>Ⓚ Leg Stud                    Quantity: 4 pcs</p>	<p>TOOLS REQUIRED</p>  SCREW DRIVER  MALLET			

### STEP 1

Diagram showing the assembly of the side panels (3) and top panel (2) onto the bottom panel (1). The side panels are attached using wooden dowels (C) and screws (A). The top panel is attached using screws (A) and wooden dowels (D).

### STEP 2

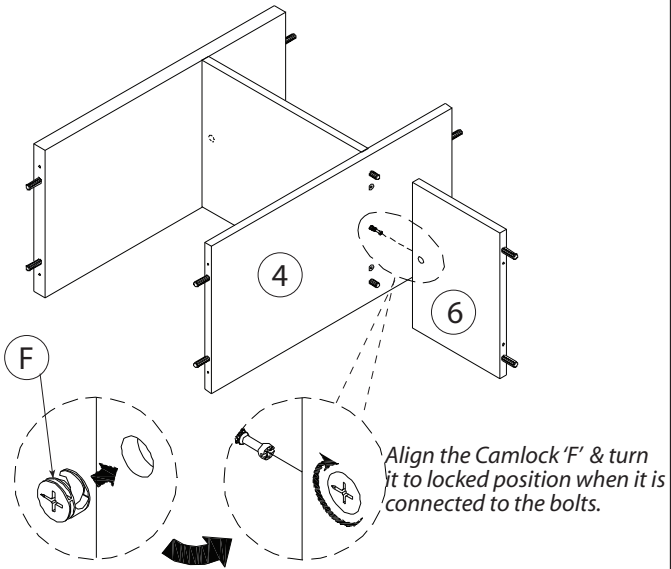
Diagram showing the middle shelf panel (4) being attached to the side panels (3) using connecting bolts (E).

### STEP 3

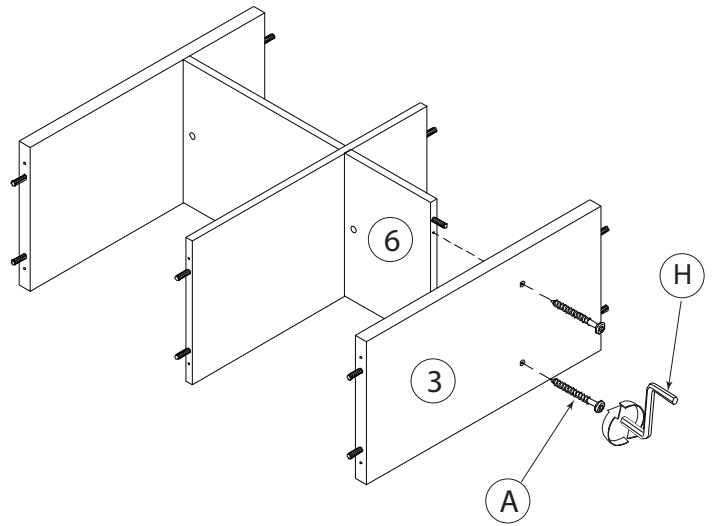
Diagram showing the upper divider panel (5) being attached to the side panels (3) using screws (B) and camlocks (F). The camlocks (F) are aligned and turned to the locked position when connected to the bolts.

*Align the Camlock 'F' & turn it to locked position when it is connected to the bolts.*

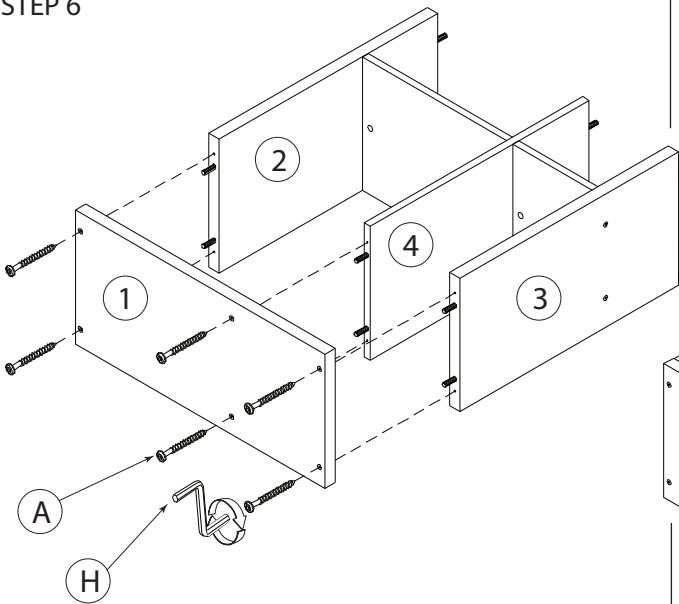
## STEP 4



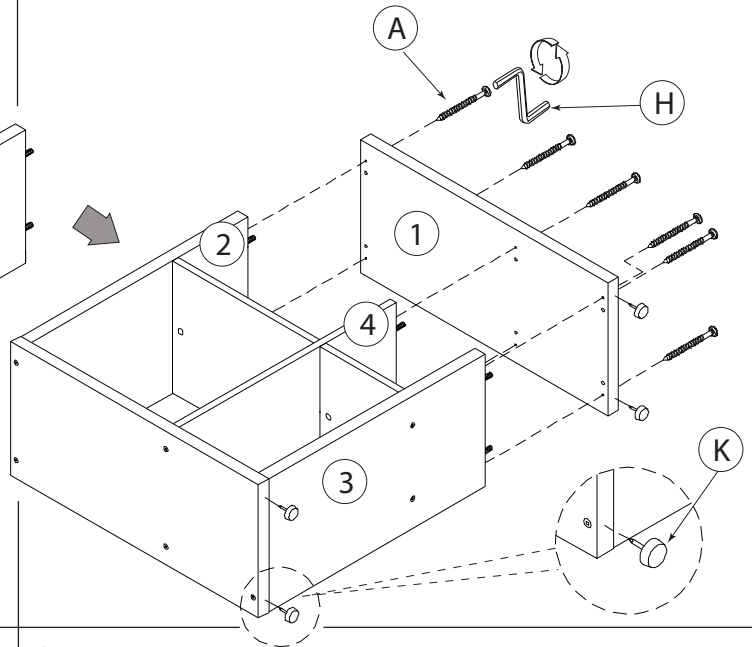
## STEP 5



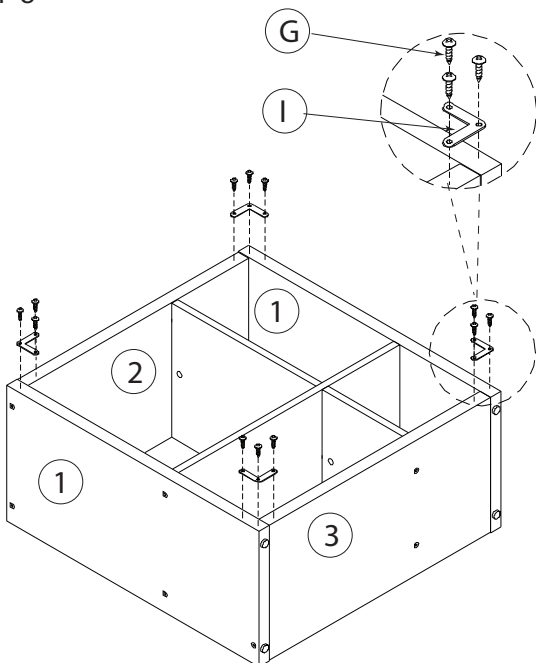
## STEP 6



## STEP 7



## STEP 8



## STEP 9

