
ASSEMBLY INSTRUCTIONS


Style # WR1369 Wine Rack

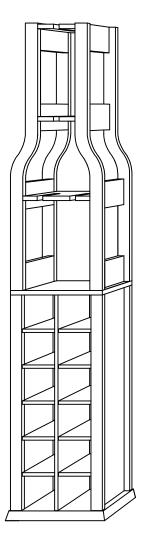


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)

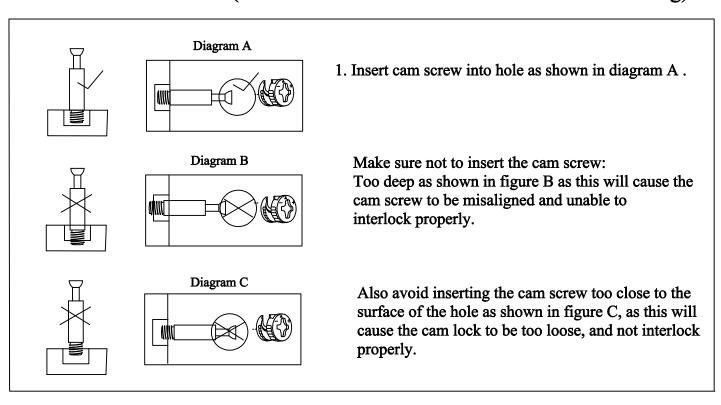


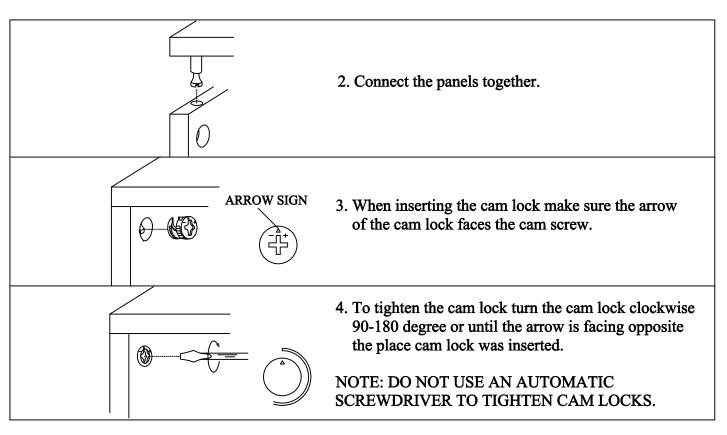

Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List

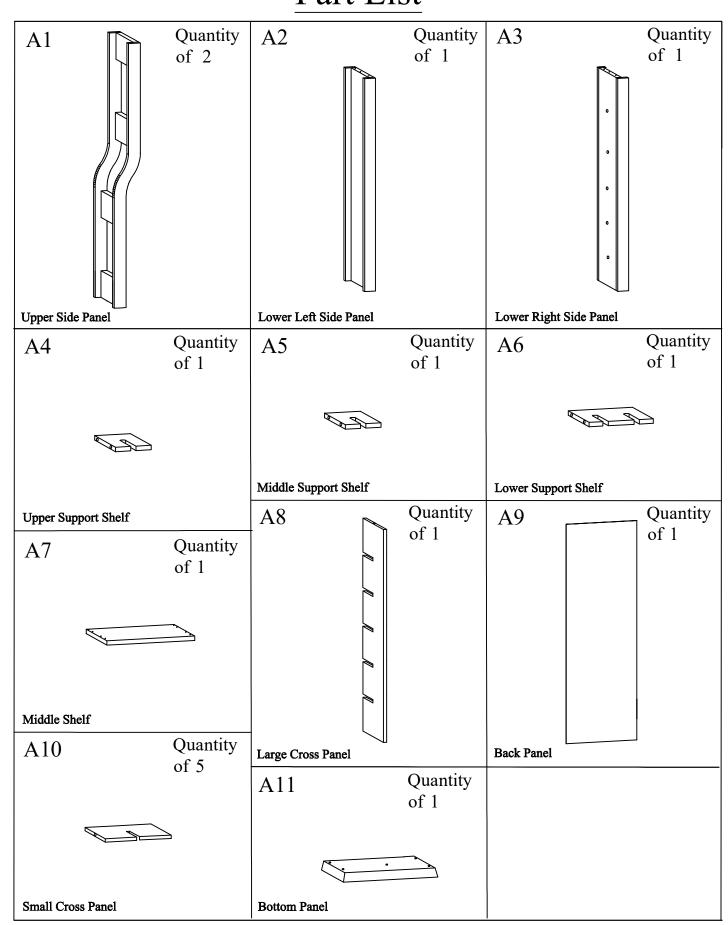

Page 3 of 8

Part List A4 A5 A1 A6 A7 A2 A9 A10 A3


Hardware List


B1	Quantity of 12	B2	Quantity of 18	В3		Quantity of 4	B4	Quantity of 10
		14"*1.25"			(-)	Ш>		
Camlock		Wood Dowel		Screw			Screw	
B5	Quantity of 4	B6	Quantity of 1	В7		Quantity of 1		
9	\supset	O O			O minus	()		
Bolt with Nut		Anchor with Screw		Anti-tip	Kit		Allen Wrench	

Assembly instructions

Step 1:


B2 == 10PCS

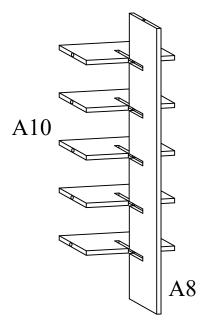

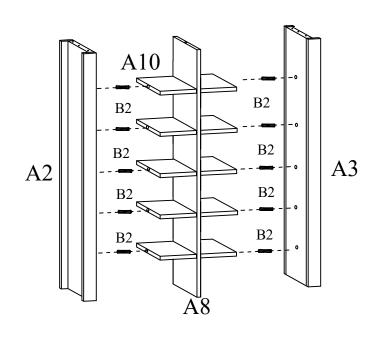


Attach Small Cross Panels A10 to Large Cross Panel A8, then assemble Lower Side Panels A2&A3 to Small Cross Panels A10 using Wood Dowels B2 as shown above.


Step 2:

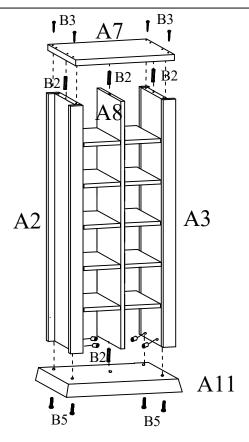

Assemble Middle Shelf A7 and Bottom Panel A11 to Large Cross Panel A8 and Lower Side Panels A2&A3 using Wood Dowels B2, Screws B3 and Bolts with Nuts B5 as shown above.

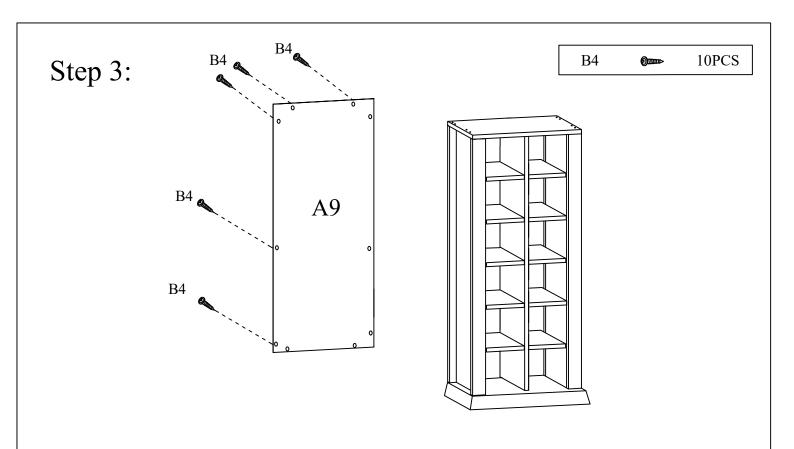

Attach Back Panel A9 to the back of this wine rack using Screws B4.

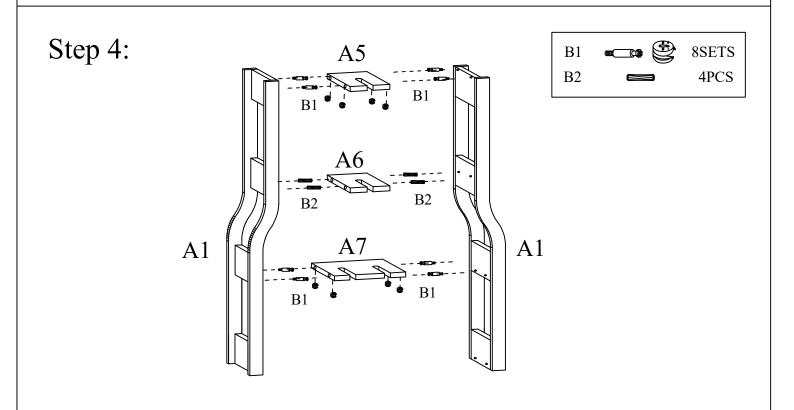


Assemble Upper Side Panels A1 to Support shelves A5&A6&A7 using Cam-Locks B1 and Wood Dowels B2 as shown above.

Page 6 of 8

Step 5:




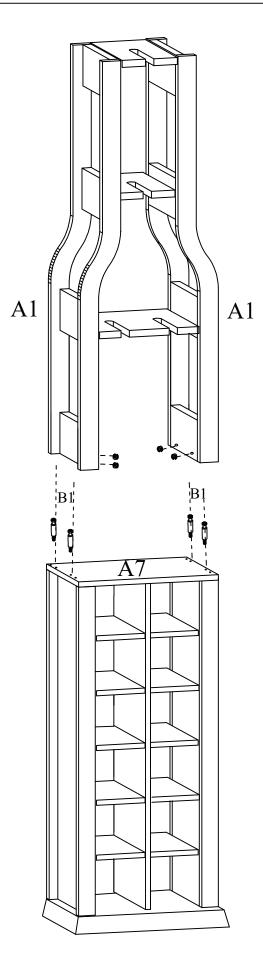

Assemble Upper Side Panels A1 to Middle Shelf A7 using Cam-Locks B1 as shown above.





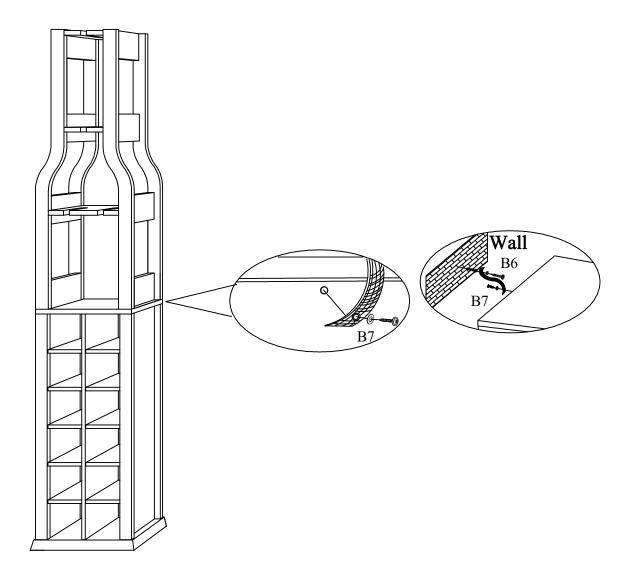

For your safety, please attach this unit to the wall by Anti-tip kit B7 and Wall Anchor with Screw B6.