

ASSEMBLY INSTRUCTIONS

**MODEL : 0286A
DRESSER & MIRROR**

(Box 1)
BOX OF MIRROR

NO	ITEM	QTY
A	MIRROR	1 pc
B	MIRROR SUPPORT RAIL	2 pcs


(Box 2)
BOX OF DRESSER

NO	ITEM	QTY
C	DRESSER	1 pc


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	JCBC M6 x 35mm	4 pcs
2	JCBC M6 x 40mm	4 pcs
3	Spring Washer 1/4" Rbw	8 pcs
4	Flat Washer 1/4" ID x 19mm OD Blk	8 pcs
5	ALLEN KEY m4x65mm Blk	1pc

STEP 1 : Take out mirror support (B) from the carton box .

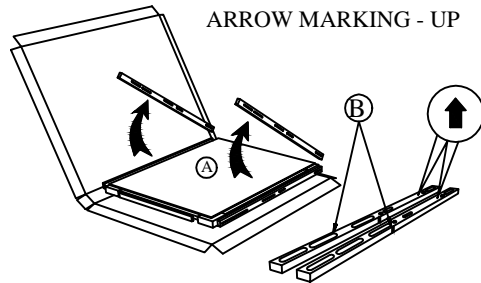

STEP 3 : Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2) , spring washer (3) & flat washer (4) THENFULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (5).

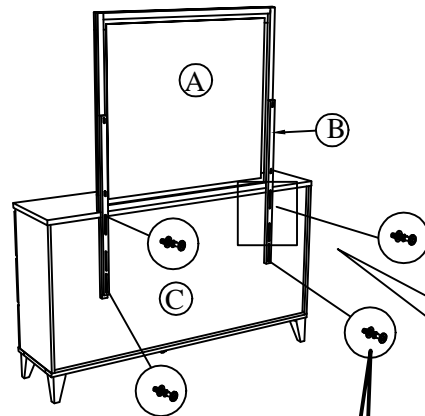


WARNING!
USE LONG BOLT M6 x 40mm




STEP 2 : Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). DO NOT FULLY TIGHTEN AT THIS STEP.

Note : Make sure arrow marking of the mirror support (C) is aligned up.

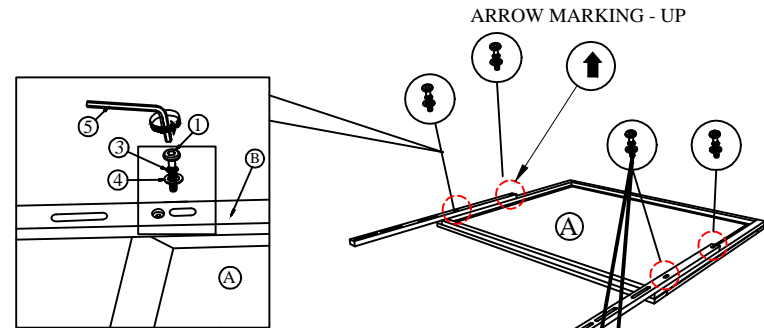

**BACK VIEW

WARNING!
USE LONG BOLT M6 x 35mm

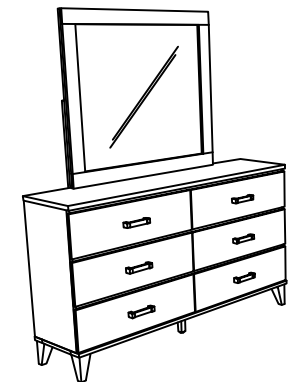

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.