















# ASSEMBLY INSTRUCTIONS

**MODEL : 0407A**  
**QUEEN(4+4)**

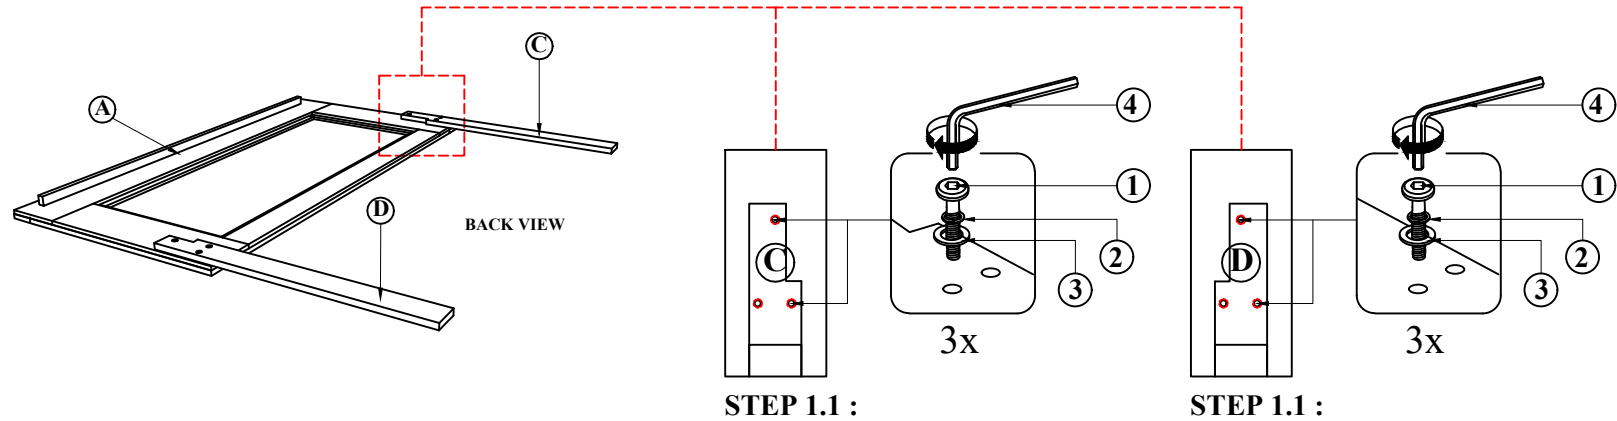
**(Box 1)**  
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard 	1 pc
B	Footboard 	1 pc
C	Headboard Leg L 	1 pc
D	Headboard Leg R 	1 pc
E	Bed Slat 	4 pcs
F	Bed Slat Support 	4 pcs
G	Side Rails 	2 pcs

**(Box 1)**  
HARDWARE LIST

No	ITEM	Qty
1	JCBC M6 x 30mm 	6 pcs
2	SPRING WASHER 1/4" Rbw 	6 pcs
3	Flat Washer 1/4"ID x 13mmOD Blk 	6 pcs
4	ALLEN KEY m4x65mm Blk 	1 pc
5	ALLEN KEY m5x65mm Blk 	1 pc
6	Flat Head Chipboard Screw m4x32mm Rbw 	8 pcs
7	12V+12W+1A Adaptor x 1 With ETL Certificate (US) 	1 pc

**STEP 1.1** Attach Head Board Leg ( C ) and (D)L to Head Board ( A ) as shown. using JCBC BOLT( 1 )with Spring Washer (2), Flat washer (3)and securing with ALLEN KEY ( 4 ).



**STEP 2 :** Loosen the JCBC Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (5). Attach Side Rail (G) to Headboard (A) and Footboard (B) , and push the bracket firmly into place as shown.

