


ASSEMBLY INSTRUCTIONS





















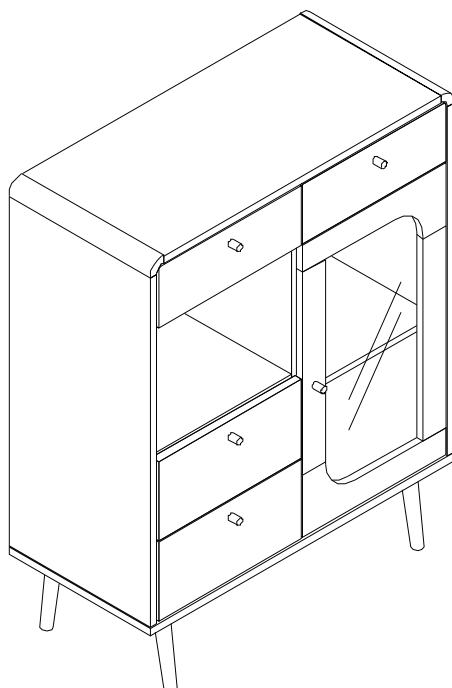




MODEL #C1195: CONSOLE










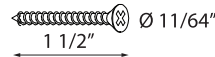
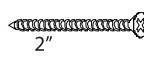
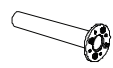
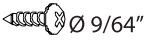


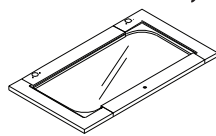


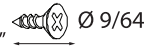


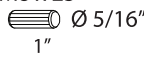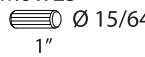




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS IDENTIFICATION

P1 Quantity: 1  Side Panel-Left	P2 Quantity: 1  Side Panel- Right	P3 Quantity: 1  Center Panel	P4 Quantity: 1  Stretcher Panel- Left	P5 Quantity: 1  Stretcher Panel- Right
P6 Quantity: 2  Nailer(Upper Back) Panel	P7 Quantity: 1  Leg Support	P8 Quantity: 1  Fixed Shelf	P9 Quantity: 1  Base Panel	P10 Quantity: 2  Back Panel
P11 Quantity: 1  Adjustable Shelf	P12 Quantity: 2  Corner Connector	P13 Quantity: 1  Top Panel	P14 Quantity: 1  Upper Drawer Front-Left	P15 Quantity: 1  Upper Drawer Front-Right
P16 Quantity: 2  Lower Drawer Front	P17 Quantity: 2  Upper Drawer Side-Left	P18 Quantity: 2  Upper Drawer Side-Right	P19 Quantity: 2  Upper Drawer -Back	P20 Quantity: 4  Drawer Support Panel
P21 Quantity: 4  Drawer Base Panel	P22 Quantity: 2  Lower Drawer Side-Left	P23 Quantity: 2  Lower Drawer Side-Right	P24 Quantity: 2  Lower Drawer -Back	P25 Quantity: 1  Door with Glass

HARDWARE LIST

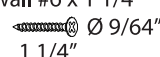
H1 Wooden Dowel M8 x 25  1" Quantity: 16 pcs	H2 Wooden Dowel M6 x 25  1" Quantity: 30 pcs	H3 Connecting Bolts  Quantity: 27 pcs	H4 Cam Lock 15 x 12.5mm  Quantity: 12 pcs	H5 Drawer Slide  Quantity: 4 sets
H6 Screw m4 x 12 for Slides  15/32" Ø 5/32" Quantity: 48 pcs	H7 Screw m5.1 x 38 for leg support  1 31/64" Ø 13/64" Quantity: 2 pcs	H8 Screw #9 X 1 1/2"  1 1/2" Ø 11/64" Quantity: 28 pcs	H9 Screw #9 X 2"  2" Ø 11/64" Quantity: 6 pcs	H10 Plastic Leg  Quantity: 4 pcs
H11 Screw for Legs M3.5 x 16 pan head  5/8" Ø 9/64" Quantity: 17 pcs	H12 Plastic Nail Leg Stud  Quantity: 1 pc	H13 Cam Lock 12 x 9.5mm  Quantity: 15 pcs	H14 Door/Drawer Pull  Quantity: 5 pcs	H15 Screw m4 x 22 for door pull  55/64" Ø 5/32" Quantity: 5 pcs
H16 Hinges  Quantity: 2 pcs	H17 Screw for hinges M3.5 x 14  35/64" Ø 9/64" Quantity: 8 pcs	H18 Wedge for Back  Quantity: 8 pcs	H19 Screw for wedges M3 x 20  25/32" Ø 1/8" Quantity: 8 pcs	H20 Shelf support pin  Quantity: 4 pcs
H21 Colored Sticker  Quantity: 2 pcs	H22 Anti-tip web strip  Quantity: 1 pc	H23 Wall plug for Screw  Quantity: 1 pc	H24 Screw for mount to wall #6 x 1 1/4"  1 1/4" Ø 9/64" Quantity: 1 pc	

Tools required:


MALLET




HOUSEHOLD SCREWDRIVER




STEP 1 Insert wooden dowels (H1) into the following parts,

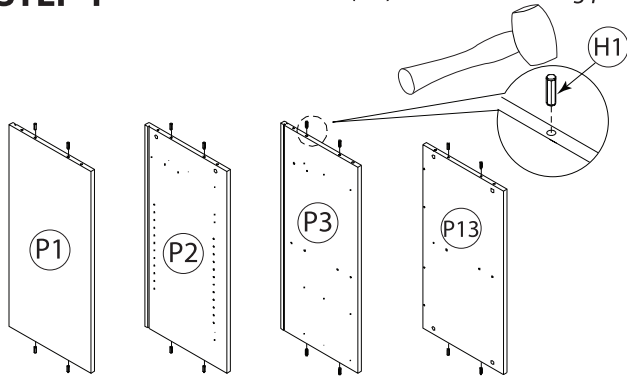


STEP 2 Insert wooden dowels (H2) into the following parts,

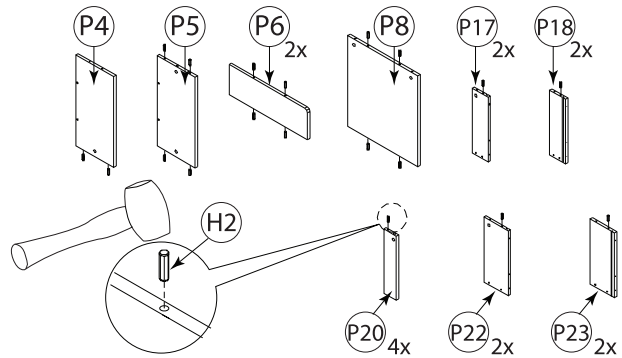


STEP 3 Align the Connecting Bolt (H3), use a household Philip Screwdriver to drive the bolt until it is snug.

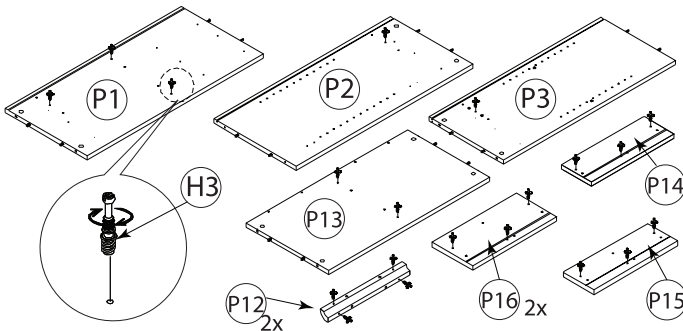


STEP 4 Install drawer slides.

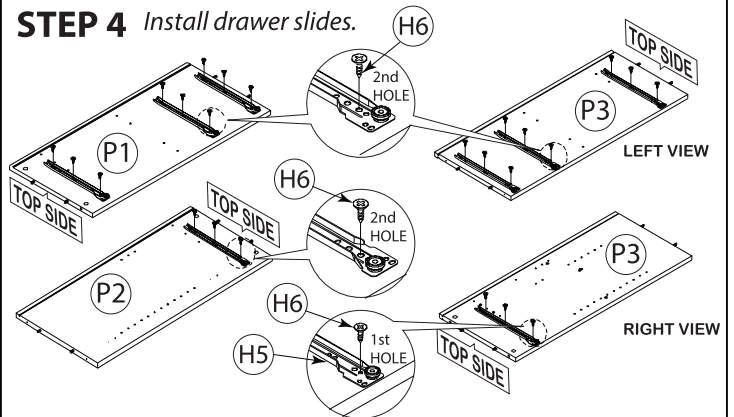

STEP 5 Install Leg Support (P7) to Base panel (P9).

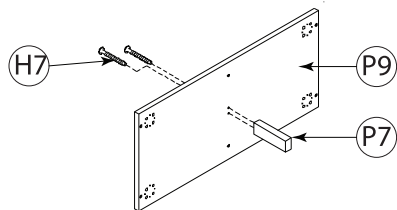


STEP 6

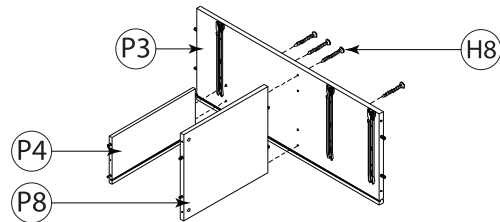


STEP 7

Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

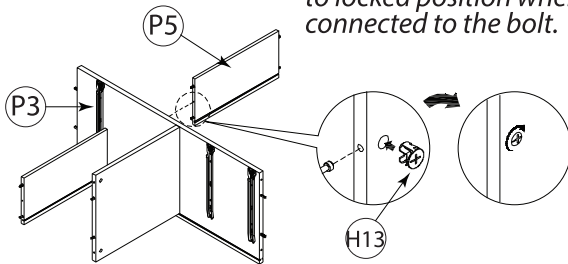


STEP 8


Align the Camlock (H13) & (H4), use a screwdriver to turn it to locked position when it is connected to the bolt.

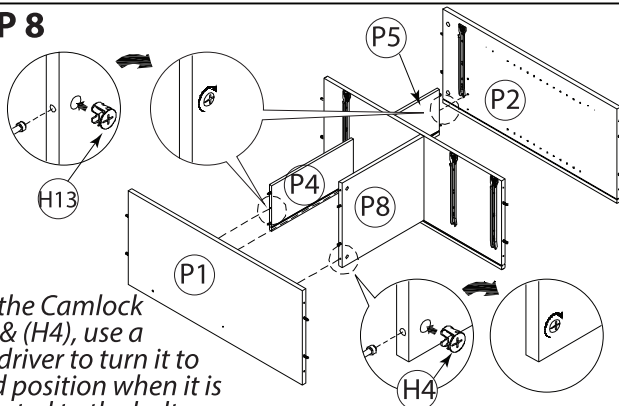

STEP 9

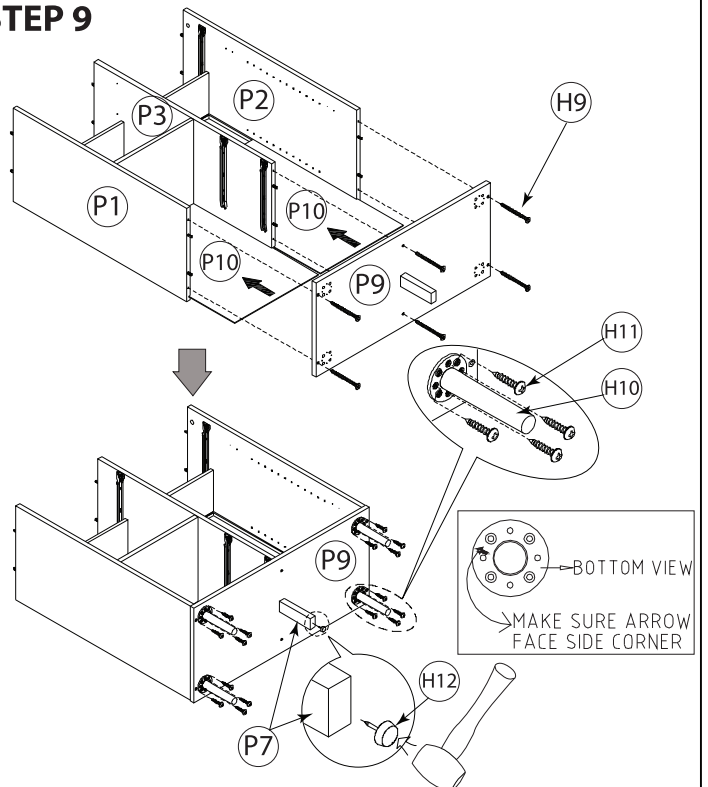


STEP 10

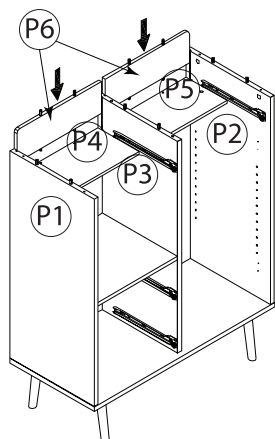


Slide in the upper Back panel (P6)

STEP 11

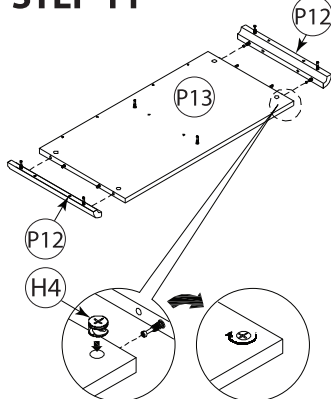

Align the Camlock (H4) & use a screwdriver to turn it to locked position when it is connected to the bolt.


STEP 12

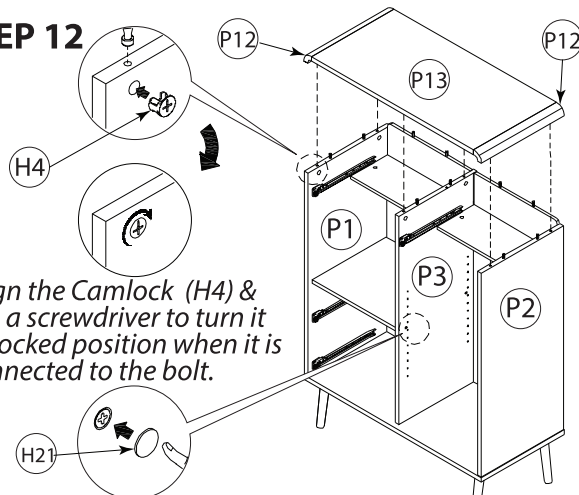


Align the Camlock (H4) & use a screwdriver to turn it to locked position when it is connected to the bolt.

Paste the provided sticker to cover the screw hole.

STEP 13

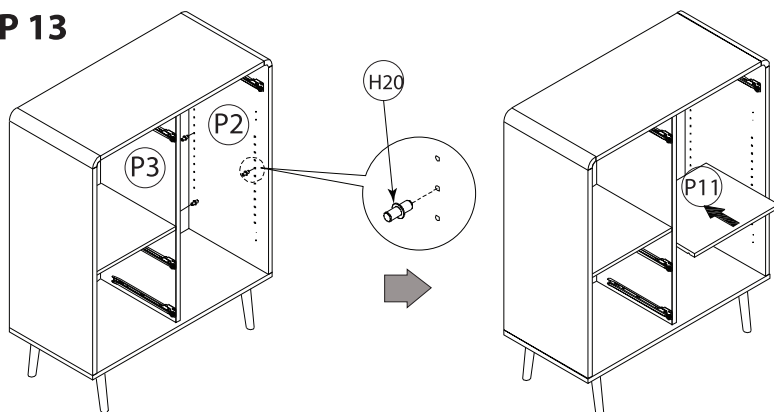


STEP 14

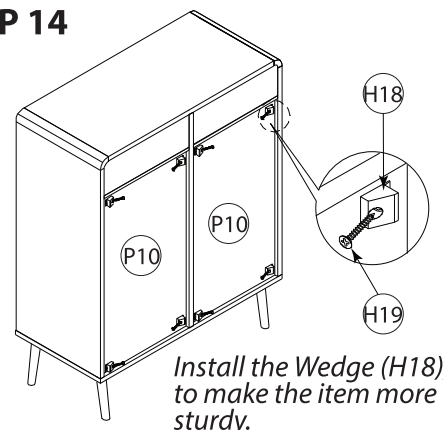

Install the Wedge (H18), to make the item more sturdy.


STEP 15 UPPER DRAWERS (1 LEFT & 1 RIGHT)

Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

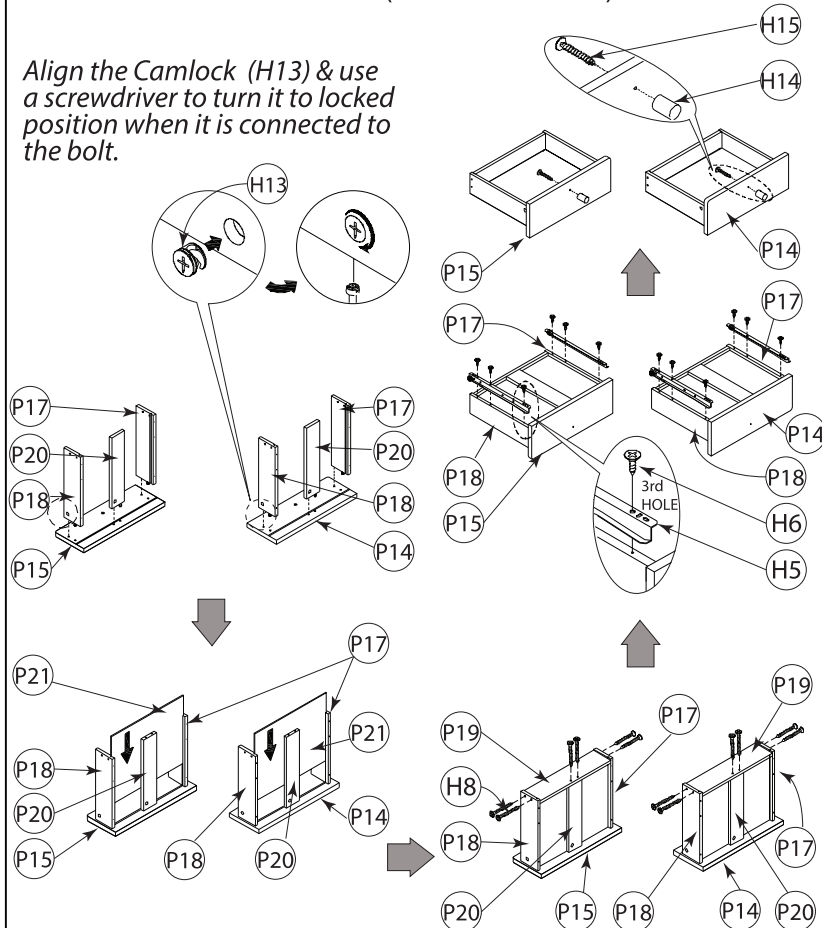


STEP 16 LOWER DRAWERS - 2 PIECES


Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

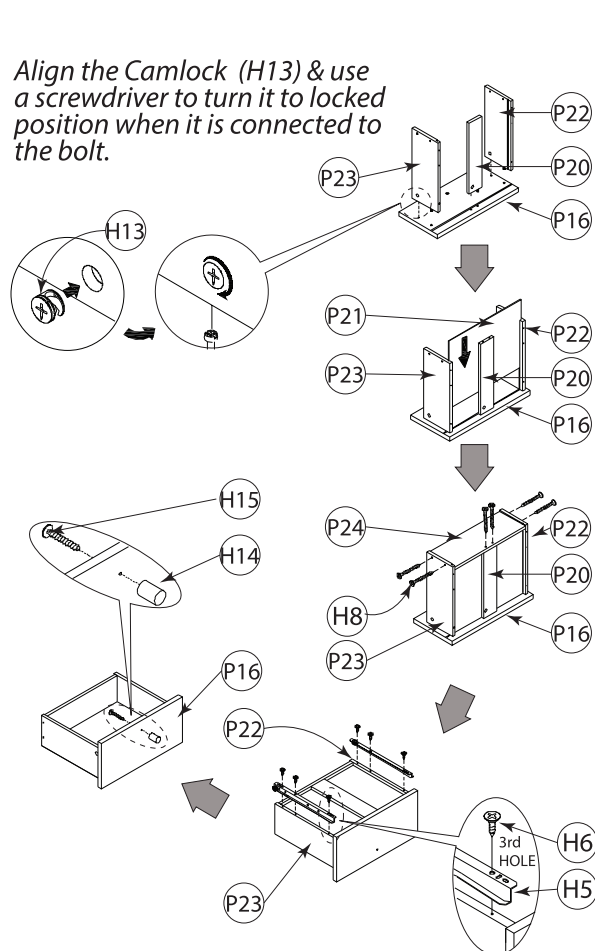


STEP 17 Put each drawer in its place.

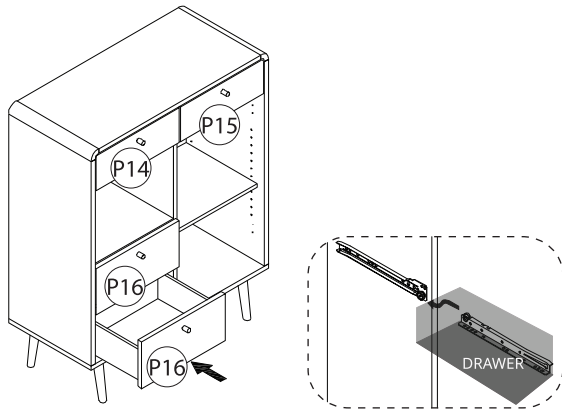


STEP 18 Install the fittings to the door.

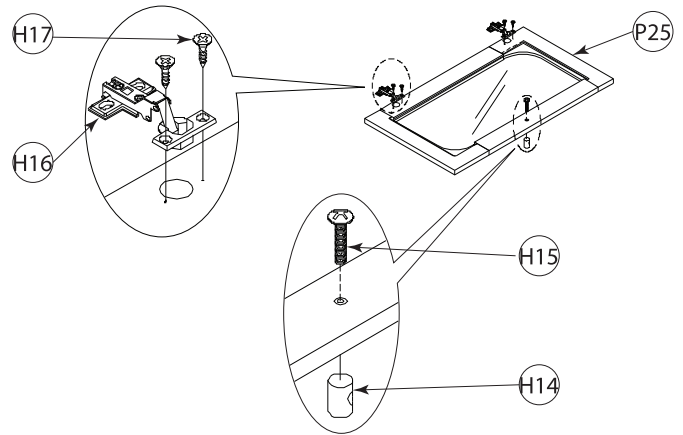


STEP 19 Install the door.

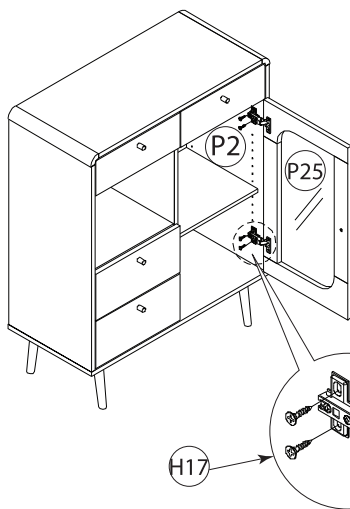


GUIDES TO PROPERLY INSTALL THE DOOR BY ADJUSTING THE HINGES

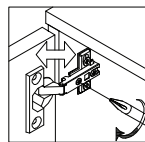

A-Lateral adjustment by adjusting the screws in hinges arm.

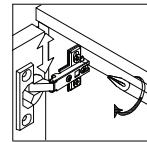


B-Vertical adjustment by adjusting the screws in hinges arm.

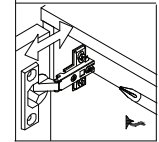

C-Front to back by adjusting the sliding hinges and tighten it.

STEP 20 Install the fittings to secure the unit from tipping over.

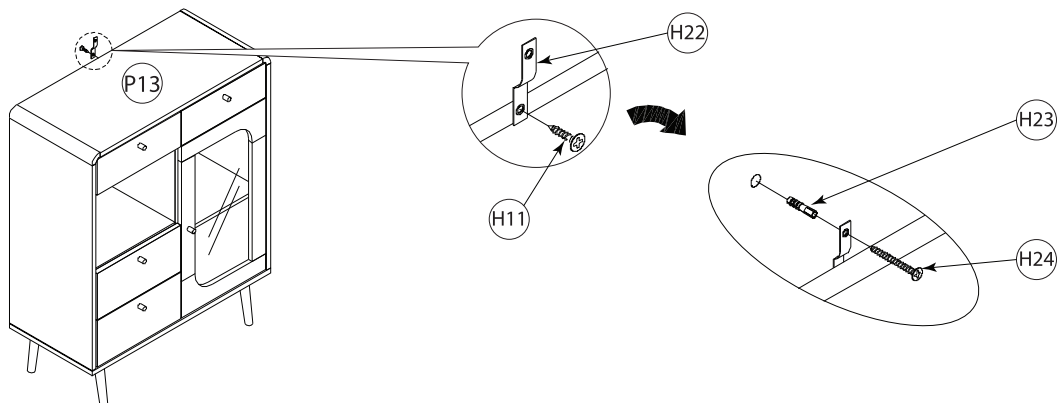

IMPORTANT!

**ANCHOR THE UNIT TO THE WALL TO AVOID TIPPING.
PLACE THE HEAVIEST ITEMS IN THE LOWEST SHELVES.
NEVER ALLOW CHILDREN TO STAND OR CLIMB ON THE UNIT.
THE USE OF TIP-OVER RESTRAINTS MAY ONLY REDUCE, BUT
NOT ELIMINATE THE RISK OF TIP-OVER.**