











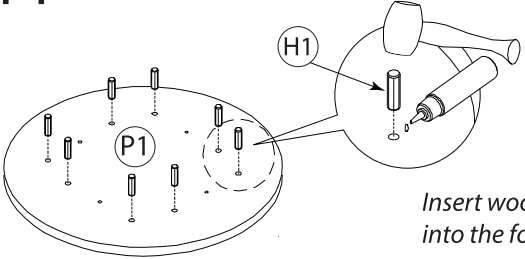
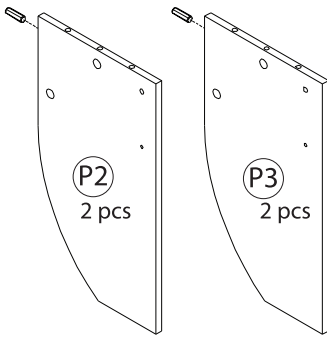
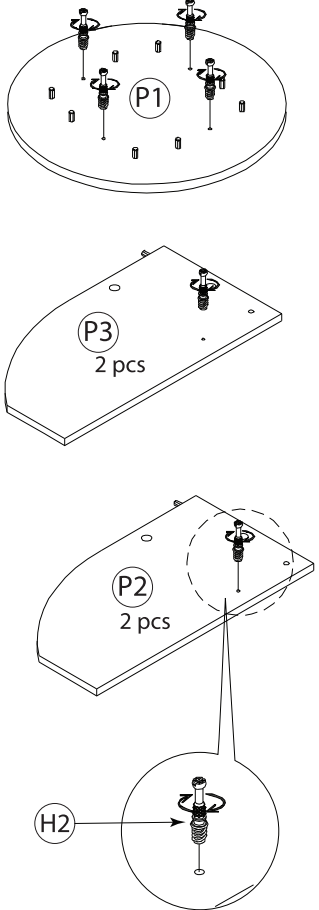
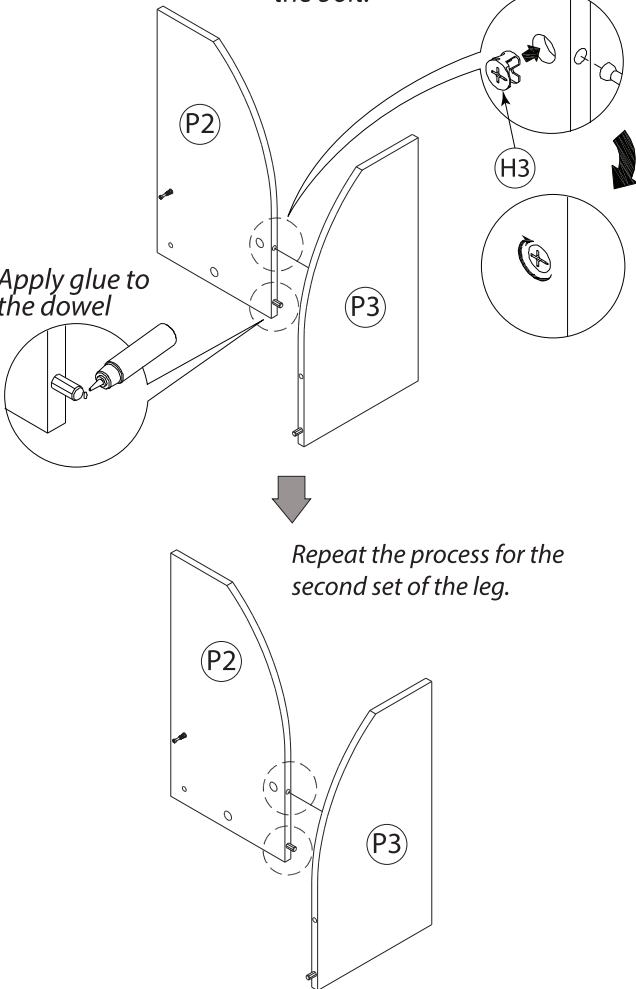
ASSEMBLY INSTRUCTIONS

MODEL #1334 E: END TABLE

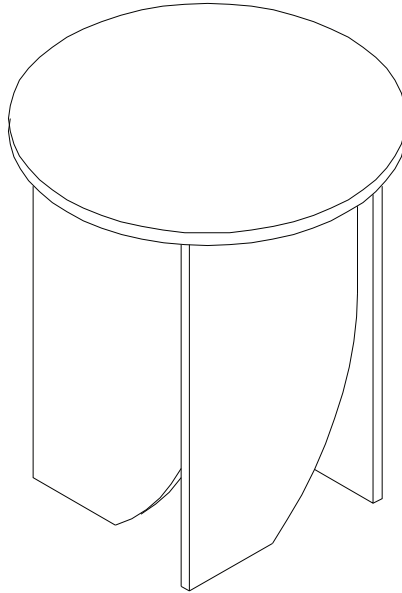


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS IDENTIFICATION			
<div>P1</div> <div>Quantity: 1</div> <div></div> <div>Top Panel</div>	<div>P2</div> <div>Quantity: 2</div> <div></div> <div>Leg Panel- Front</div>	<div>P3</div> <div>Quantity: 2</div> <div></div> <div>Leg Panel- Side</div>	<div>Tools required:</div> <div>MALLET</div> <div>HOUSEHOLD SCREWDRIVER</div> <div></div> <div></div>
HARDWARE LIST			
<div>H1</div> <div>Wooden Dowel M6 x 25</div> <div></div> <div>Ø 15/64"</div> <div>1"</div> <div>Quantity: 12 pcs</div>	<div>H2</div> <div>Connecting Bolts</div> <div></div> <div>Quantity: 8 pcs</div>	<div>H3</div> <div>Cam Lock 15 x 9.5mm</div> <div></div> <div>Quantity: 8 pcs</div>	<div>Glue</div> <div></div> <div>Quantity: 1 pc</div>
<div>STEP 1</div> <div></div> <div>Insert wooden dowels (H1) into the following parts,</div> <div></div>			
<div>STEP 2</div> <div>Install the connecting bolt (H2) to the following parts,</div> <div></div>		<div>STEP 3</div> <div>Align the Camlock (H3) & use a screwdriver to turn it to locked position when it is connected to the bolt.</div> <div></div> <div>Apply glue to the dowel</div> <div>Repeat the process for the second set of the leg.</div>	

STEP 4

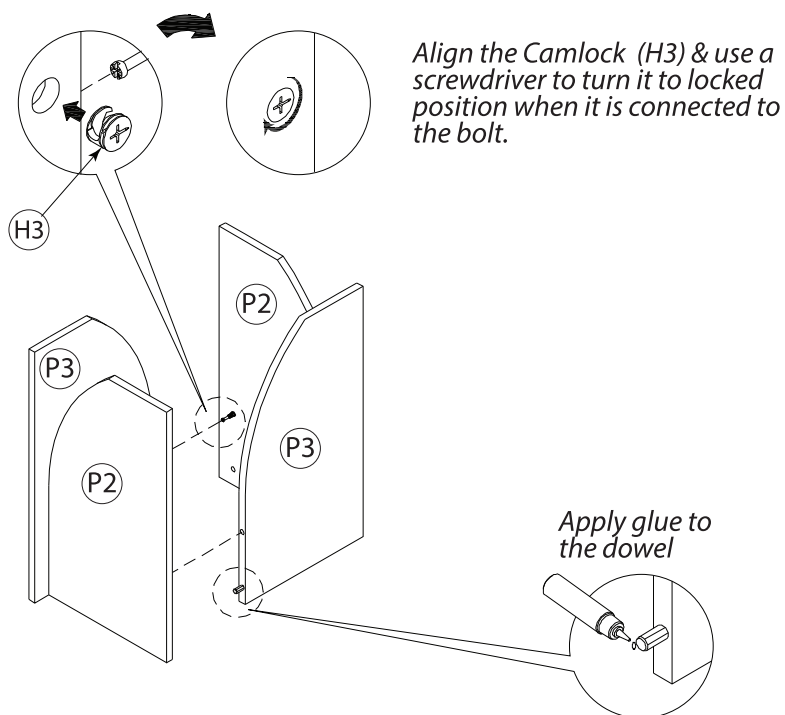

STEP 5

