


# ASSEMBLY INSTRUCTIONS



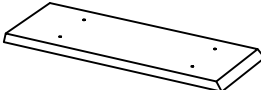
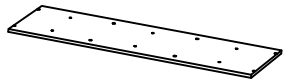
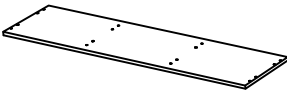

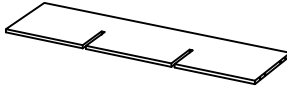

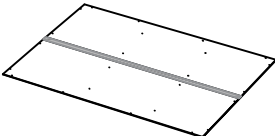
Style# BK128 Cabinet

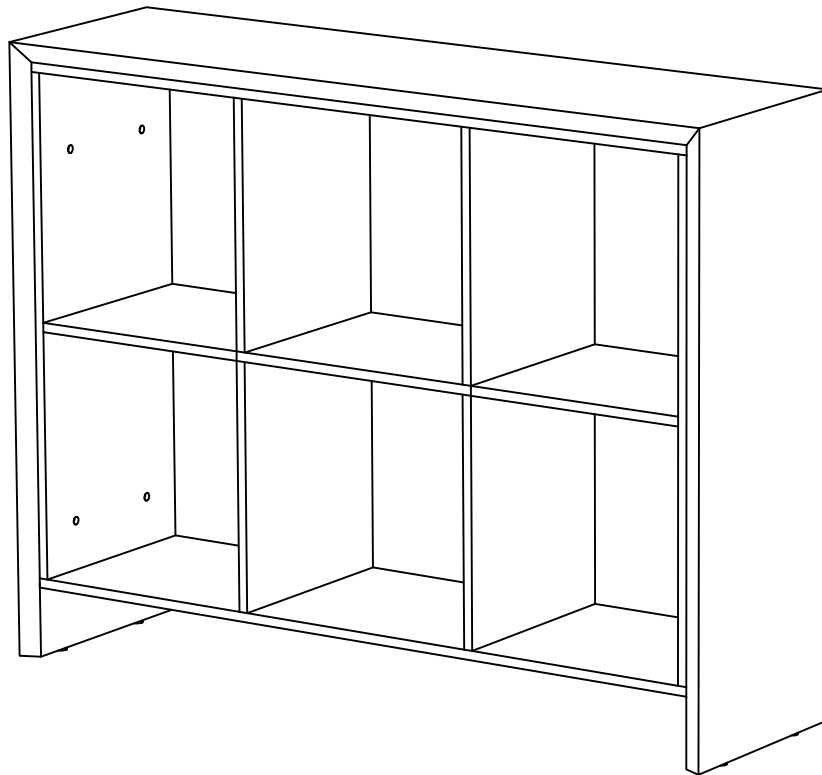

## NOTE TO CUSTOMERS:

- For ease and speed of assemble we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


# Part List
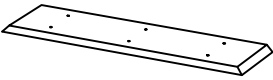
<p>A1. Qty:1</p>  <p>Top Panel</p>	<p>A2. Qty:1</p>  <p>Left Side Panel</p>	<p>A3. Qty:1</p>  <p>Right Side Panel</p>	<p>A4. Qty:1</p>  <p>Small Top Panel</p>
<p>A5. Qty:1</p>  <p>Bottom Panel</p>	<p>A6. Qty:2</p>  <p>Side Panel</p>	<p>A7. Qty:1</p>  <p>Cross Panel</p>	<p>A8. Qty:2</p>  <p>Center Divider</p>
<p>A9. Qty:1</p>  <p>Back Panel</p>			






## Note:

- Read these instructions carefully before assembling.
- Tool required: Philips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.




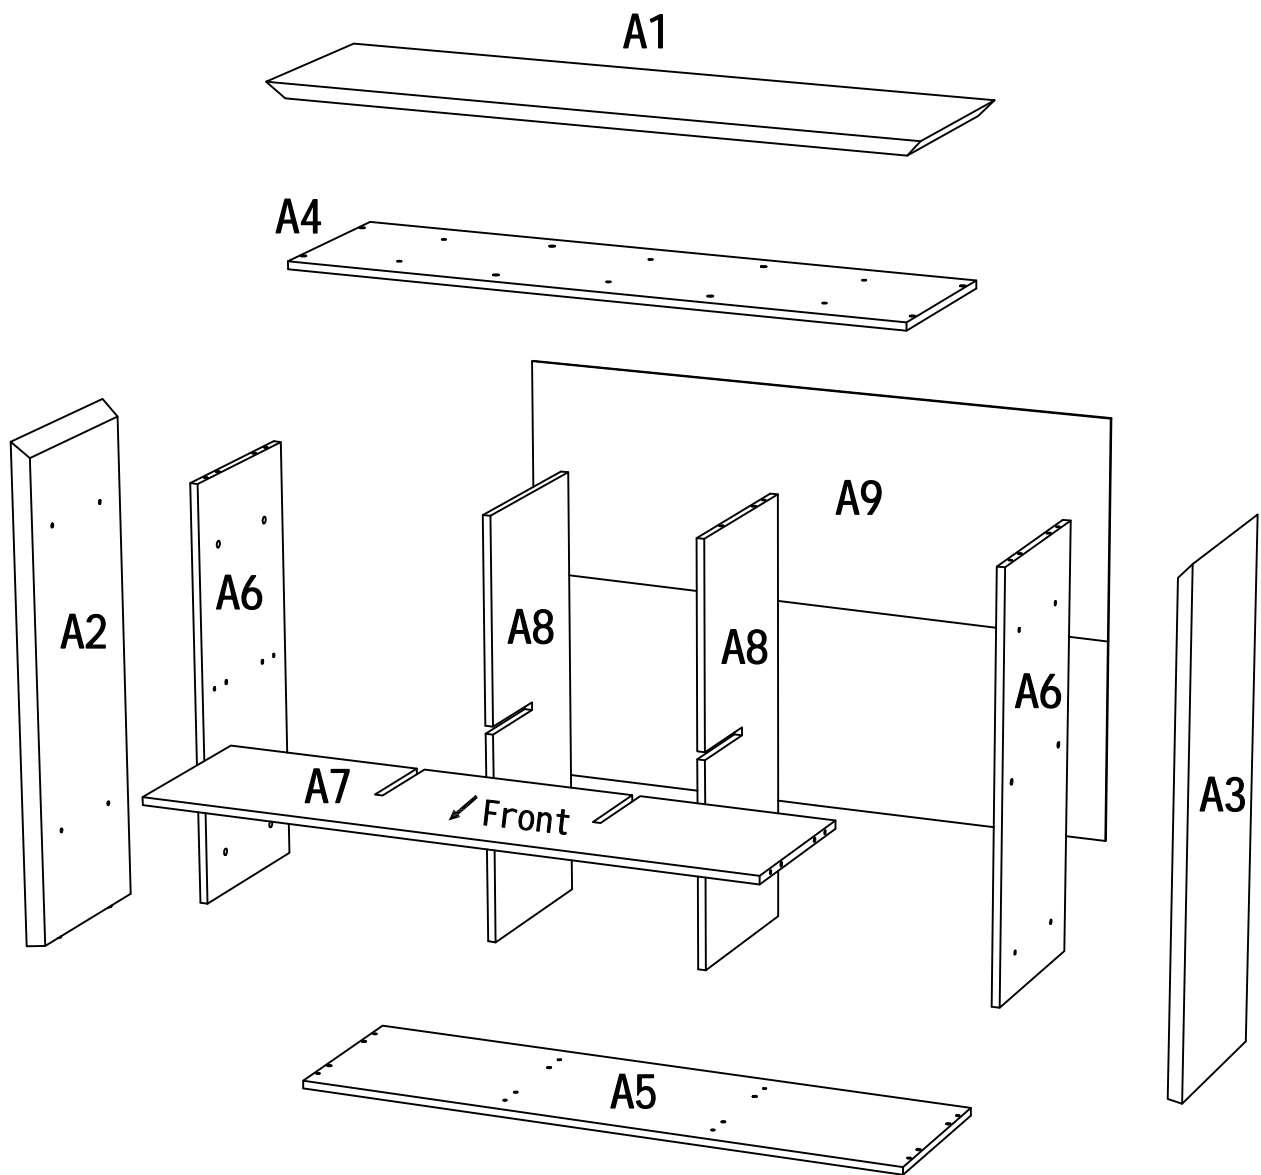
# Part List

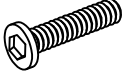

# Hardware List

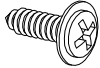
<p>B1. 14PCS</p>  <p>Bolt</p>	<p>B2. 20PCS</p>  <p>Wood Dowel</p>	<p>B3. 20PCS</p>  <p>Screw</p>	<p>B4. 20PCS</p>  <p>Screw</p>
			

## APPENDIX:Dimension of hardware in this AI.
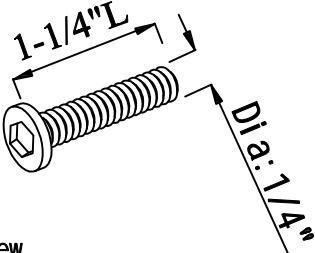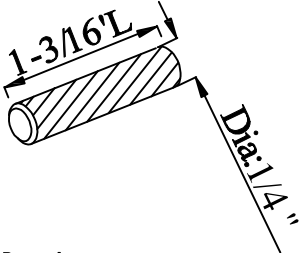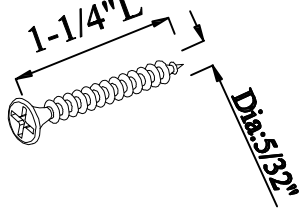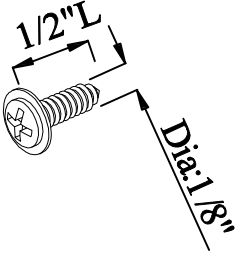
<p>B1.</p>  <p>Screw</p>	<p>B2.</p>  <p>Wood Dowel</p>	<p>B3.</p>  <p>Screw</p>
<p>B4.</p>  <p>Screw</p>		



## Step 1

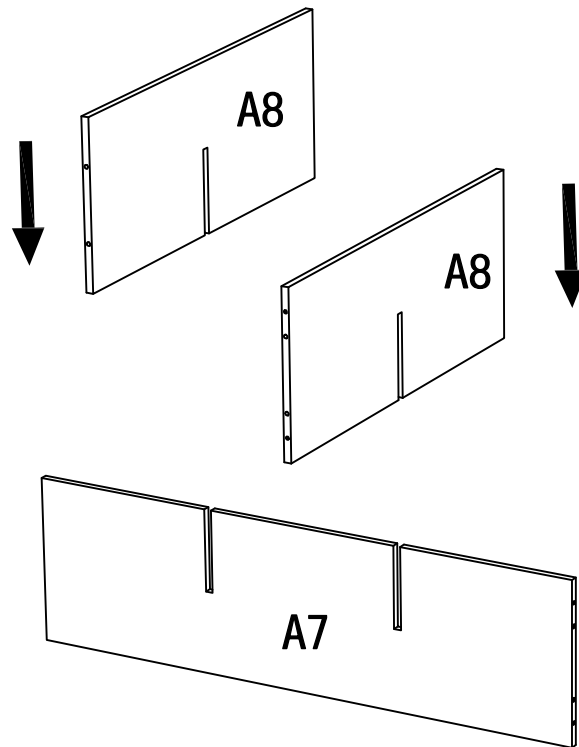
# Assembly Instructions



Insert Center Dividers A8 into Cross Panel A7 as shown above.


## Step 2

B2:		4PCS
B3:		4PCS

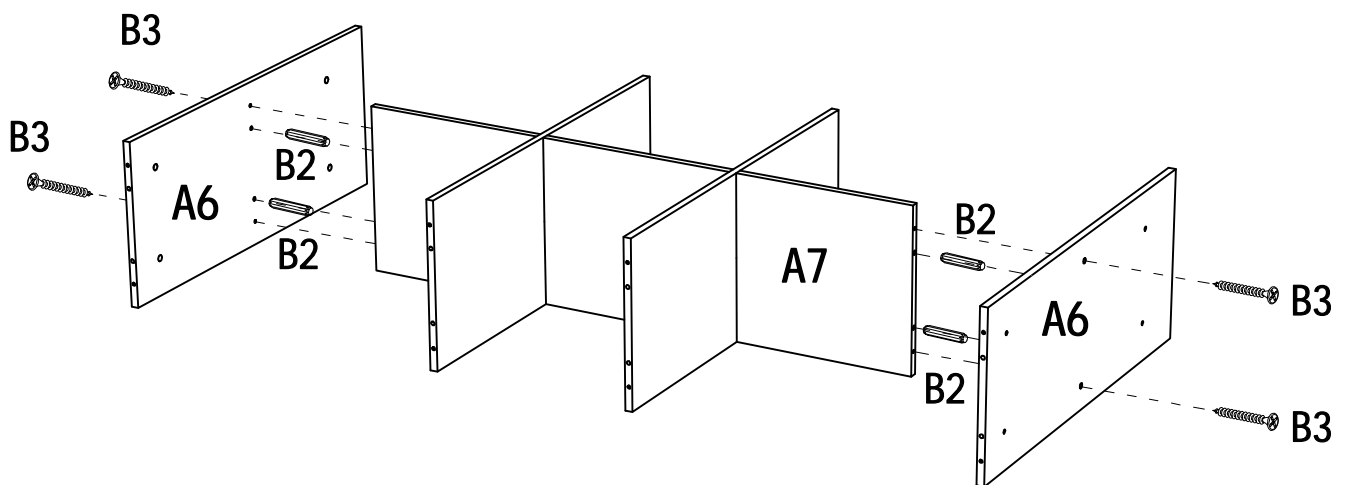


Assemble Side Panels 6 to Cross Panel A7 using Wood Dowels B2 & Screws B3 as shown above.

### Step 3

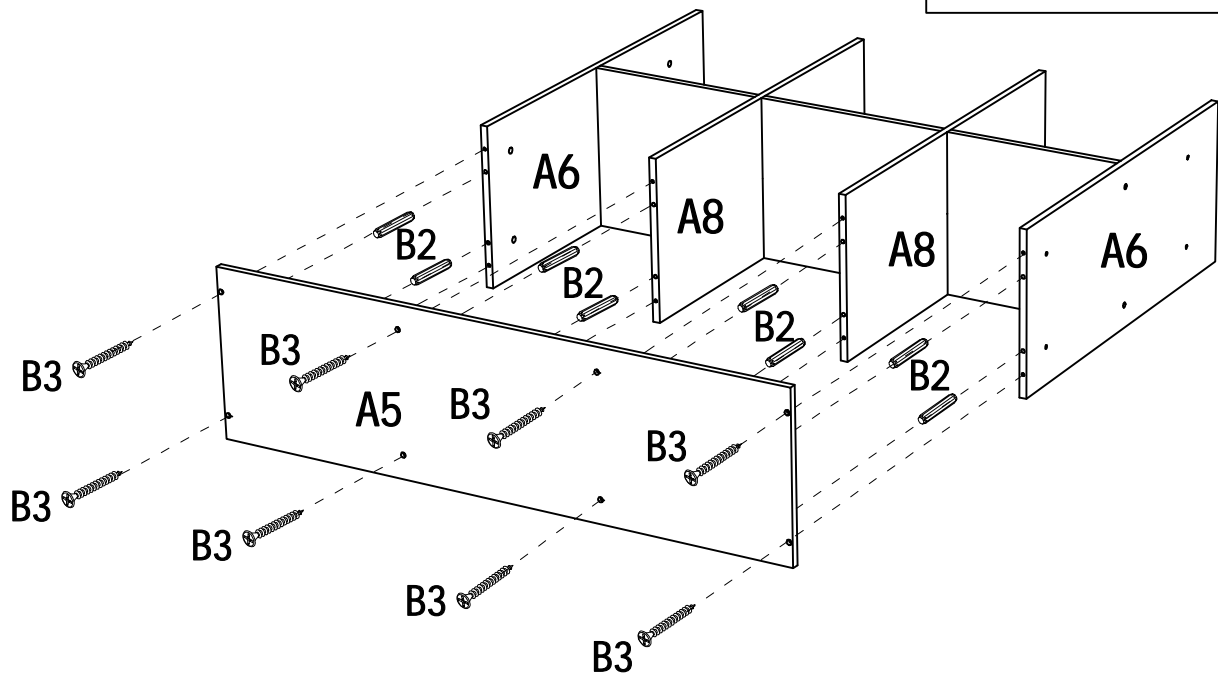


Assemble Side Panels 6 & Center Dividers A8 to Bottom Panel A5 using Wood Dowels B2 & Screws B3 as shown above.

### Step 4

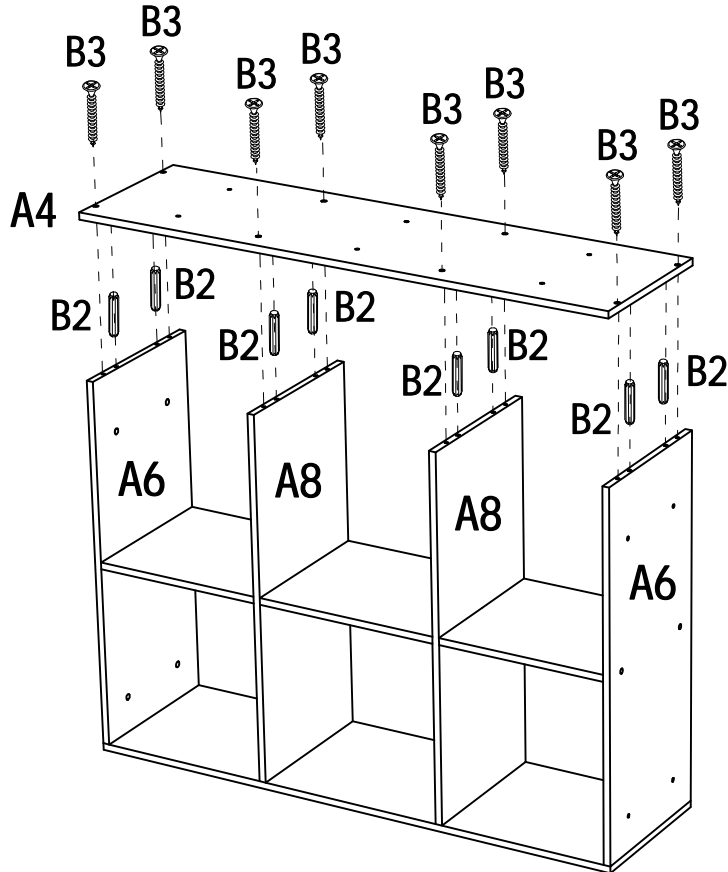


Assemble Small Top Panel A4 to Side Panels 6 & Center Dividers A8 using Wood Dowels B2 & Screws B3 as shown above.

## Step 5

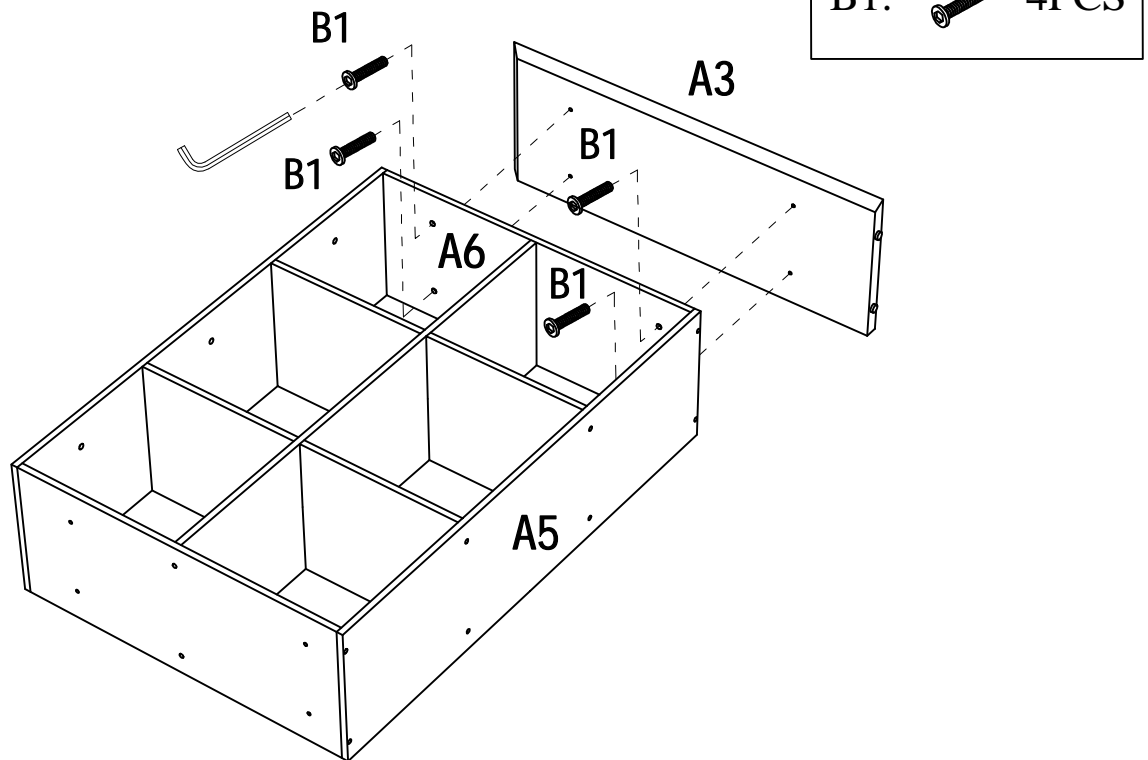


Assemble Right Side Panel A3 to Side Panel A6 using Bolts B1 as shown above.

## Step 6

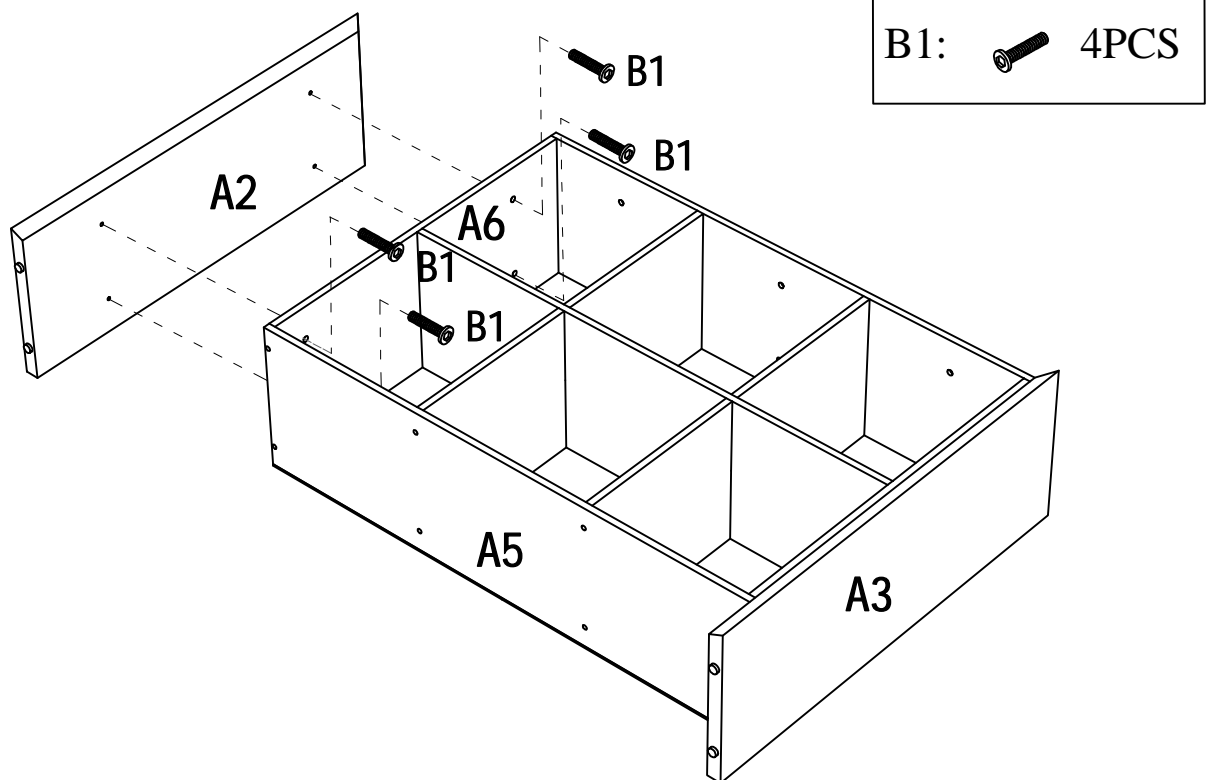


Assemble Left Side Panel A2 to Side Panel A6 using Bolts B1 as shown above.

## Step 7

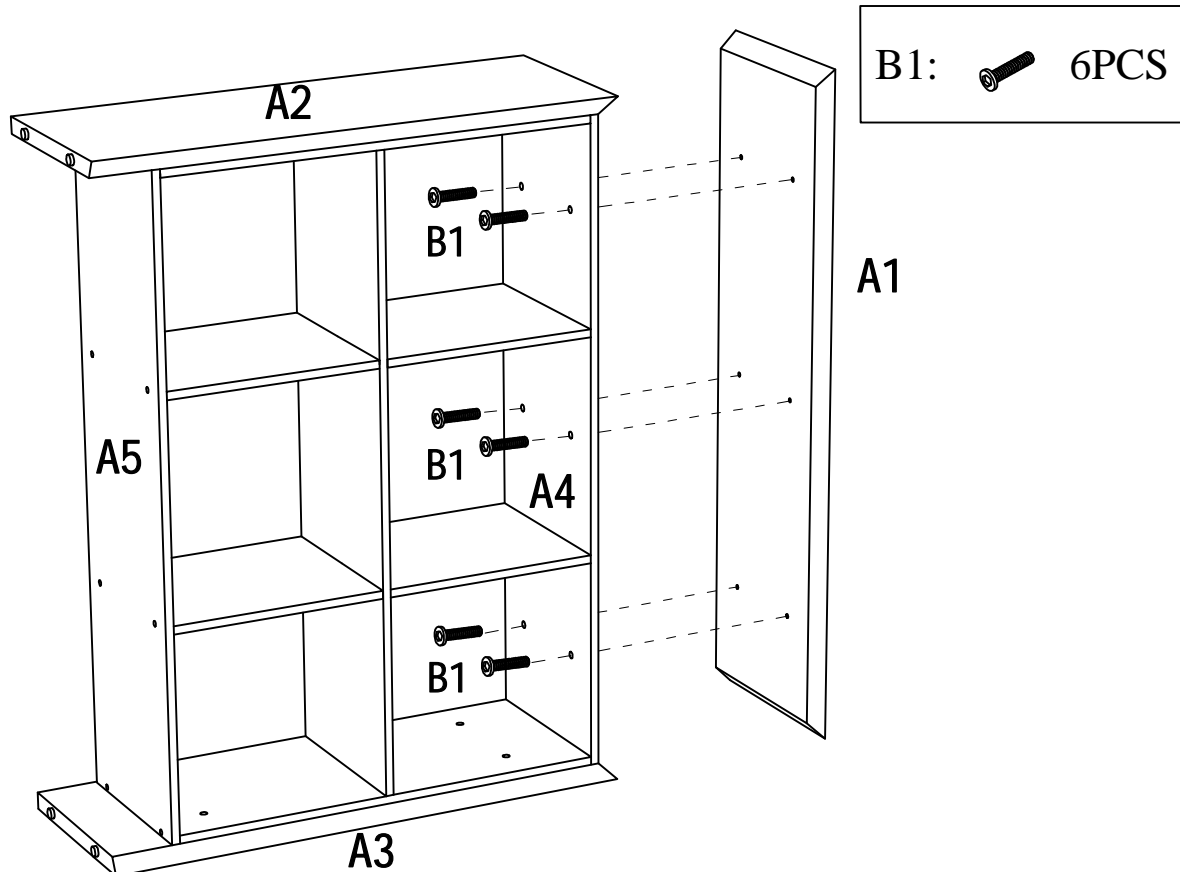

Assemble Top Panel A1 to Small Top Panel A4 using Bolts B1 as shown above.

## Step 8

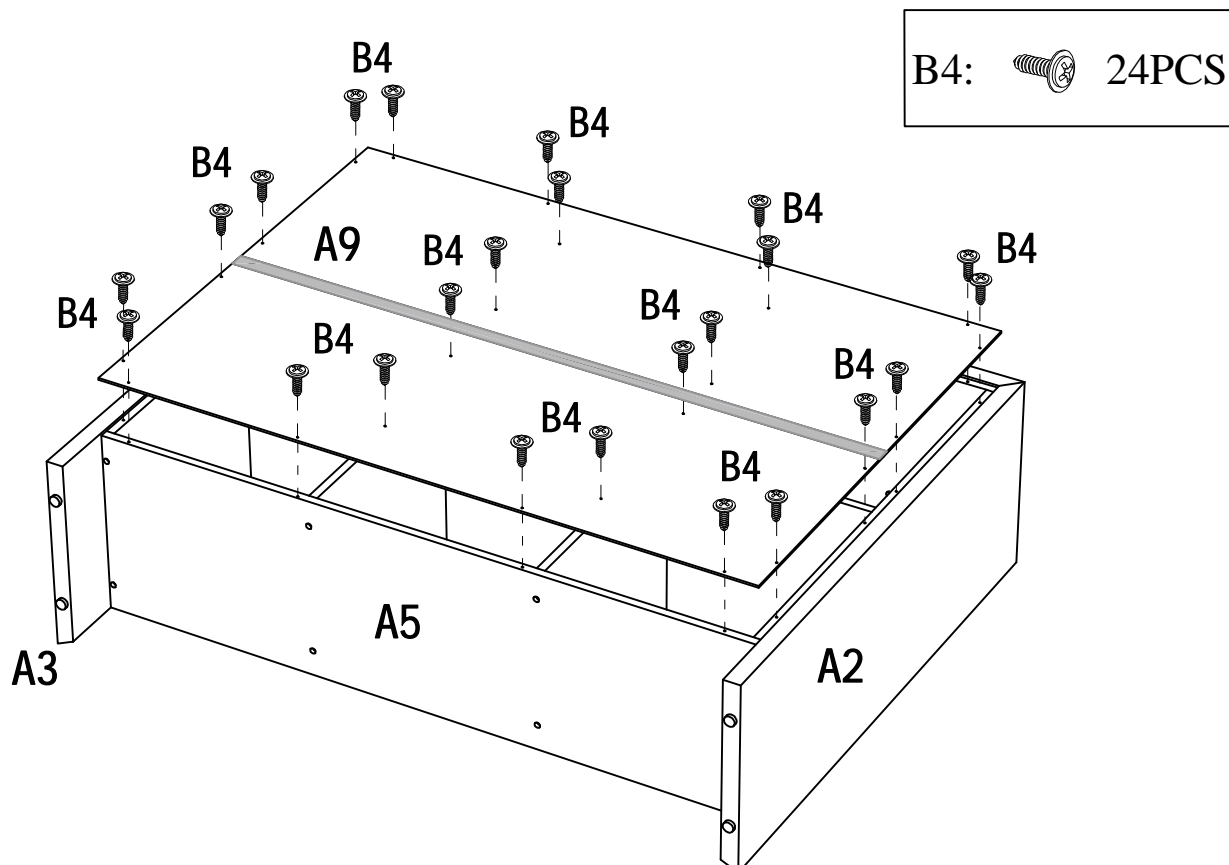

Assemble Back Panel A9 to the back of unit using Screws B4 as shown above.