ASSEMBLY INSTRUCTIONS

Style # V1036 Vanity Table With Mirror

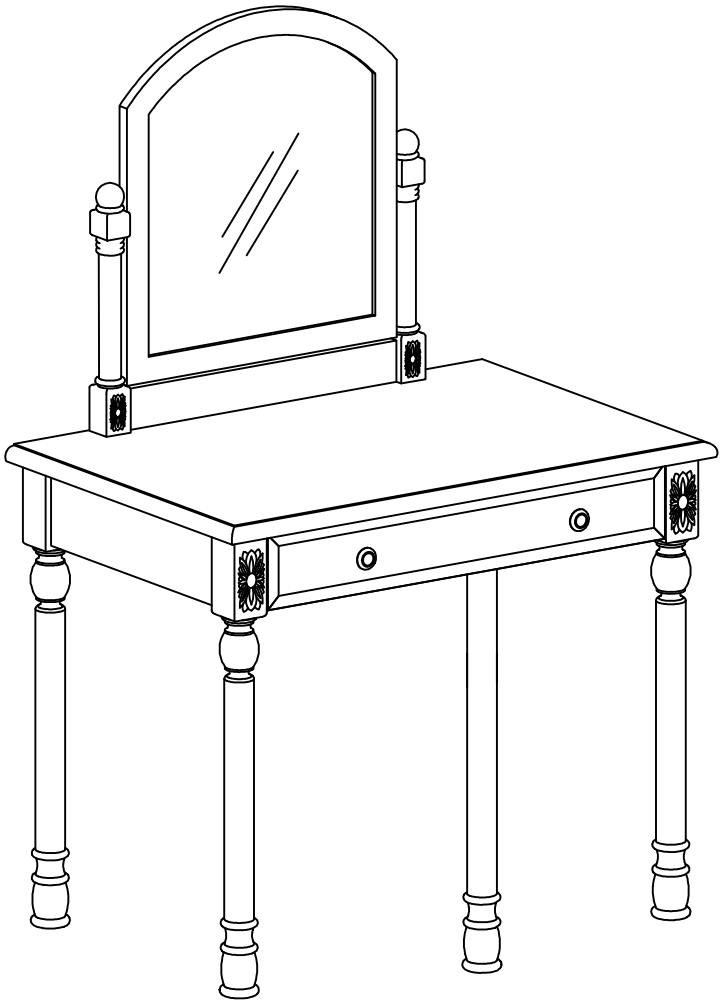

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten ,as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)

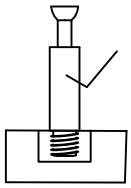

Diagram A

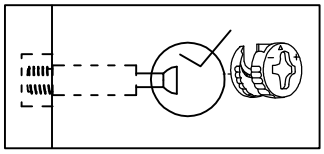

1. Insert cam screw into hole as shown in diagram A .

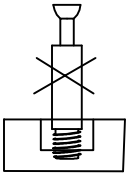

Diagram B

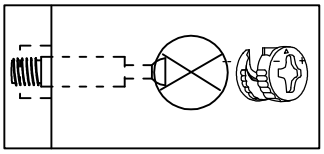

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.

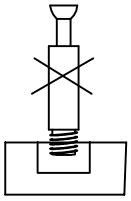

Diagram C

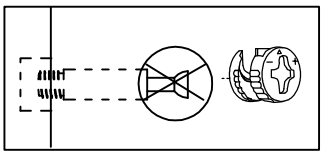

Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.

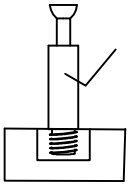

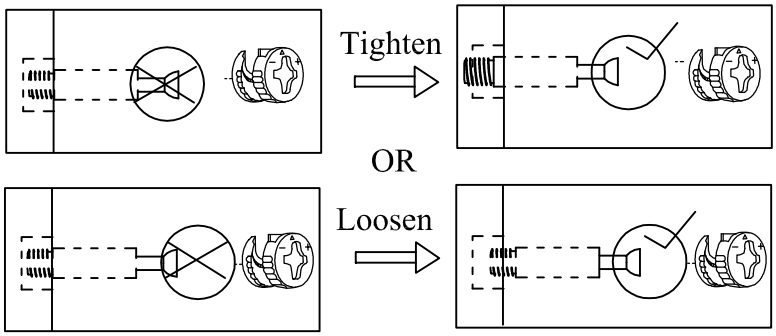

* If cam lock is not interlocking, adjust the cam screw by loosening or tightening it until it interlocks. (As shown in left diagram)

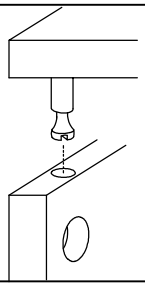

2. Connect the panels together.

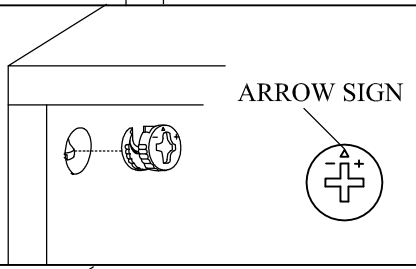

3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.

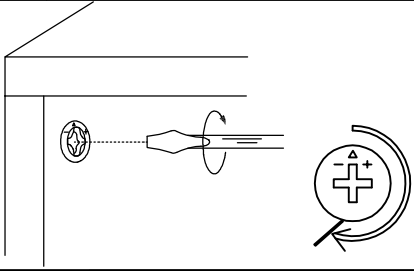

4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.

Part List

A1. Quantity of 4  Leg	A2. Quantity of 1 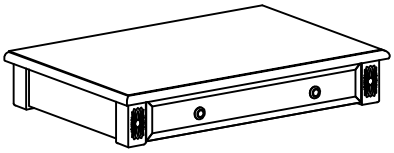 Top Panel	A3. Quantity of 1  Cross Bar
A4(L&R). Quantity of 2  Post Bar	A5. Quantity of 1 Mirror Panel	

Hardware List

B1 Quantity of 4 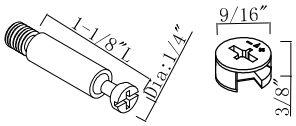 Camlock	B2 Quantity of 2 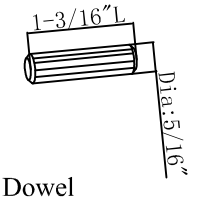 Wood Dowel	B3 Quantity of 2  Screw	B4 Quantity of 2 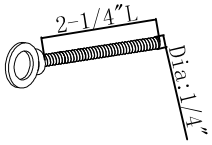 Bolt
B5 Quantity of 2 Flat Washer	B6 Quantity of 2  Handle with Bolt		

STEP-1

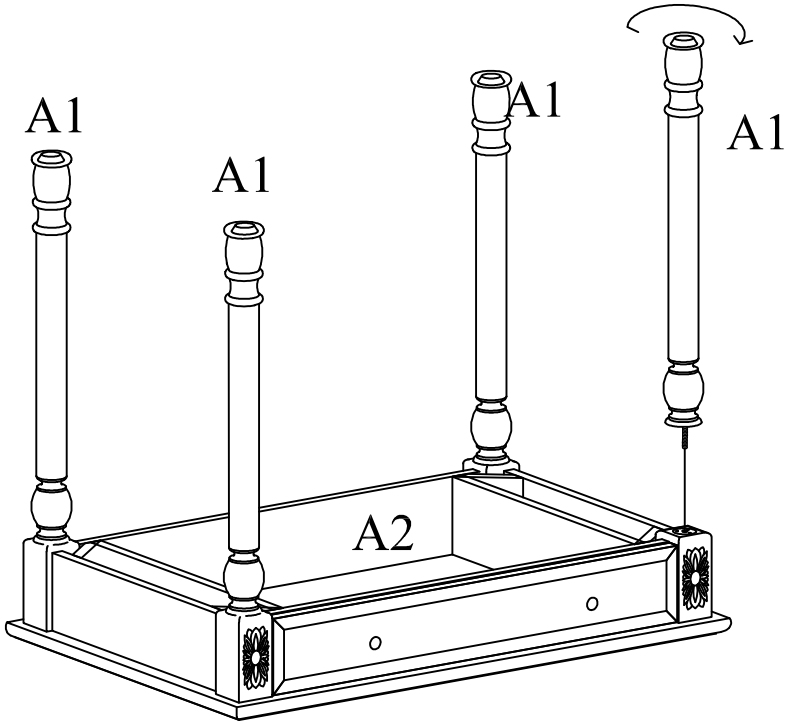

Assemble Legs A1 to Top Panel A2 as above drawing shown.

STEP-2

B1 4sets

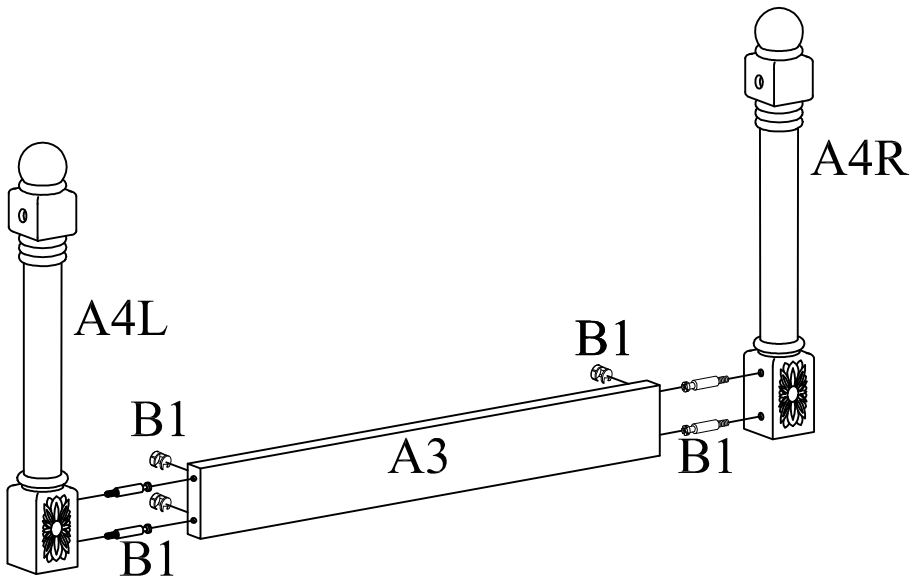

Assemble Cross Bar A3 to Post Bars A4(L&R) using Camlocks B1.

STEP-3

B2		2pcs
B3		2pcs

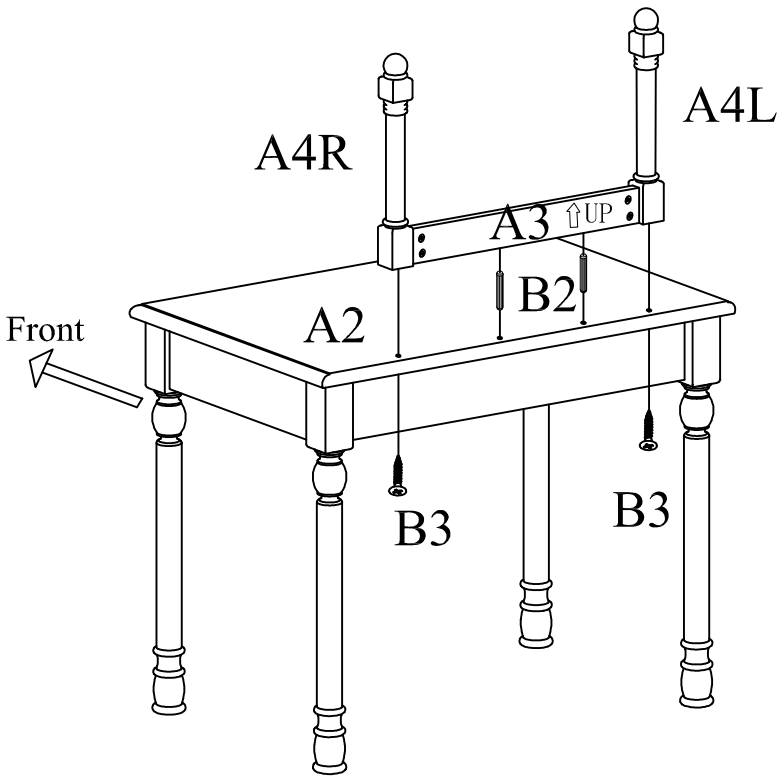

1. Attach Cross Bar A3 to Top Panel A2 using Wood Dowels B2.
2. Attach Post Bars A4(L&R) to Top Panel A2 using Screws B3.

STEP-4

B4		2pcs
B5		2pcs

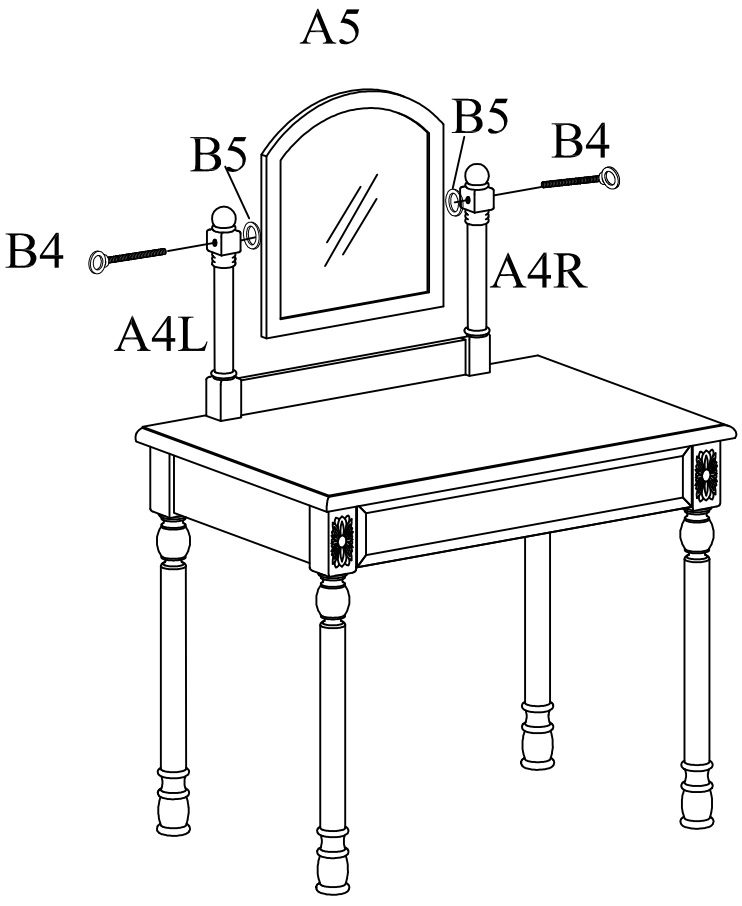

Attach Mirror Panel A5 to Post Bars A4(L&R) using Bolts B4 and Flat Washers B5.

STEP-5

B6 2sets

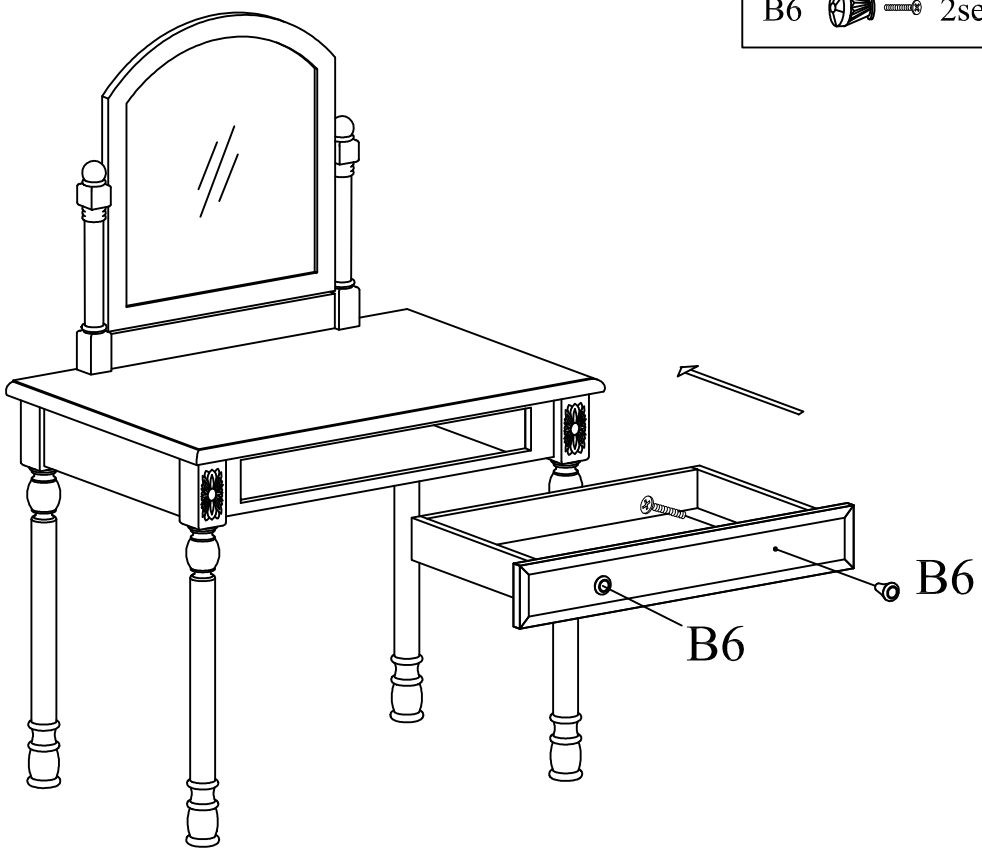

Attach Handles B6 to the front panel of drawer using included Bolts.